

SIEMENS



BACnet PTEC Controller

Constant Volume Cooling Only,
Application 6560

Application Note

Table of Contents

Overview	4
BACnet	5
Hardware Inputs	5
Hardware Outputs.....	6
Ordering Notes	6
Sequence of Operation	7
Control Temperature Setpoints	7
Occupied and Unoccupied Modes.....	7
Unoccupied Mode Override Switch	8
Control Loops	8
Calibration.....	8
AI 4/AI 5 OFFSET (Optional)	9
Room Unit Operation	9
Stat Supervision	9
Room CO2.....	10
Room RH.....	10
Fail Mode Operation	10
Application Notes	11
Wiring Diagrams	11
Application 6560 Point Database	13

NOTE:



The diagram illustrates the installation of the TEC6560 CDR1 system. It shows a horizontal duct with 'SUPPLY AIR' flowing from left to right. An 'AIR VELOCITY SENSOR' is installed in the duct, with a note specifying '3 TO 5 STRAIGHT DUCT DIAMETERS REQUIRED FOR PROPER SENSOR READING'. The duct continues through a 'SUPPLY AIR DAMPER' and then through a 'MODULATING DAMPER ACTUATOR'. The actuator is connected to a 'CONSTANT VOLUME CONTROLLER' (CVC) via a dashed line. The CVC has a terminal block with the following labels: 24 V-AC, FLN TRUNK, DO1, DO2, DO3, DO4, DO5, DO6, DO7, DO8, AI3/DI3, AI4/DI4, AI5/DI5, DI12, DI6, AO1, AO2, AO3, and RTS. An 'AUTOZERO MODULE (OPTIONAL)' is connected to the DO6 terminal. A 'WALL SWITCH (OPTIONAL)' is connected to the DO12 terminal. The CVC also has 'TUBING CONNECTIONS' labeled 'LO' and 'HI'. The entire system is labeled 'TEC6560CDR1' at the bottom left.

Application 6560 Control Diagram.

CONTROL SCHEDULE		
ROOM TEMPERATURE	-°F (-°C)	+°F (+°C)
OCCUPIED FLOW		
SUPPLY AIR		
UNOCCUPIED FLOW		

Application 6560 Control Schedule.

BACnet

The controller communicates using BACnet MS/TP protocol for open communications on BACnet MS/TP networks.

Product	Supported BIBBs	BIBB Name
BTEC/PTEC	DS-RP-B B	Data Sharing-Read Property-B
	DS-RPM-B	Data Sharing-Read Property Multiple-B
	DS-WP-B	Data Sharing-Write Property-B
	DM-DDB-B	Device Management-Dynamic Device Binding-B
	DM-DOB-B	Device Management-Dynamic Object Binding-B
	DM-DCC-B	Device Management-Device Communication Control-B
	DM-RD-B	Device Management-Reinitialize Device-B
	DM-BR-B	Device Management-Backup and Restore-B
	DM-OCD-B	Device Management-Object Creation and Deletion-B

Hardware Inputs

Analog

- Air velocity sensor
- Room temperature sensor

Application 6560 supports a room temperature sensor for monitoring purposes only.

Digital

- Night mode override (optional)
- Wall switch (optional)

Hardware Outputs

Analog

- Spare AO 1, AO 2, and AO 3 (0-10V)

Digital

- Autozero Module (optional)
- Damper actuator

Ordering Notes

550-498P Siemens BACnet PTEC Constant Volume Controller

Sequence of Operation

The following paragraphs present the sequence of operation for Application 6560 -- Constant Volume Cooling Only.

Control Temperature Setpoints

CTL STPT is Overridden:

If CTL STPT is overridden, that value is used regardless of any other settings.

CTL STPT in Night Mode:

The controller is in Night Mode if DAY.NGT = NGT and NGT OVRD = NGT.

When the controller is in night mode, CTL STPT holds the value of NGT CLG STPT.

When the controller is in night mode the value of RM STPT DIAL is ignored.

CTL STPT in Day Mode:

The controller is in Day Mode if DAY.NGT = DAY or NGT OVRD = DAY.

Without setpoint dial:

When the controller is in day mode and STPT DIAL = NO, CTL STPT holds the value of DAY CLG STPT.

With setpoint dial:

When the controller is in day mode and STPT DIAL = YES, CTL STPT is set based on the value of the setpoint dial, and is limited between RM STPT MIN and RM STPT MAX.

Occupied and Unoccupied Modes

The occupied/unoccupied status of the space is determined by the status of OCC.UNOCC. The control of this point differs depending on whether the controller is monitoring the status of a wall switch or if the controller is connected to a field panel.

When a wall switch is physically connected to the termination strip on the controller at DI 2 and WALL SWITCH = YES, the controller monitors the status of DI 2. When the status of DI 2 is ON (the switch is closed), OCC.UNOCC will be set to OCC indicating that the controller is in occupied mode. When the status of DI 2 is OFF (the switch is open), OCC.UNOCC will be set to UNOCC indicating that the controller is in unoccupied mode.

When WALL SWITCH = NO, the controller does not monitor the status of the wall switch, even if one is connected to it. In this case, if the controller is operating stand-alone, the controller stays in occupied mode all the time. If the controller is operating with centralized control (connected to a field panel), the field panel can send an operator or PPCL command to override the status of OCC.UNOCC. See the APOGEE Powers Process Control Language (PPCL) User's Manual (125-1896) and the APOGEE P2 ALN Field Panel User's Manual (125-3019) or the APOGEE BACnet ALN Field Panel User's Manual (125-3020) (125-3019 or 125-3020) for more information.

Unoccupied Mode Override Switch

If an override switch is present on the room temperature sensor and a value (in hours) other than zero has been entered into OVRD TIME, then by pressing the override switch, a room occupant can reset the controller to occupied mode for the length of time set in OVRD TIME. The status of UNOCC OVRD changes to OCC and remains there until OVRD TIME elapses, at which point UNOCC OVRD changes back to UNOCC and the controller returns to unoccupied mode.



NOTE:

Only during unoccupied mode (MODE = Unoccupied) can a room sensor's override switch set the controller to occupied mode; if MODE equals anything other than Unoccupied, UNOCC OVRD will equal UNOCC.

Control Loops

Flow Loop – maintains the point FLOW STPT by modulating the supply air damper point, DMPR COMD. The flow loop maintains the airflow at either OCC FLOW or UNOCC FLOW depending on the value of OCC.UNOCC.

FLOW is the input value for the flow loop. It is calculated as a percentage based on where AIR VOLUME is between 0 cfm (LPS) and OCC FLOW. In the following text, this percentage is referred to as % flow.

- If AIR VOLUME equals 0 cfm (LPS), then FLOW is 0% flow.
- If AIR VOLUME equals OCC FLOW, then FLOW is 100% flow.

The FLOW STPT percentage that corresponds to UNOCC FLOW is calculated as:
 $(\text{UNOCC FLOW} \div \text{OCC FLOW}) \times 100\% \text{ flow}.$

Example

If UNOCC FLOW = 250 cfm, and if OCC FLOW = 1000 cfm

then, in unoccupied mode the FLOW STPT

$$\begin{aligned} &= (250 \text{ cfm} \div 1000 \text{ cfm}) \times 100\% \text{ flow} \\ &= 0.25 \times 100\% \text{ flow} \\ &= 25\% \text{ flow} \end{aligned}$$

Since 25% of 1000 cfm equals 250 cfm, the flow setpoint in unoccupied mode will be 25%.

UNOCC FLOW can be set less than or equal to, but not greater than OCC FLOW.

Calibration

Calibration of the controller's internal air velocity sensor(s) is periodically required to maintain accurate air velocity readings. CAL SETUP is set with the desired calibration option during controller startup.

Depending on the value of CAL SETUP, calibration may be set to take place automatically or manually. If CAL AIR = YES, calibration is in progress.

- For a controller used without an Autozero Module (CAL MODULE, = NO), the damper is commanded closed to get a zero airflow reading during calibration.

- For a controller used with an Autozero Module (CAL MODULE = YES), calibration occurs without closing the damper.



NOTE:

The first time after startup or initialization, the controller will calibrate the dampers as if not using Autozero Modules, although the Autozero Modules will be activated. All subsequent calibrations will use the Autozero Modules only.

At the end of a calibration sequence, CAL AIR automatically returns to NO. A status of NO indicates that the controller is not in a calibration sequence.

The Autozero Modules are used during calibration when they are wired to DO 7 and DO 8 and CAL MODULE = YES.

Floating Control Actuation Auto-correct

In addition to the existing options for floating control actuator full stroke actions, all floating control actuators are provided with additional logic to fully drive open or closed when commanded to 100% or 0%.

AI 4/AI 5 OFFSET (Optional)

AI 4 OFFSET works like RMTMP OFFSET. It can be used to calibrate AI 4 aux temp sensor input if necessary. The actual temperature plus AI 4 OFFSET will equal AI 4 display temperature.

AI 5 OFFSET works the same as AI 4 OFFSET.

Room Unit Operation

Stat Supervision

STAT SUPV is a configurable, enumerated point (values are additive). This point tells the controller how to handle loss of data when used with a digital room unit.

Room Temperature

- When the digital room unit (Series 2200/2300) is used, STAT SUPV enables loss of communication indication:
 - Temperature sensing with a value of 1.
 - Relative humidity sensing with a value of 2.
 - CO2 sensing with a value of 4.
- Communication for Series 2200 sensor baud rate must be set to 1200.
- When the analog room unit (Series 1000/2000) is used, default temperature sensing (0) is enabled (relative humidity and CO2 sensing are not available and should not be selected).

Other Inputs (only available on Digital Room Unit)

- Use the following table to enable communications supervision of room temperature, relative humidity or CO₂ for additive values of 2 or 4.

STAT SUPV Value * (additive)	Description (include values to enable feature)
1	Room temperature sensing
2	Relative Humidity (RH) sensing
4	CO ₂ sensing



⚠ CAUTION

Digital Room Units that have the RH and/or the CO₂ feature will always update the present value and put the associated points (RM TEMP, RM RH, and RM CO₂) in override mode, preventing external (or PPCL) commands from being used. STAT SUPV is only provided to allow these points to report a FAIL mode when the room unit fails to update these points.

If an alternative source is selected you must insure that the room unit is not provided with the same sensor option.

See *Sensors and Transducers Configuration and Sizing* for part numbers and ordering information.

Room CO₂

RM CO₂ displays the CO₂ value in units of parts-per-million (PPM). RM CO₂ can be used with PPCL in the PTEC controller or unbundled for control or monitoring purposes.

Room RH

RM RH displays the relative humidity value in percent. RM RH can be used for PPCL in the PTEC or unbundled for control or monitoring purposes.

Fail Mode Operation

If the air velocity sensor fails, the controller determines the status of FAIL MODE and positions the damper accordingly. If FAIL MODE = OPEN and the velocity sensor fails, the damper will open. If FAIL MODE = CLOSED (the default) and the velocity sensor fails, the damper will close.

If the room temperature sensor fails, the controller holds the last known temperature value.

In this application, the room temperature is not controlled, it is for monitoring purposes only.

Application Notes

- If FLOW is oscillating while FLOW STPT is constant, then the flow loop requires tuning.
- The controller as shipped from the factory keeps all associated equipment OFF. See the *Start-up* document for how to release the controller and its equipment to application control.
- Spare DOs can be used as auxiliary points that are controlled by the field panel after being defined in the field panel's database. The combination of DO 3 and DO 4 may be used as auxiliary motor points. If using a pair of spare DOs to control a motor, you must unbundle the corresponding motor command point.

For more information, contact your nearest Siemens Industry, Inc. representative.


Wiring Diagrams



⚠ CAUTION

The controller's DOs control 24 Vac loads only. The maximum rating is 12 VA for each DO. An external interposing relay is required for any of the following:

- VA requirements higher than the maximum
- 110 or 220 Vac requirements
- DC power requirements
- Separate transformers used to power the load
(for example part number 540-147, Terminal Equipment Controller Relay Module)

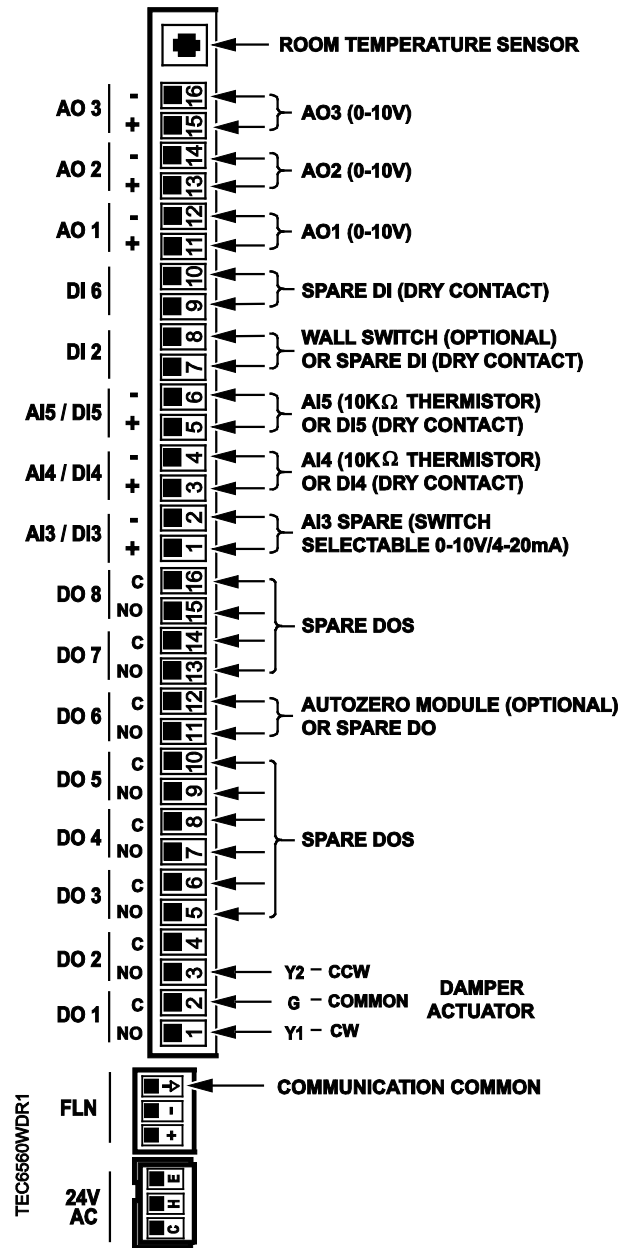

Application 6560 – Constant Volume Cooling Only.

Application 6560 Point Database

Object Type	Object Number	Object Name Descriptor	Factory Defaults (SI Units)	Eng Units (SI Units)	Range	Active Text	Inactive Text
AO	1	CTLR ADDRESS	99	--	0-255	--	--
AO	2	APPLICATI ON	6594	--	0-32767	--	--
AI	{04}	ROOM TEMP	74.0 (23.44888)	DEG F (DEG C)	48-111.75	--	--
AI	{13}	RM STPT DIAL	74.0 (23.44888)	DEG F (DEG C)	48-111.75	--	--
AI	{15}	AUX TEMP AI5	74.0 (23.495556)	DEG F (DEG C)	37.5-165	--	--
BO	{18}	WALL SWITCH	NO	--	Binary	YES	NO
BI	{19}	DI OVRD SW	OFF	--	Binary	ON	OFF
AO	{20}	OVRD TIME	0	HRS	0-255	--	--
BO	{21}	UNOCC OVRD	UNOCC	--	Binary	UNOCC	OCC
BI	{24}	DI 2	OFF	--	Binary	ON	OFF
BI	{25}	DI 3	OFF	--	Binary	ON	OFF
BO	{29}	OCC.UNOC C	OCC	--	Binary	UNOCC	OCC
AO	{31}	UNOCC FLOW	220 (103.818)	CFM (LPS)	0-131068	--	--
AO	{32}	OCC FLOW	2200 (1038.18)	CFM (LPS)	0-131068	--	--
AI	{35}	AIR VOLUME	0 (0.0)	CFM (LPS)	0-131068	--	--
AO	{36}	FLOW COEFF	1	--	0-2.55	--	--
BO	{40}	FAIL MODE	OPEN	--	Binary	CLOSED	OPEN
BO	{41}	DO 1	OFF	--	Binary	ON	OFF
BO	{42}	DO 2	OFF	--	Binary	ON	OFF
BO	{43}	DO 3	OFF	--	Binary	ON	OFF
BO	{44}	DO 4	OFF	--	Binary	ON	OFF
BO	{45}	DO 5	OFF	--	Binary	ON	OFF
BO	{46}	DO 6	OFF	--	Binary	ON	OFF
BO	{47}	DO 7	OFF	--	Binary	ON	OFF
AO	{48}	DMPR COMD	0	PCT	0-102	--	--

Object Type	Object Number	Object Name Descriptor	Factory Defaults (SI Units)	Eng Units (SI Units)	Range	Active Text	Inactive Text
AO	{49}	DMPR POS	0	PCT	0-102	--	--
BO	{50}	DO 8	OFF	--	Binary	ON	OFF
AO	{51}	MTR1 TIMING	95	SEC	0-511	--	--
AO	{52}	MTR2 COMD	0	PCT	0-102	--	--
AO	{53}	MTR2 POS	0	PCT	0-102	--	--
AO	{55}	MTR2 TIMING	130	SEC	0-511	--	--
AO	{56}	DPR1 ROT ANG	90	--	0-255	--	--
AO	{57}	DPR2 ROT ANG	90	--	0-255	--	--
AO	58	MTR SETUP	0	--	0-255	--	--
AO	59	DO DIR. REV	0	--	0-255	--	--
AO	{71}	FLOW P GAIN	0.25	--	0-51.15	--	--
AO	{72}	FLOW I GAIN	0.018	--	0-1.023	--	--
AO	{73}	FLOW D GAIN	0	--	0-510	--	--
AO	{74}	FLOW BIAS	50	PCT	0-102	--	--
AO	{75}	FLOW	0	PCT	0-1023.75	--	--
AO	{78}	CTL TEMP	74.0 (23.44888)	DEG F (DEG C)	48-111.75	--	--
BO	{84}	DMPR STATUS	CAL	--	Binary	RECAL	CAL
BO	{87}	CAL MODULE	NO	--	Binary	YES	NO
AO	{91}	TOTAL VOLUME	0 (0)	CF (L)	0-131068	--	--
AO	{93}	FLOW STPT	0	PCT	0-255.75	--	--
BO	{94}	CAL AIR	NO	--	Binary	YES	NO
AO	{95}	CAL SETUP	4	--	0-255	--	--
AO	{96}	CAL TIMER	12	HRS	0-255	--	--
AO	{97}	DUCT AREA	1.0 (0.09292)	SQ. FT (SQ M)	0-6.375	--	--
AO	{98}	LOOP TIME	5	SEC	0-255	--	--
AO	{99}	ERROR STATUS	0	--	0-255	--	--

Object Type	Object Number	Object Name Descriptor	Factory Defaults (SI Units)	Eng Units (SI Units)	Range	Active Text	Inactive Text
AO	{102}	AOV 1	0	VOLTS	0-255	--	--
AO	{103}	AOV 2	0	VOLTS	0-32767	--	--
AI	{104}	AOV 3	0	VOLTS	48-111.75	--	--
AI	{105}	AI 3	0	PCT	48-111.75	--	--
AI	{106}	AI 4	74.0 (23.495556)	DEG F (DEG C)	37.5-165	--	--
BO	{107}	RMTMP OFFSET	0.0 (0.0)	DEG F (DEG C)	Binary	--	--
BI	{108}	DI 4	OFF	--	Binary	ON	OFF
AO	{109}	DI 5	OFF	--	0-255	ON	OFF
BO	{110}	DI 6	OFF	--	Binary	ON	OFF
BI	{122}	AI 4 OFFSET	0.0 (0.0)	DEG F (DEG C)	Binary	--	--
BI	{123}	AI 5 OFFSET	0.0 (0.0)	DEG F (DEG C)	Binary	--	--
BO	{124}	STAT SUPV	0	--	Binary	--	--
AO	{125}	RM CO2	1000	PPM	0-131068	--	--
AO	{126}	RM RH	50	PCT	0-131068	--	--
AI	{127}	PPCL STATE	EMPTY	--	0-131068	LOADED	EMPTY

Issued by
Siemens Industry, Inc.
Building Technologies Division
1000 Deerfield Pkwy
Buffalo Grove IL 60089
Tel. +1 847-215-1000

© 2014 Copyright Siemens Industry, Inc.
Technical specifications and availability subject to change without notice.