

SIEMENS

BACnet PTEC Unit Vent Controller

**Application 6577 - Heating and
DX Cooling, ASHRAE Cycles I
and II**

Application Note

Table of Contents

Overview	4
Application 6577 Diagram Cross Reference	4
Control Diagram 1	5
Control Diagram 2	6
Control Diagram 3	6
Control Schedule 1	7
Control Schedule 2	8
Control Schedule 3	9
BACnet	9
Hardware Inputs	10
Hardware Outputs	10
Sequence of Operation	11
Control Temperature Setpoints	11
Room Temperature Offset (Optional)	11
Day and Night Modes	11
Night Mode Override Switch	12
Day Heating Operation	12
Day Cooling Operation	13
Night Heating Operation	13
Night Cooling Operation	14
Heating/Cooling Switchover	14
Control Loops	14
Morning Warm-up / Cool-down	15
ON/OFF Coil Valve Control	15
DX Cooling Operation	16
Staged Electric Heat	16
AI4/AI5 OFFSET (Optional)	16
Room Unit Operation	16
Stat Supervision	16
CO2 Monitoring	16
Room RH	17
Fan Operation	17
PPCL STATUS	17
Fail Mode Operation	17
Application Notes	18
Wiring Diagram(s)	18
Wiring Diagram 1	19
Wiring Diagram 2	20
Wiring Diagram 3	21
Application 6577 Point Database	22

Overview

In Application 6577, the controller controls a unit ventilator equipped with a DX coil for cooling, and/or a heating coil, which may be hot water, steam, or electric, for ASHRAE Cycles I and II. A face-bypass damper can be controlled, replacing the modulating (0 to 10V) heating actuator, but will modulate only in heating mode. If a face-bypass damper is used, 2-position valves on the coils may be controlled. Cooling only units can also be controlled with this application by overriding HEAT.COOL to COOL.

Other features available in this application include morning warm-up/cool-down, night mode override, and free-cooling.


NOTE:

Using a low temperature detection thermostat (LTDT) is strongly recommended for hot water and steam systems.


While in heating, this application controls room temperature by resetting the discharge air temperature. While in cooling, this application controls room temperature by cycling the DX unit. This application also controls an outdoor air damper according to the schedules as defined by ASHRAE Cycles I and II. The free-cooling/economizer function is turned on and off by the field panel using FREE CLG. If free cooling is not available, the outdoor air damper will be kept at minimum position; otherwise, the outdoor air damper will modulate open in sequence with the heating actuator or the DX. The unit ventilator fan is also controlled in this application.

Application 6577 Diagram Cross Reference

Hardware Configuration	Control Drawing	Control Schedule	Wiring Diagrams
DX coil, single step control	Control Diagram 1 [→ 5], except: 1. No heating coil, heating valve actuator, or auxiliary radiation. 2. No LTDT.	Control Schedule 1 [→ 7], except: 1. No heating mode.	Wiring Diagram 1 [→ 19], except: 1. No heating valve actuator, or auxiliary radiation. 2. No LTDT.
Hot water and DX coils, valve and single step control	Control Diagram 1 [→ 5], except: 1. LTDT recommended.	Control Schedule 1 [→ 7]	Wiring Diagram 1 [→ 19], except: 1. LTDT recommended.
Hot water and DX coils, face-bypass damper controls and single step control	Control Diagram 3 [→ 6], except: 1. LTDT recommended.	Control Schedule 3 [→ 9]	Wiring Diagram 3 [→ 21], except: 1. LTDT recommended.
Steam and DX coils, valve and single step control	Control Diagram 1 [→ 5], except: 1. Read steam coil instead of heating coil. 2. LTDT recommended.	Control Schedule 1 [→ 7]	Wiring Diagram 1 [→ 19], except: 1. LTDT recommended.


Hardware Configuration	Control Drawing	Control Schedule	Wiring Diagrams
Steam and DX coils, face-bypass damper control and single step control	Control Diagram 3 [→ 6], except: 1. Read steam coil instead of heating coil. 2. LTDT recommended.	Control Schedule 3 [→ 9]	Wiring Diagram 3 [→ 21], except: 1. LTDT recommended.
Electric and DX step control	Control Diagram 2 [→ 6], except: 1. No LTDT.	Control Schedule 2 [→ 8]	Wiring Diagram 2 [→ 20], except: 1. No LTDT.

Control Diagram 1

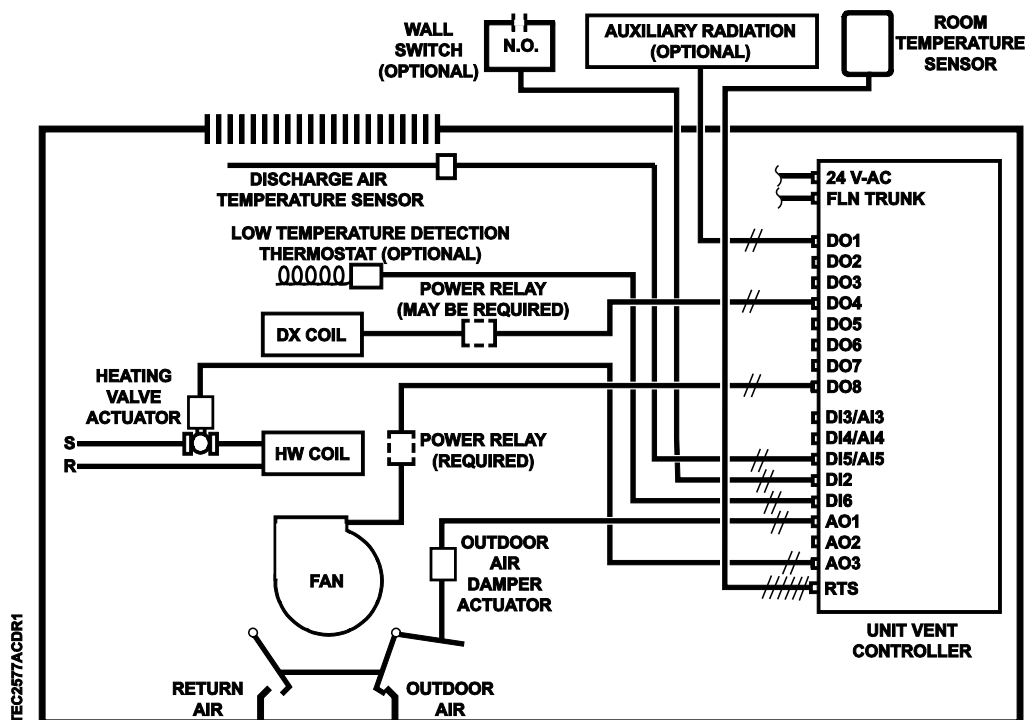


See the Application 6577 Diagram Cross Reference [→ 4] for Application Configuration(s).

Control Diagram 2

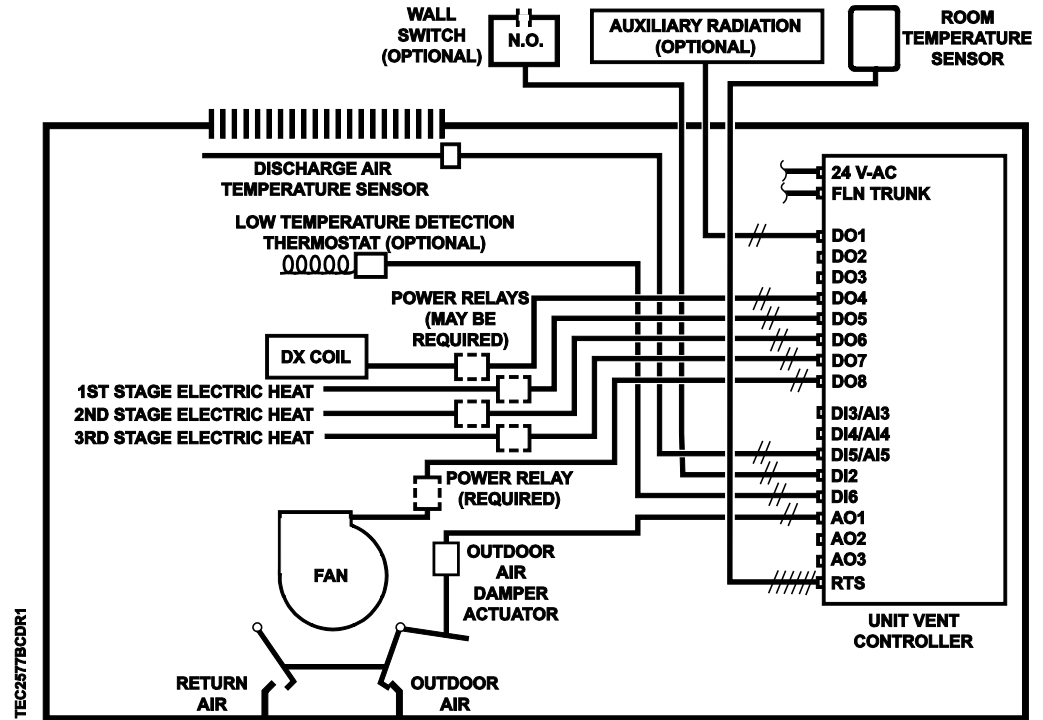


See the Application 6577 Diagram Cross Reference [→ 4] for Application Configuration(s).

Control Diagram 3

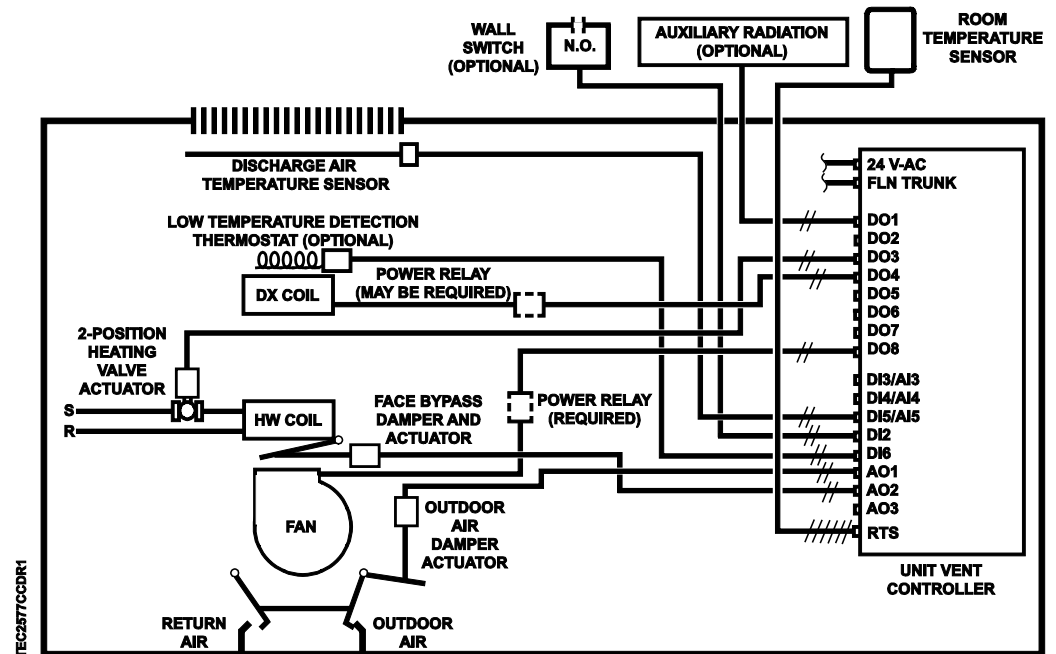


Control Schedule 2

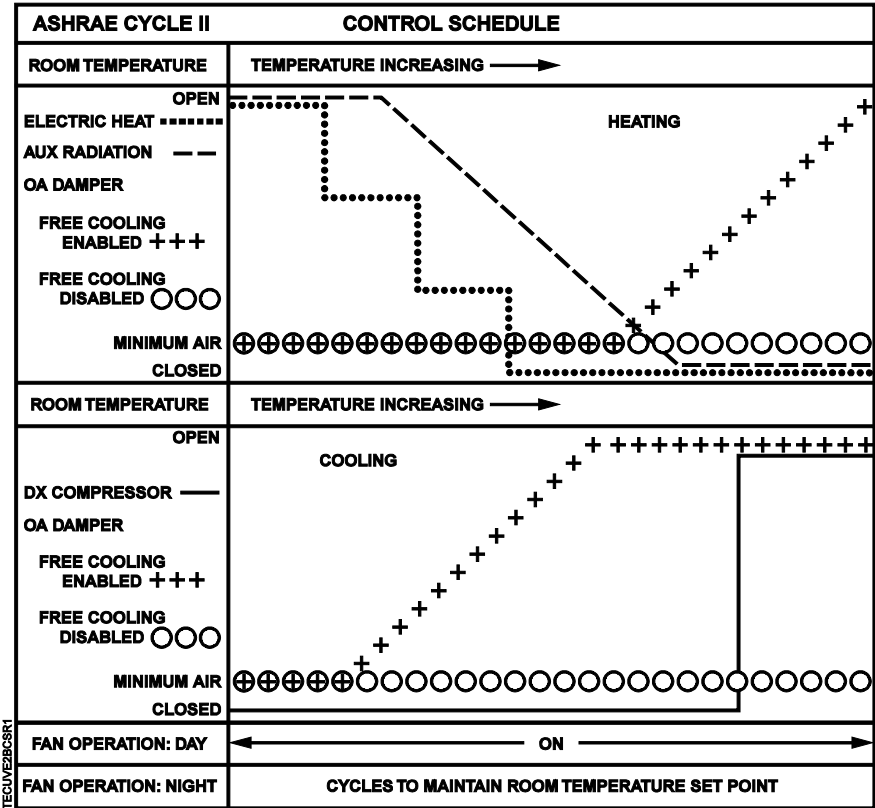

See the Application 6577 Diagram Cross Reference [→ 4] for Application Configuration(s).

Control Schedule 3

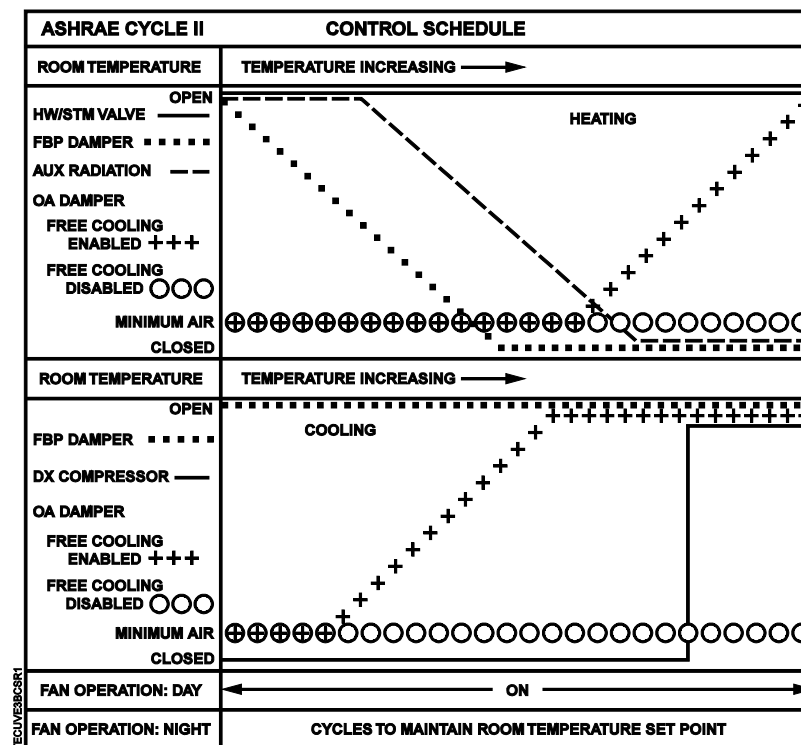

See the Application 6577 Diagram Cross Reference [→ 4] for Application Configuration(s).

BACnet

The controller communicates using BACnet MS/TP protocol for open communications on BACnet MS/TP networks.

Product	Supported BIBBs	BIBB Name
BTEC	DS-RP-B B	Data Sharing-Read Property-B
	DS-RPM-B	Data Sharing-Read Property Multiple-B
	DS-WP-B	Data Sharing-Write Property-B
	DM-DDB-B	Device Management-Dynamic Device Binding-B
	DM-DOB-B	Device Management-Dynamic Object Binding-B
	DM-DCC-B	Device Management-Device Communication Control-B
	DM-RD-B	Device Management-Reinitialize Device-B
	DM-BR-B	Device Management-Backup and Restore-B
	DM-OCB-B	Device Management-Object Creation and Deletion-B

Hardware Inputs

Analog

- Averaging air temperature sensor (10K thermistor)
- Room temperature sensor
- Room temperature setpoint dial (optional)
- Spare AI4 10K thermistor
- Spare AI3 switch selectable 0-10V or 4-20 mA

Digital

- Low Temperature Detection Thermostat (LTDT)
- Night mode override (optional)
- Wall switch (optional)

Hardware Outputs

The following is a list of devices that can be used by this application depending on your hardware configuration.

Analog (0 to 10V)

- Heating valve actuator
- Face-bypass damper actuator
- Outdoor air damper actuator

Digital

- Unit fan
- DX coil
- Auxiliary radiation electric coil contact; or, auxiliary radiation 2-position valve actuator
- 1st stage electric heat
- 2nd stage electric heat
- 3rd stage electric heat
- 2-position heating valve actuator

Sequence of Operation

The following paragraphs present the sequence of operation for Siemens BACnet PTEC Unit Vent Controller Application 6577, Heating and DX Cooling, ASHRAE Cycles I and II.

Control Temperature Setpoints

Depending on the controller's current operational mode (day or night), the control temperature setpoint, CTL STPT holds the value of one of the following setpoints:

Day Mode – In day mode, CTL STPT holds the value of DAY CLG STPT or DAY HTG STPT. If the room temperature sensor has a setpoint dial and STPT DIAL is set to YES, then CTL STPT holds the value of RM STPT DIAL.

If the setpoint dial is used and the value of RM STPT DIAL is less than the value of RM STPT MIN, then CTL STPT holds the value of RM STPT MIN. If the value of RM STPT DIAL is greater than the value of RM STPT MAX, then CTL STPT holds the value of RM STPT MAX.

Night Mode – In night mode, CTL STPT holds the value of NGT CLG STPT or NGT HTG STPT.



NOTE:

The value of CTL TEMP is the same as the value of ROOM TEMP, unless CTL TEMP is overridden.

Room Temperature Offset (Optional)

TEMP OFFSET is a user-adjustable offset that will compensate for deviations between the value of ROOM TEMP and the actual room temperature. This corrected value is displayed in CTL TEMP.

$$\text{CTL TEMP} = \text{ROOM TEMP} + \text{TEMP OFFSET}$$

Example

If the actual room temperature is 72.0°F, and the value of ROOM TEMP is 73.0°F, then the value entered into TEMP OFFSET is –1.0. In this case, the value of ROOM TEMP would read 73.0°F, but the value of CTL TEMP would read 72.0°F.

Day and Night Modes

The day/night status of the space is determined by the status of DAY.NGT. The control of this point differs depending on whether the controller is monitoring the status of a wall switch or if the controller is connected to a field panel.

When a wall switch is physically connected to the termination strip on the controller DI 2 (see the Control Diagram(s)), and WALL SWITCH = YES, the controller monitors the

status of DI 2. When the status of DI 2 is ON (the switch is closed), then DAY.NGT will be set to DAY indicating that the controller is in day mode. When the status of DI 2 is OFF (the switch is open), then DAY.NGT will be set to NIGHT indicating that the controller is in night mode.

When WALL SWITCH = NO, the controller does not monitor the status of the wall switch, even if one is connected to it. In this case, if the controller is operating stand-alone, then the controller stays in day mode all the time. If the controller is operating with centralized control (that is, it is connected to a field panel), then the field panel can send an operator or PPCL command to override the status of DAY.NGT. See *Powers Process Control Language (PPCL) User's Manual* (125-1896) and *Field Panel User's Manual* (125-3019 or 125-3020) for more information.

Night Mode Override Switch

If an override switch is present on the room temperature sensor and a value (in hours) other than zero has been entered into OVRD TIME, pressing the override switch will reset the controller to day operational mode for the time period that is set in OVRD TIME. The status of NGT OVRD changes to DAY. After the override time elapses, the controller returns to night mode and the status of NGT OVRD changes back to NIGHT. The override switch on the room sensor will only affect the controller when in night mode.

Day Heating Operation

In day heating operation, the controller maintains the room temperature at the value stored in CTL STPT by doing the following:

- Resetting the unit ventilator's discharge temperature setpoint, DISCH STPT, based on the difference between CTL TEMP and CTL STPT. If CTL TEMP goes below CTL STPT, then the discharge temperature setpoint increases. If the reverse occurs, then the setpoint decreases. DISCH STPT may not drop below the value of DSH MIN TEMP, nor may it rise above DSH MAX TEMP.
- Modulating the available coil control device based on the difference between the discharge temperature point, DISCH TEMP, and DISCH STPT. If DISCH TEMP goes below DISCH STPT, then the heating valve actuator opens, the face-bypass damper opens, or the stages of electric heat energize. If DISCH TEMP goes above DISCH STPT, then the reverse occurs.
- Controlling auxiliary radiation (if provided) using a pulse-width modulation algorithm. The auxiliary radiation will be on for a percentage of the time held in AUX HTG TIME. The on-time is based on the difference between DISCH STPT and AUX DSH STPT. If DISCH STPT goes below AUX DSH STPT, then the on-time of the auxiliary radiation valve decreases. If the reverse occurs, then the on-time increases.
- Positioning the outdoor air damper as follows:
 - For ASHRAE Cycle I, OADPR MINPOS is set to 100%.
 - For ASHRAE Cycle II, OADPR MINPOS is set to a value less than 100% to satisfy the minimum outdoor air requirements.

- When the coil is providing heat, the damper is positioned at its minimum setting. When the coil is not providing heat and FREE CLG is set to ENABLE, the damper is positioned from minimum to maximum open to provide ventilation cooling. If FREE CLG is set to DISABL, then the damper is kept at minimum at all times.

Day Cooling Operation

In day cooling operation, the controller maintains the room temperature at the value stored in CTL STPT by doing the following:

- Positioning the outdoor air damper as follows:
 - For ASHRAE Cycle I, OADPR MINPOS, is set to 100%.
 - For ASHRAE Cycle II, OADPR MINPOS is set to a value less than 100% to satisfy the minimum outdoor air requirements.
 - When the coil is providing cooling and FREE CLG is set to ENABLE, the damper is kept open. When the coil is not providing cooling and FREE CLG is set to ENABLE, the damper is modulated between minimum and maximum. If FREE CLG is set to DISABL, then the damper is kept at minimum at all times.

Night Heating Operation

The controller maintains the room temperature at the value stored in CTL STPT by doing the following:

If CTL TEMP drops below the value of NGT HTG STPT minus the value of NGT DBAND:

- The fan turns ON
- Heating turns ON

If CTL TEMP rises above NGT HTG STPT:

- The fan turns OFF
- Heating turns OFF

When the fan turns ON, the heating actuators and auxiliary radiation are opened. When the fan turns OFF, all heating and auxiliary radiation is closed. If electric heat is being controlled, then the fan will remain ON for 30 seconds after the last stage of electric heat is turned OFF. If NGT HW HTG is set to YES, (for hot water coils), then the heating actuator is kept open at all times during the night.

In night heating operation, the controller operates as follows:

- For units with hot water coils, NGT HW HTG must be set to YES, so that the valve will be positioned to full open.
- For units with steam or electric coils, NGT HW HTG must be set to NO, so that the coils can be cycled.
- The face-bypass damper is at full face when the fan is ON and full bypass when the fan is OFF and the 2-position heating valve actuator is open.
- The controller may switch to cooling mode when appropriate if NGT CLG MODE is set to YES.
- Heating only is provided when NGT CLG MODE is set to NO.

Night Cooling Operation

In night cooling operation, the controller maintains the room temperature at the value stored in CTL STPT by doing the following:

- If CTL TEMP rises above the sum of NGT CLG STPT and NGT DBAND:
 - The fan turns ON
 - Cooling turns ON
- If CTL TEMP drops below NGT CLG STPT:
 - The fan turns OFF
 - Cooling turns OFF
- When NGT CLG MODE is set to NO, the unit will operate in night heating mode only.

In night cooling operation, the controller operates as follows:

- For units with hot water coils, NGT HW HTG must be set to YES, so that the valve will be positioned to full open.
- For units with steam or electric coils, NGT HW HTG must be set to NO, so that the heating coils can be kept OFF.
- The face-bypass damper is at full face when the fan is ON and at full bypass when the fan is OFF and the 2-position cooling valve actuator is open.

Heating/Cooling Switchover

If the following conditions are met for the length of time set in SWITCH TIME, the controller switches from heating to cooling mode by setting HEAT.COOL to COOL:

- HTG LOOPOUT is below 50% if free cooling is disabled or below SWITCH LIMIT if free cooling is enabled.
- CTL TEMP is greater than the sum of CTL STPT plus SWITCH DBAND.
- CTL TEMP is greater than the appropriate cooling setpoint minus SWITCH DBAND.

If the following conditions are met for the length of time set in SWITCH TIME, the controller switches from cooling to heating mode by setting HEAT.COOL to HEAT:

- CLG LOOPOUT is below 50% if free cooling is disabled or below SWITCH LIMIT if free cooling is enabled.
- CTL TEMP is less than CTL STPT minus SWITCH DBAND.
- CTL TEMP is less than the appropriate heating setpoint plus SWITCH DBAND.

If night cooling is not available, as indicated by NGT CLG MODE, then the controller remains in heating mode during the night.

Control Loops

The unit ventilator is controlled by four Proportional, Integral, and Derivative (PID) control loops; a room loop, a heating loop, a DX loop, and an auxiliary loop.

Room Loop – The room loop uses the values of CTL STPT and CTL TEMP to set the discharge setpoint, DISCH STPT, between the values of DSH MIN TEMP and DSH MAX TEMP.

Heating Loop – The heating loop uses the value of DISCH STPT and DISCH TEMP to modulate the value of HTG LOOPOUT.

Cooling Loop – The cooling loop uses the value of DISCH STPT and DISCH TEMP to modulate the value of CLG LOOPOUT.

Auxiliary Loop – The auxiliary loop uses AUX DSH STPT and DISCH STPT to modulate the value of AUX LOOPOUT.

DX Loop – The DX loop uses the values of CTL STPT and CTL TEMP to modulate the value of CLG LOOPOUT.

Morning Warm-up / Cool-down

Morning warm-up or cool-down occurs after the controller switches from night mode to day mode, upon power-up, or if the controller is reset. During morning warm-up or cool-down, the controller provides maximum heating or cooling with the outdoor air damper closed until the temperature of the space reaches the value of CTL STPT plus or minus the value of MORN DBAND. In morning cool-down, if FREE CLG is set to ENABLE, the outdoor air damper is opened.

In heating mode, normal day heating operation begins when the temperature of the room reaches the value of CTL STPT minus MORN DBAND.

In cooling mode, normal day cooling operation begins when the temperature of the room reaches the value of CTL STPT plus MORN DBAND.

For example, in day heating mode, if CTL STPT is 72°F (22.2°C) and MORN DBAND is 3°F (1.6°C), normal day heating operation begins when the temperature of the room reaches 69°F (20.6°C).

ON/OFF Coil Valve Control

When a face-bypass configuration is used, the coils may be turned ON and OFF with 2-position valves using DOs. There are two conditions when this might occur:

1. In the case where a hot water/steam coil and a DX coil are used with a face-bypass damper, the DX coil will be shut while in heating, and the heating valve actuator will be shut while in cooling. In this configuration, a 2-position heating valve must be used to prevent both coils from being ON at the same time.

NOTE: In night heating or cooling, if NGT HW HTG is set to YES, the heating coil is kept open.

2. When in heating, if the face-bypass damper is all the way closed (bypass) for more than two minutes, the heating coil can be closed to conserve energy. This is an option which is performed when FBP.2PSVCTL is set to ENABLE. Otherwise, the heating valve is kept open when the damper is closed.

NOTE: In night heating or cooling, if NGT HW HTG is set to YES, the heating coil is kept open.

DX Cooling Operation

DX cooling is controlled as follows:

- If CLG OUTPUT is greater than 75%, the DX turns ON.
- If CLG OUTPUT is less than 75%, the DX turns OFF.
- The DX may not turn ON or OFF until the number of minutes held in CMP MIN ON or CMP MIN OFF have expired.

Staged Electric Heat

If electric heat is used, then it is controlled as follows:

HTG OUTPUT	Stage 1	Stage 2	Stage 3
0% - 33%	ON	OFF	OFF
34% - 66%	ON	ON	OFF
67% - 100%	ON	ON	ON

In addition, no stage may turn ON or OFF until the number of seconds held in EHT STG DELY have elapsed since the last time any stage turned ON or OFF. Stage one will always be the first stage to turn ON and the last stage to turn OFF.

AI4/AI5 OFFSET (Optional)

AI 4 OFFSET works like RMTMP OFFSET. It can be used to calibrate AI4 aux temp sensor input if necessary. The actual temperature plus AI 4 OFFSET will equal AI4 display temperature.

AI 5 OFFSET works the same as AI 4 OFFSET.

Room Unit Operation

Stat Supervision

STAT SUPV is a configurable, enumerated point (values are additive). This point tells the controller what kind of room unit is connected and how to respond to a loss of communication between a Series 2200 and 3200 type Room Units and the controller.

The default value for STAT SUPV is zero, no response (also for Series 1000/2000 stats). A value of 1 means that if communication is lost for at least one minute, CTL TEMP will have a status of Failed. A value of 3 means that both CTL TEMP and RM RH will be Failed after a loss of communication for at least one minute.

CO2 Monitoring

RM CO2 displays the CO₂ value in units of parts-per-million (PPM). RM CO2 can be unbundled for monitoring purposes.

Room RH

RM RH displays the relative humidity value in percent. RM RH can be unbundled for monitoring purposes.

Fan Operation

In day mode, FAN, is ON all of the time.

In night mode, the fan only operates when required for heating or cooling.

In night heating, the fan turns ON when the temperature drops below the value of CTL STPT minus NGT DBAND. When the temperature rises above CTL STPT, the fan turns OFF.

If any stage of electric heat is ON, the fan will be ON. The fan will remain ON for 30 seconds after the last stage of electric heat is turned OFF.

In night cooling, the fan turns ON when the temperature rises above the value of CTL STPT plus NGT DBAND. When the temperature drops below CTL STPT, the fan turns OFF.

If the DX coil is ON, the fan is ON. The fan remains ON for 30 seconds after the DX coil is turned OFF.

PPCL STATUS

PPCL STATUS displays LOADED or EMPTY.

LOADED = PPCL programming is present in the controller. A new application number must be assigned (12000 through 12999).

EMPTY = NO PPCL programming is present.

Fail Mode Operation

The Unit Vent Controller has a fail-safe operation that can be triggered by several occurrences.

A low temperature detection thermostat (LTDT) can be used to signal the controller when the temperature sensed by the LTDT is below the low temperature limit.

If the room temperature sensor input to the Unit Vent Controller fails or the LTDT equals ON, the controller goes through the following shutdown sequence:

- Outdoor air damper is closed.
- Heating is full ON (except electric which is OFF).
- DX cooling is full OFF.
- Face-bypass damper is open to face.
- Fan is OFF.
- Auxiliary radiation is OFF.
- 2-position heating valve actuator is open.



NOTE:

DO 2 will not be commanded by the fail mode, all other DOs can be affected.

If the discharge air temperature sensor fails, the following conditions occur:

- If the last valid value is greater than 150°, then the heat is turned OFF, the outdoor air damper is closed, and the fan is turned ON.
- If the sensor does not come back within 10 minutes or if the last valid value is less than 150°, then the controller shuts down as described above.
- In the failed state, temperature control is not possible.

If a failed sensor returns or if the LTDT turns OFF, then normal control resumes.

This BACnet controller supports BACnet command priorities in which each command is issued with a priority level from 1-16; 1 is the highest priority and 16 is the lowest priority. Operator commands have a priority level 8 and therefore are given precedence over normal application control which is at priority level 16. The fail-safe commands described above are issued with a BACnet priority of 5 (Critical Equipment Control). Since 5 is a higher priority than 8, a normal operator command can not override outputs when they are in their safe mode. For an emergency override of the outputs, a command at a priority higher than 5 is needed, or alternatively, the failed input point can be overridden back to its normal state which releases the fail-safe mode allowing commands to be accepted.

Application Notes

- If the unit ventilator cycles excessively, if the temperature swings in the room are excessive or if there is trouble in maintaining the setpoint, then either the cooling loop, the heating loop, or both need to be tuned.
- The Unit Vent Controller as shipped from the factory keeps all associated equipment OFF. See the Start-up document for how to release the controller and its equipment to application control.
- When the fan is manually switched OFF at the unit fan speed switch, the actuators should be wired so they return to their normal state.

Wiring Diagram(s)




⚠ CAUTION

The controller's DOs control 24 Vac loads only. The maximum rating is 12 VA for each DO. An external interposing relay is required for any of the following:


- VA requirements higher than the maximum
 - 110 or 220 Vac requirements
 - DC power requirements
 - Separate transformers used to power the load.
- (for example part number 540-147, Terminal Equipment Controller Relay Module)

Wiring Diagram 1

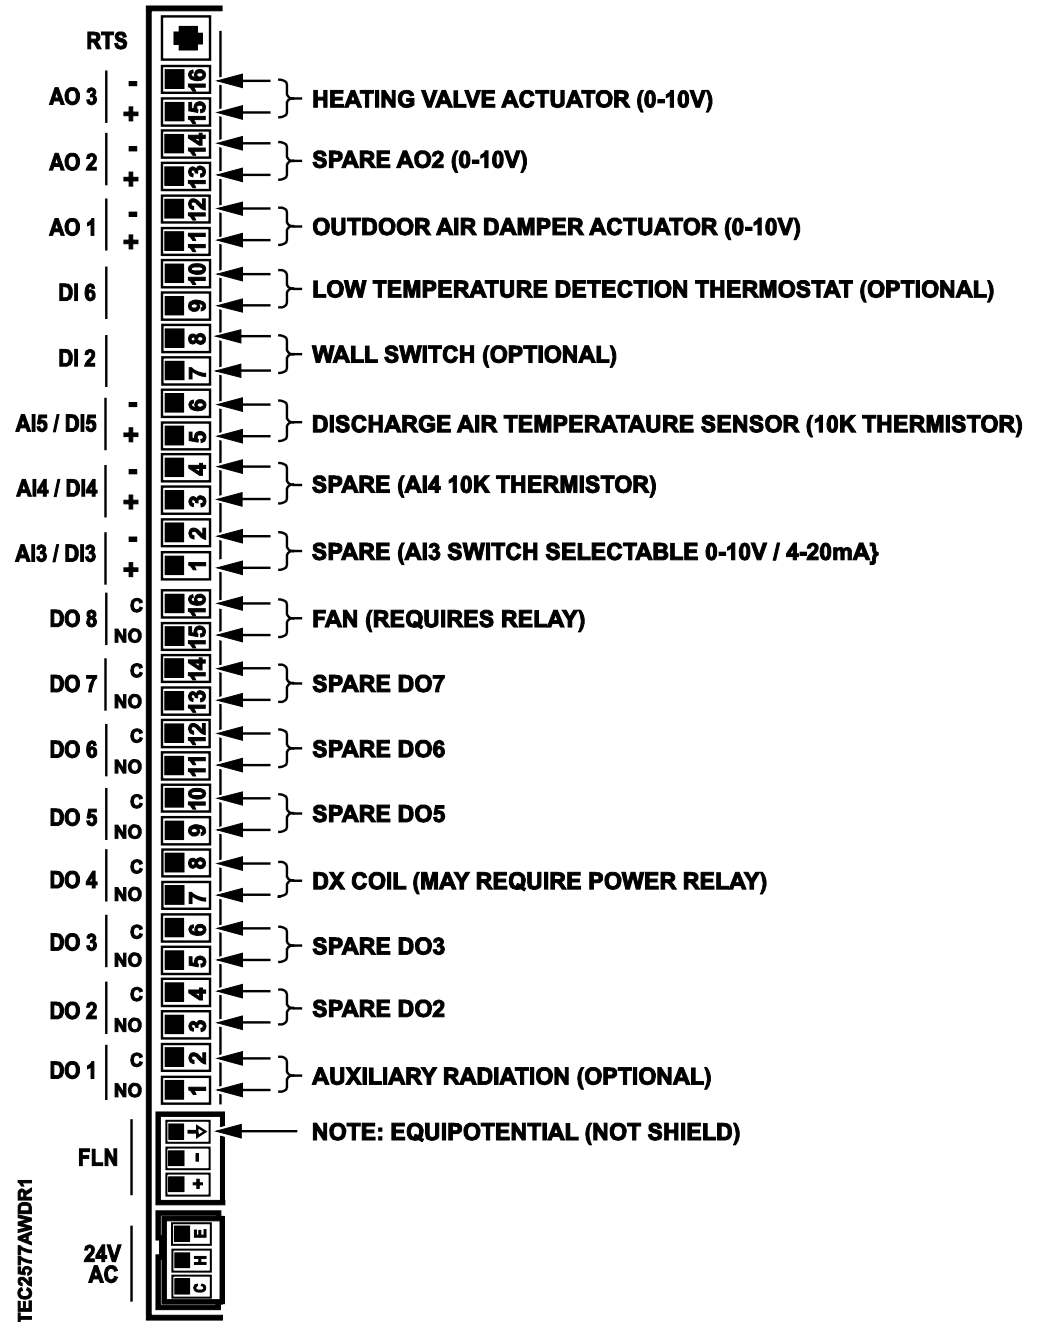


See the Application 6577 Diagram Cross Reference [→ 4] for Application Configuration(s).

Wiring Diagram 2

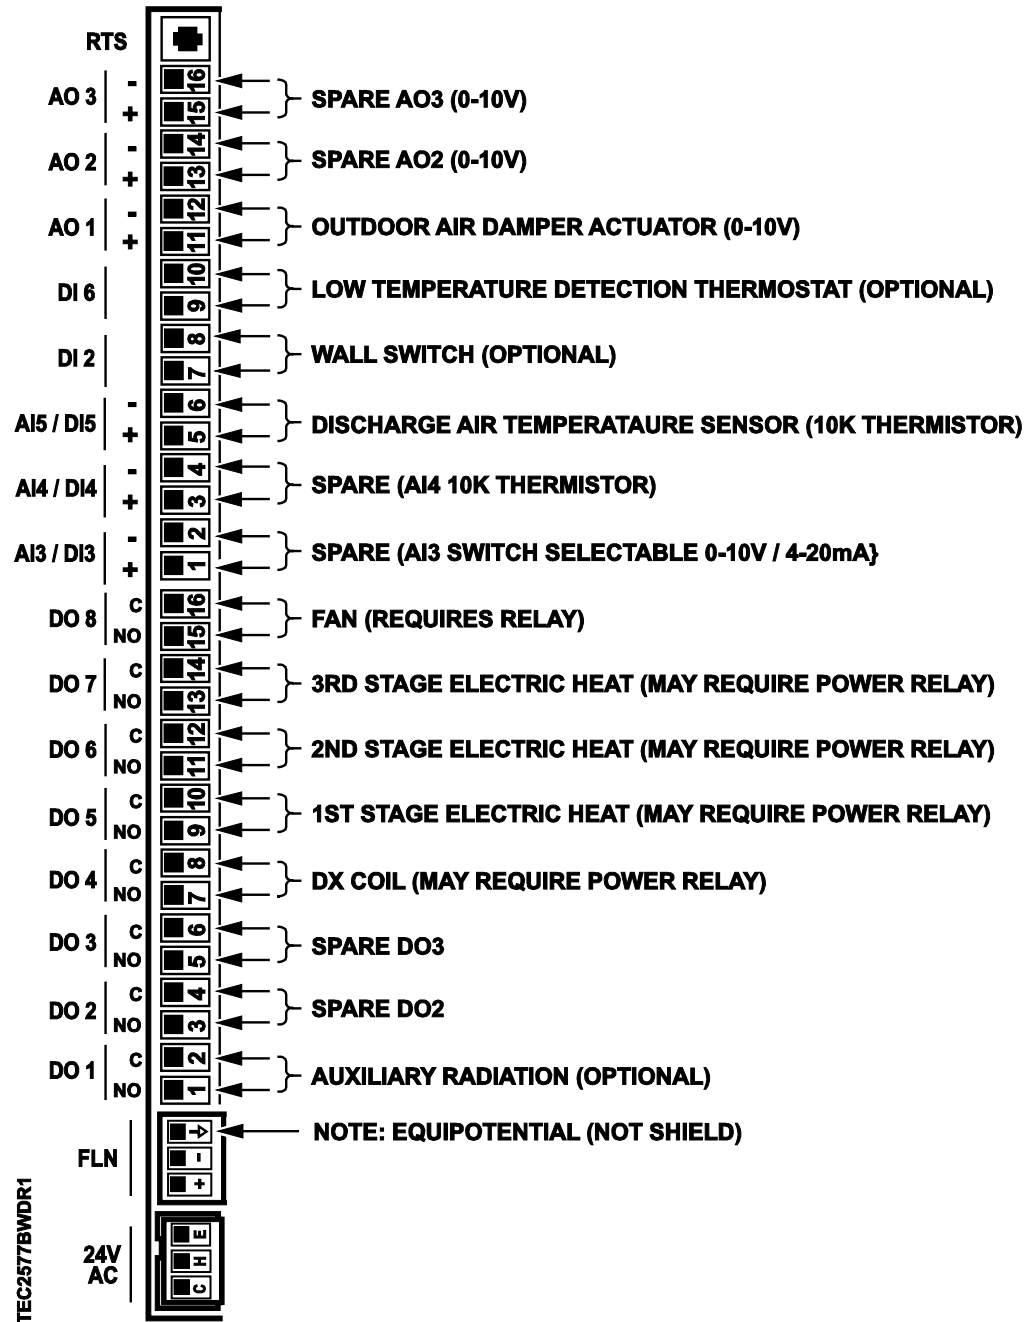

See the Application 6577 Diagram Cross Reference [→ 4] for Application Configuration(s).

Wiring Diagram 3

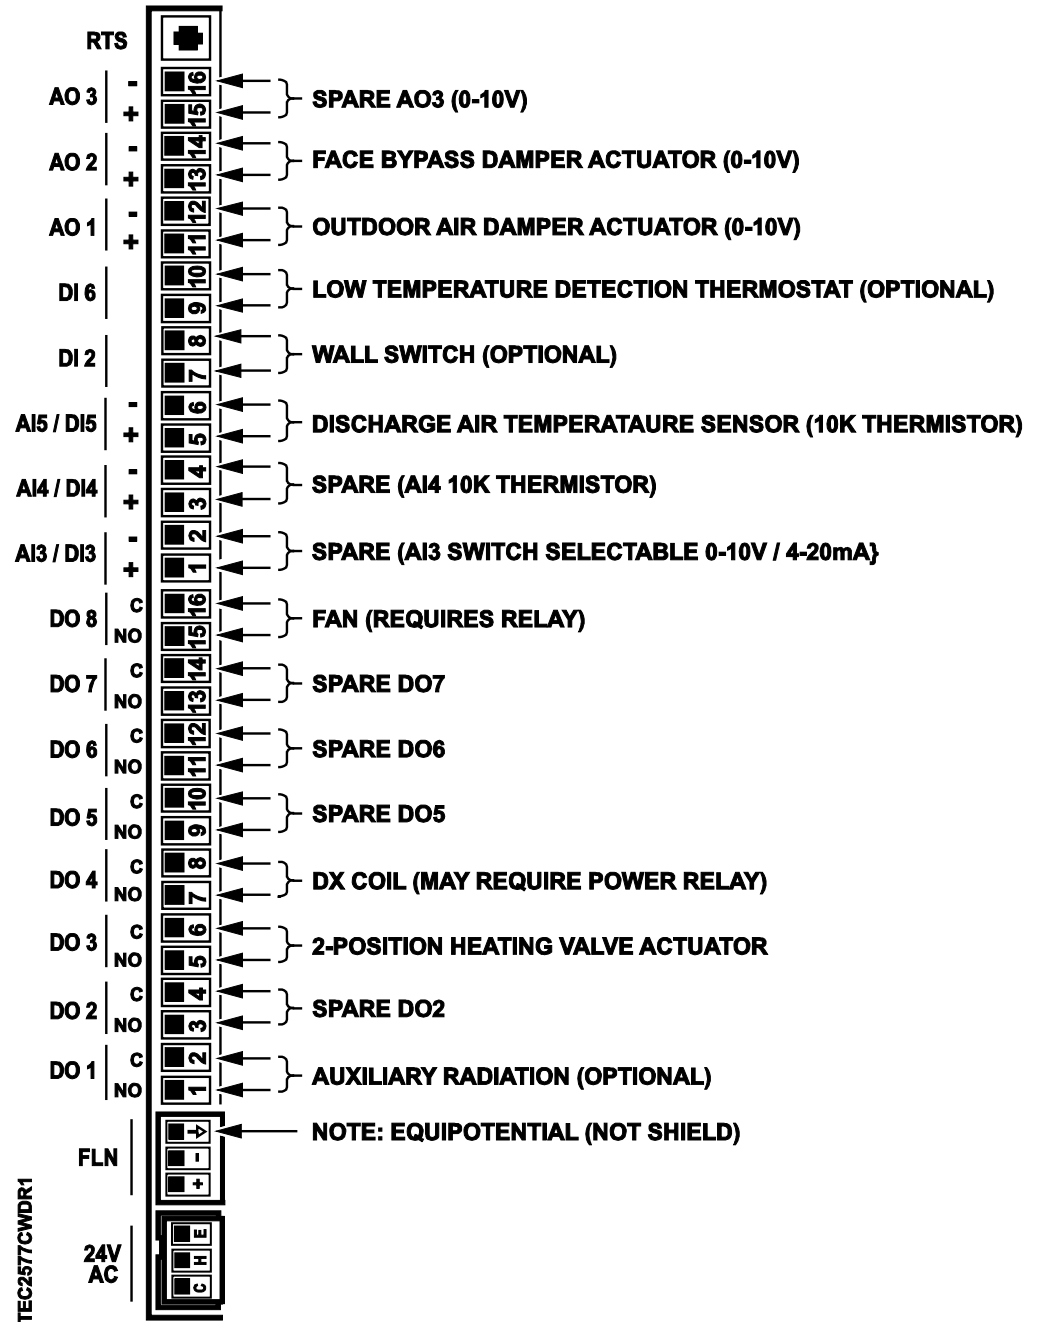

See the Application 6577 Diagram Cross Reference [→ 4] for Application Configuration(s).

Application 6577 Point Database

Object Type a)	Object Instance (Point Number)	Object Name (Descriptor)	Factory Default (SI Units) ^{b)}	Eng Units (SI Units)	Range	Active Text	Inactive Text
AO	1	CTLR ADDRESS	99	--	0-255	--	--
AO	2	APPLICATION	6595	--	0-32767	--	--
AO	3	TEMP OFFSET	0.0 (0.0)	DEG F (DEG C)	-63.75	--	--
AI	{04}	ROOM TEMP	74.0 (23.45)	DEG F (DEG C)	48-111.75	--	--
BO	{05}	HEAT.COOL	COOL	--	Binary	HEAT	COOL
AO	6	DAY CLG STPT	74.0 (23.45)	DEG F (DEG C)	48-111.75	--	--
AO	7	DAY HTG STPT	70.0 (21.21)	DEG F (DEG C)	48-111.75	--	--
AO	8	NGT CLG STPT	82.0 (27.93)	DEG F (DEG C)	48-111.75	--	--
AO	9	NGT HTG STPT	65.0 (18.41)	DEG F (DEG C)	48-111.75	--	--
AO	10	OADPR MINPOS	14.8	PCT	0-102	--	--
AO	11	RM STPT MIN	55.0 (12.81)	DEG F (DEG C)	48-111.75	--	--
AO	12	RM STPT MAX	90.0 (32.41)	DEG F (DEG C)	48-111.75	--	--
AI	{13}	RM STPT DIAL	74.0 (23.45)	DEG F (DEG C)	48-111.75	--	--
BO	14	STPT DIAL	NO	--	Binary	YES	NO
AI	{15}	DISCH TEMP	74.0 (23.496)	DEG F (DEG C)	37.5-165	--	--
BO	17	FBP.MODVALVE	VALVE	--	Binary	FBP	VALVE
BO	18	WALL SWITCH	NO	--	Binary	YES	NO
BI	{19}	DI OVRD SW	OFF	--	Binary	ON	OFF
AO	20	OVRD TIME	1	HRS	0-255	--	--
BO	{21}	NGT OVRD	NIGHT	--	Binary	NIGHT	DAY
BO	22	AUX.NOAUX	NOAUX	--	Binary	AUX	NOAUX
BO	{23}	FREE CLG	DISABL	--	Binary	ENABLE	DISABL

Object Type a)	Object Instance (Point Number)	Object Name (Descriptor)	Factory Default (SI Units) b)	Eng Units (SI Units)	Range	Active Text	Inactive Text
BI	{24}	DI 2	OFF	--	Binary	ON	OFF
BI	{25}	DI 5	OFF	--	Binary	ON	OFF
BI	{26}	LOW TEMP DET	ON	--	Binary	OFF	ON
BO	27	ELEC.NOELEC	NOELEC	--	Binary	ELEC	NOELEC
BO	28	FBP.2PSVCTL	DISABL	--	Binary	ENABLE	DISABL
BO	{29}	DAY.NGT	DAY	--	Binary	NIGHT	DAY
BO	{30}	WRMUP.COOLDN	ON	--	Binary	ON	OFF
AO	31	AOV1 SPAN	10	VOLTS	0-10.23	--	--
AO	32	AOV1 START	0	VOLTS	0-10.23	--	--
AO	33	AOV2 SPAN	10	VOLTS	0-10.23	--	--
AO	34	AOV2 START	0	VOLTS	0-10.23	--	--
AO	35	AOV3 SPAN	10	VOLTS	0-10.23	--	--
AO	36	AOV3 START	0	VOLTS	0-10.23	--	--
AO	37	AO DIR.REV	0	--	0-255	--	--
AO	{38}	AOV1	0	VOLTS	0-10.23	--	--
AO	{39}	AOV2	0	VOLTS	0-10.23	--	--
AO	{40}	AOV3	0	VOLTS	0-10.23	--	--
BO	{41}	AUX RAD	OFF	--	Binary	ON	OFF
BO	{42}	DO 2	OFF	--	Binary	ON	OFF
BO	{43}	HTG 2POS VLV	OFF	--	Binary	ON	OFF
BO	{44}	DX	OFF	--	Binary	ON	OFF
BO	{45}	EHEAT 1	OFF	--	Binary	ON	OFF
BO	{46}	EHEAT 2	OFF	--	Binary	ON	OFF
BO	{47}	EHEAT 3	OFF	--	Binary	ON	OFF
AI	{48}	AI 3	0	PCT	0-102	--	--
AI	{49}	AUX TEMP AI4	74.0 (23.496)	DEG F (DEG C)	37.5-165	--	--
BO	{50}	FAN	OFF	--	Binary	ON	OFF
BI	{51}	DI 3	OFF	--	Binary	ON	OFF
BI	{52}	DI 4	OFF	--	Binary	ON	OFF
BO	53	NGT HW HTG	YES	--	Binary	YES	NO
BO	54	NGT CLG MODE	NO	--	Binary	YES	NO
AO	{55}	AUX OUTPUT	0	PCT	0-102	--	--

Object Type a)	Object Instance (Point Number)	Object Name (Descriptor)	Factory Default (SI Units) ^{b)}	Eng Units (SI Units)	Range	Active Text	Inactive Text
AO	57	AUX HTG TIME	10	MIN	0-255	--	--
AO	58	EHT STG DELY	30	SEC	0-255	--	--
AO	59	DO DIR.REV	0	--	0-255	--	--
AO	{60}	HTG OUTPUT	0	PCT	0-102	--	--
AO	{61}	CLG OUTPUT	0	PCT	0-102	--	--
AO	{62}	OA DMPR POS	0	PCT	0-102	--	--
AO	63	CLG P GAIN	1.6 (2.88)	--	0-51	--	--
AO	64	CLG I GAIN	0.05 (0.09)	--	0-2.0475	--	--
AO	65	CLG D GAIN	10 (18.0)	--	0-2046	--	--
AO	66	CLG BIAS	50	PCT	0-102.2	--	--
AO	67	HTG P GAIN	0.4 (0.72)	--	0-12.75	--	--
AO	68	HTG I GAIN	0.015 (0.027)	--	0-0.819	--	--
AO	69	HTG D GAIN	5 (9.0)	--	0-1023	--	--
AO	70	HTG BIAS	50	PCT	0-102.2	--	--
AO	71	ROOM P GAIN	2.3 (4.14)	--	0-12.75	--	--
AO	72	ROOM I GAIN	0.00504 (0.009072)	--	0-0.36855	--	--
AO	73	ROOM D GAIN	76 (136.8)	--	0-510	--	--
AO	74	ROOM BIAS	72.0 (22.376)	DEG F (DEG C)	37.5-165	--	--
AO	75	CMP MIN OFF	5	MIN	0-255	--	--
AO	76	CMP MIN ON	5	MIN	0-255	--	--
AO	{77}	AUX LOOPOUT	0	PCT	0-102.2	--	--
AO	{78}	CTL TEMP	74.0 (23.45)	DEG F (DEG C)	48-111.75	--	--
AO	{79}	CLG LOOPOUT	0	PCT	0-102.2	--	--
AO	{80}	HTG LOOPOUT	0	PCT	0-102.2	--	--
AO	{81}	AUX P GAIN	0.2 (0.36)	--	0-5.1	--	--
AO	{82}	AUX I GAIN	0.00054 (0.000972)	--	0-0.36855	--	--
AO	{83}	AUX D GAIN	24 (43.2)	--	0-255	--	--
AO	{84}	AUX BIAS	0	PCT	0-102.2	--	--
AO	85	SWITCH LIMIT	4.8	PCT	0-102	--	--

Object Type ^{a)}	Object Instance (Point Number)	Object Name (Descriptor)	Factory Default (SI Units) ^{b)}	Eng Units (SI Units)	Range	Active Text	Inactive Text
AO	86	SWITCH TIME	10	MIN	0-255	--	--
AO	88	NGT DBAND	3.0 (1.68)	DEG F (DEG C)	0-63.75	--	--
AO	89	MORN DBAND	2.0 (1.12)	DEG F (DEG C)	0-63.75	--	--
AO	90	SWITCH DBAND	2.0 (1.12)	DEG F (DEG C)	0-63.75	--	--
AO	{91}	AUX DSH STPT	80.0 (26.856)	DEG F (DEG C)	37.5-165	--	--
AO	{92}	CTL STPT	74.0 (23.45)	DEG F (DEG C)	48-111.75	--	--
AO	{93}	DISCH STPT	74.0 (23.496)	DEG F (DEG C)	37.5-165	--	--
AO	94	DSH MIN TEMP	60.0 (15.656)	DEG F (DEG C)	37.5-165	--	--
AO	95	DSH MAX TEMP	110.0 (43.656)	DEG F (DEG C)	37.5-165	--	--
AO	98	LOOP TIME	5	SEC	0-255	--	--
AO	{99}	ERROR STATUS	0	--	0-255	--	--
AO	122	AI 4 OFFSET	0.0 (0.0)	DEG F (DEG C)	-63.75	--	--
AO	123	AI 5 OFFSET	0.0 (0.0)	DEG F (DEG C)	-63.75	--	--
AO	124	STAT SUPV	0	--	0-255	--	--
AI	{125}	RM CO2	1000	PPM	0-8191	--	--
AI	{126}	RM RH	50	PCT	0-102	--	--
BO	{127}	PPCL STATE	IDLE	--	Binary	ACTIVE	IDLE

a) Object Types are; Analog Input (AI), Analog Output (AO), Binary Input (BI) and Binary Output (BO).

b) A single value in a column means that the value is the same in English units and in SI units.

c) Point numbers that appear in brackets { } may be unbundled at the field panel.