

# SIEMENS



## BACnet PTEC Controller

### Terminal Box (VAV) - Heating or Cooling, Application 6601

#### Application Note



# Table of Contents

<b>Overview .....</b>	<b>4</b>
BACnet .....	5
Hardware Inputs .....	5
Room Unit Identification .....	6
Hardware Outputs.....	6
Ordering Notes .....	6
<b>Sequence of Operation .....</b>	<b>7</b>
Control Temperature Setpoints .....	7
CTL STPT Using Standard/Absolute Mode (Digital Room Unit, Revision 26 and later) .....	7
CTL STPT Using Warmer/Cooler Mode (Digital Room Unit, Revision 26 and later) .....	8
CTL STPT Using Standard/Absolute Mode (Analog or Digital Room Unit) .....	8
CTL STPT Using Warmer/Cooler Mode (Analog Room Unit Only) .....	9
Heating/Cooling Switchover.....	9
Room Temperature, Room Temperature Offset and CTL TEMP.....	10
Day and Night Modes .....	10
Night Mode Override Switch .....	10
Ventilation Demand Minimum.....	11
Night Flow Minimum .....	11
Control Loops .....	11
Calibration .....	13
Room Unit Operation .....	13
Sensor Select .....	13
Room CO2.....	14
Room RH.....	14
Room DEW POINT .....	15
Auto Discovery.....	15
Auto Addressing .....	15
PPCL STATUS .....	15
Fail Mode Operation .....	15
Application Notes.....	15
Wiring Diagram .....	16
<b>Application 6601 Point Database .....</b>	<b>18</b>


## Overview




### NOTE:

For information on applications with Firmware Revision Bx40 or earlier, see InfoLink and/or Asset Portal for documentation.

In Application 6601, the controller modulates the supply air damper of the terminal box for cooling or heating. In order for it to work properly, the central air-handling unit must provide cool supply air in cooling mode and warm air during heating mode.

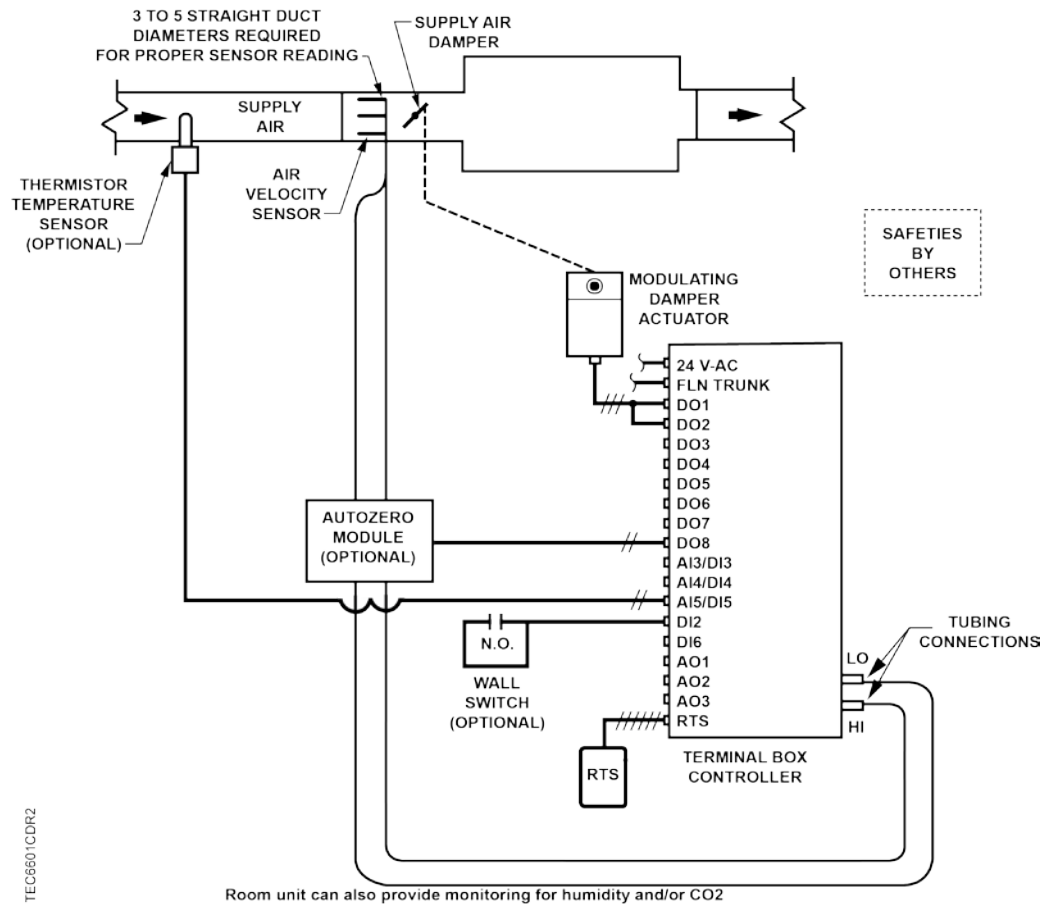

Application 6601 - VAV Cooling or Heating Control Diagram.

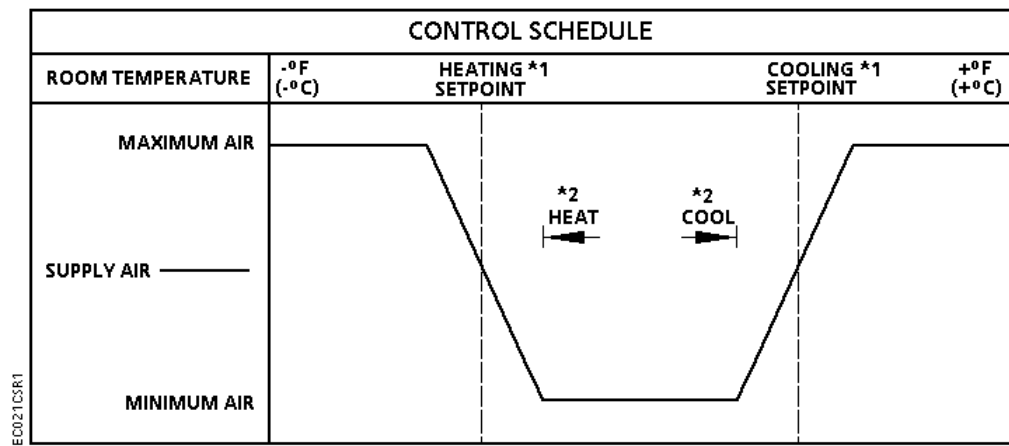

Application 6601 Control Schedule.

## BACnet

The controller communicates using BACnet MS/TP protocol for open communications on BACnet MS/TP networks.

Product	Supported BIBBs	BIBB Name
BTEC/PTEC	DS-RP-B B	Data Sharing-Read Property-B
	DS-RPM-B	Data Sharing-Read Property Multiple-B
	DS-WP-B	Data Sharing-Write Property-B
	DM-DDB-B	Device Management-Dynamic Device Binding-B
	DM-DOB-B	Device Management-Dynamic Object Binding-B
	DM-DCC-B	Device Management-Device Communication Control-B
	DM-RD-B	Device Management-Reinitialize Device-B
	DM-BR-B	Device Management-Backup and Restore-B
	DM-OCD-B	Device Management-Object Creation and Deletion-B
	CPT	Confirmed Private Transfer (Auto Discovery)
	UPT	Unconfirmed Private Transfer

## Hardware Inputs

### Analog

- Air velocity sensor
- Room temperature sensor
- Room temperature setpoint dial (optional)
- Duct temperature sensor (optional; PPCL commands can be used to perform a functional switch between heating and cooling supply.)

## Digital

- Night/Unoccupied mode override (optional)
- Wall switch (optional)
- Spare DI



---

### NOTE:

Digital Room Units (Firmware Revision 26 and later) will update their controlled inputs without putting them Out Of Service. However, a command from an external source through the digital room unit will put the associated BACnet Input point Out Of Service.

---

## Room Unit Identification

- For Analog Room Units – The revision number is visually identified by its case.
- For Digital Room Units (Firmware Revision 25 or earlier) – The revision number displays for 5 seconds when the room unit is first powered up. These room units will display `laptop` when a laptop is connected and will no longer update room temperature sensor values.
- For Digital Room Units (Firmware Revision 26 and later) – The revision number displays for 5 seconds when the room unit is first powered up or when a laptop is disconnected. These room units will continue to display and update the room temperature sensor values when a laptop is connected.

## Hardware Outputs

### Analog

- Spare AO 1, AO 2, and AO 3 (0-10V)

### Digital

- Damper actuator (DO 1/DO 2)
- Autozero module (optional) (DO 8)
- Spare DOs

## Ordering Notes

550-495PA      BACnet PTEC Terminal Box (VAV) Controller

## Sequence of Operation

The following paragraphs present the sequence of operation for Application 6601, VAV Cooling or Heating.

## Control Temperature Setpoints

### CTL STPT is Overridden:

If CTL STPT is overridden, that value is used regardless of any other settings. This disables the setpoint deadband feature.

### CTL STPT in Night Mode:

The controller is in Night Mode if DAY.NGT = NGT and NGT OVRD = NGT.

When the controller is in night mode, CTL STPT holds the value of NGT CLG STPT or NGT HTG STPT depending on the value of HEAT.COOL. When the controller is in night mode, the value of RM STPT DIAL is ignored.

### CTL STPT in Day Mode:

The controller is in Day Mode if DAY.NGT = DAY or NGT OVRD = DAY.

#### Without setpoint dial:

When the controller is in day mode and STPT DIAL = NO, CTL STPT holds the value of DAY CLG STPT or DAY HTG STPT depending on the value of HEAT.COOL.

#### With setpoint dial:

When the controller is in day mode and STPT DIAL = YES, CTL STPT holds a value based on RM STPT DIAL depending on your room unit model/revision.

The following sections describe the value of CTL STPT based on room unit type and configuration:

- CTL STPT using Standard/Absolute Mode (Digital Room Unit, Revision 26 and later)
- CTL STPT using Warmer/Cooler Mode (Digital Room Unit, Revision 26 and later)
- CTL STPT using Standard/Absolute Mode (Analog or Digital Room Unit)
- CTL STPT using Warmer/Cooler Mode (Analog Room Unit Only)



#### NOTE:

If RM STPT DIAL is failed, it maintains the last known value.

## CTL STPT Using Standard/Absolute Mode (Digital Room Unit, Revision 26 and later)

### Digital Room Unit (2200/2300 Series Firmware Revision 26 and later)

For all new digital room units, the value displayed and reported by the room unit is linked to the current heat/cool mode. When the mode changes, the value is automatically updated based on the new heat/cool mode.

When STPT SPAN is set to 0, the room setpoint adjustment on the digital room unit will function in a standard mode. The range of the adjustment will be based on RM STPT MIN and RM STPT MAX.

CTL STPT is set equal to RM STPT DIAL. The values for RM STPT MIN and RM STPT MAX will be applied to limit RM STPT DIAL before it is copied into CTL STPT.

## CTL STPT Using Warmer/Cooler Mode (Digital Room Unit, Revision 26 and later)

### Digital Room Unit (2200/2300 Series Firmware Revision 26 and later)



---

**NOTE:**

The warmer-cooler function is only available with BACnet PTEC controllers (standard 66xx apps).

---

When STPT SPAN is set to a value  $> 0$ , the room setpoint adjustment on the digital room unit will function in a warmer/cooler mode. The range of the adjustment will be calculated based on the current DAY CLG STPT or DAY HGT STPT and the STPT SPAN value. This will allow the Room Setpoint Dial to be incremented up or down from these setpoints by STPT SPAN.

CTL STPT is set equal to RM STPT DIAL. The values for RM STPT MIN and RM STPT MAX will be applied to limit RM STPT DIAL before it is copied into CTL STPT.

When STPT SPAN  $> 0$ , the minimum and maximum values for RM STPT DIAL are calculated as follows:

- Minimum lowest adjusted setpoint value is equal to DAY CLG STPT or DAY HTG STPT - STPT SPAN
- Maximum highest adjusted setpoint value is equal to DAY CLG STPT or DAY HTG STPT + STPT SPAN

#### Example in Cooling Mode

If the STPT SPAN is set to 2.0 degrees, and the DAY CLG STPT is 76°F, you can step up or down the room unit to adjust the RM STPT DIAL from 74°F to 78°F.

## CTL STPT Using Standard/Absolute Mode (Analog or Digital Room Unit)

### Analog (Series 1000) or Digital Room Units (Firmware Revision 25 or earlier)



---

**NOTE:**

2200/2300 digital room units with Firmware Revision 25 or earlier are only compatible with standard room unit functionality (no warmer/cooler).

---

When STPT SPAN is set to 0, CTL STPT is set based on the value of the setpoint dial and the setpoint deadband.

The setpoint deadband is the difference between the cooling and heating day setpoints (DAY CLG STPT - DAY HTG STPT). The setpoint deadband can be disabled by setting DAY HTG STPT equal to DAY CLG STPT. When DAY HTG STPT does not equal DAY CLG STPT, a setpoint deadband (or zero energy band) is used.

The following values are used in the calculation of CTL STPT:

- *Deadband* is the value of the difference between DAY CLG STPT and DAY HTG STPT and is used to establish the current heating and cooling setpoints.



- $Deadband = (DAY\ CLG\ STPT - DAY\ HTG\ STPT)$

CTL STPT is calculated as follows:

**With Deadband disabled:**

CTL STPT = RM STPT DIAL

**With Deadband enabled in Heat Mode:**

CTL STPT = RM STPT DIAL -  $0.5 * Deadband$

**With Deadband enabled in Cool Mode:**

CTL STPT = RM STPT DIAL +  $0.5 * Deadband$

CTL STPT is limited between the value of RM STPT MIN and RM STPT MAX

## CTL STPT Using Warmer/Cooler Mode (Analog Room Unit Only)

### Analog Room Unit (Series 1000)



**NOTE:**

The warmer-cooler function for analog room units (Series 1000) use the warmer/cooler scale of units with a warmer/cooler housing.

When SPTP SPAN > 0, the minimum and maximum values for RM STPT DIAL are calculated as follows:

- Minimum lowest adjusted setpoint value is equal to DAY CLG STPT or DAY HTG STPT - STPT SPAN
- Maximum highest adjusted setpoint value is equal to DAY CLG STPT or DAY HTG STPT + STPT SPAN

The full range of the analog room unit slider will be mapped to a range of minimum setpoint value to maximum setpoint value.

CTL STPT is set equal to RM STPT DIAL. The values for RM STPT MIN and RM STPT MAX will be applied to limit RM STPT DIAL before it is copied into CTL STPT.

**Example in Cooling Mode**

If the STPT SPAN is set to 2.0 degrees, and the DAY CLG STPT is 76°F, the room unit slider will adjust the cooling setpoint from 74°F to 78°F.

## Heating/Cooling Switchover

There are three options for the heating/cooling switchover for this application. In order for the controller to function properly, one of the following three options must be used:

1. A temperature sensor is installed in the supply air ductwork. The controller uses the measured temperature point, SUPPLY TEMP, to determine whether it is in heating or cooling mode.  
When SUPPLY TEMP < COOL TEMP, the controller sets HEAT.COOL to COOL, switching the controller to cooling mode.  
When SUPPLY TEMP > HEAT TEMP, the controller sets HEAT.COOL to HEAT, switching the controller to heating mode.
2. If the controller is connected to a field panel or PPCL in the controller, the field panel or PPCL can command SUPPLY TEMP.  
When SUPPLY TEMP is commanded below the value of COOL TEMP, the controller sets HEAT.COOL to COOL, switching the controller to cooling mode.

When SUPPLY TEMP is commanded above the value of HEAT TEMP, the controller sets HEAT.COOL to HEAT, switching the controller to heating mode.

3. If the controller is connected to a field panel or PPCL in the controller, the field panel or PPCL can switch the controller between heating and cooling modes by commanding HEAT.COOL to HEAT or COOL.

## Room Temperature, Room Temperature Offset and CTL TEMP

ROOM TEMP is the temperature that is being sensed by the room temperature sensor (RTS).

RMTMP OFFSET (or TEMP OFFSET) is a user-adjustable offset that will compensate for deviations between the value of ROOM TEMP and the actual room temperature.

CTL TEMP is the room temperature that is used for control purposes. In other words, the application is trying to maintain CTL TEMP at the control setpoint.

When CTL TEMP is not overridden, CTL TEMP and ROOM TEMP are related by the following equation:

$$\text{CTL TEMP} = \text{ROOM TEMP} + \text{RMTMP OFFSET (or TEMP OFFSET)}$$

If CTL TEMP is not overridden, then:

- The current value of ROOM TEMP (normal or overridden) is used to determine the value of CTL TEMP.
- If ROOM TEMP has a status of Failed, then last known good value of ROOM TEMP is used to determine the value of CTL TEMP.

If CTL TEMP is overridden then:

- CTL TEMP equals its overridden value and the points ROOM TEMP and TEMP (RMTMP) OFFSET have no effect on the value of CTL TEMP. Where  $\text{CTL TEMP} = \text{ROOM TEMP} + \text{RMTMP OFFSET}$ .

## Day and Night Modes

The day/night status of the space is determined by the status of DAY.NGT. The control of this point differs depending on whether the controller is monitoring the status of a wall switch or if the controller is connected to a field panel.

When a wall switch is physically connected to the termination strip on the controller at DI 2 (see the *Control Diagram* in the Overview section), and WALL SWITCH = YES, the controller monitors the status of DI 2. When the status of DI 2 is ON (the switch is closed), then DAY.NGT will be set to DAY indicating that the controller is in day mode. When the status is OFF (the switch is open), then DAY.NGT will be set to NIGHT indicating that the controller is in night mode.

When WALL SWITCH = NO, the controller does not monitor the status of the wall switch, even if one is connected to it. In this case, if the controller is operating stand-alone, then the controller stays in day mode all the time. If the controller is operating with centralized control (that is, it is connected to a field panel), then the field panel can send an operator or PPCL command to override the status of DAY.NGT.

## Night Mode Override Switch

If an override switch is present on the room temperature sensor and a value (in hours) other than zero has been entered into OVRD TIME, pressing the override switch will

reset the controller to DAY operational mode for the time period that is set in OVRD TIME. The status of NGT OVRD changes to DAY. After the override time elapses, the controller returns to night mode and the status of NGT OVRD changes back to NIGHT. The override switch on the room sensor will only affect the controller when it is in night mode.

## Ventilation Demand Minimum

Some VAV applications provide only two flow setpoints for minimum air flow control: minimum cooling and minimum heating (CLG FLOW MIN, HTG FLOW MIN). These setpoints are initially set during start-up and commissioning for each controller and include the zone ventilating requirements. In most cases, these minimum flow setpoints (and the maximum flow setpoints) are specified by the design engineer or the owner and are confirmed by the balancer and/or commissioning agent.

This VAV application has the ability to adjust the minimum flow setpoint for varying ventilation needs during occupied times. This may be done internally on controllers with PPCL, or externally via IAQ or DCV programs in a field panel. As the requirement may also exist to keep the cooling and heating flow minimum setpoints as originally specified, a new setpoint, ventilation demand minimum (VENT DMD MIN), is provided (and can be changed or written to as necessary).

The additional flow setpoint (VENT DMD MIN) is provided to allow setting and adjustment of the ventilation air required during occupied modes. VENT DMD MIN flow setpoint is used in conjunction with the existing cooling and heating flow minimum setpoints but only during the occupied modes.

VENT DMD MIN can be set above, equal to, or below CLG FLOW MIN or HTG FLOW MIN setpoints and the controlling minimum would be the larger of the two. This allows the cooling flow min to be set to zero and use the vent demand to control cooling and heating ventilation requirements.

VENT DMD MIN can be controlled (reset) externally, or by PPCL in the controller, for ventilation demands as based on CO2 or other indoor air quality requirements. Minimum air flow will be the larger of cooling flow min or heating flow min setpoints and the current ventilation demand flow setpoint. The control maximum flow setpoints are not affected by VENT DMD MIN.

## Night Flow Minimum

Some applications do not provide a distinction between day/occupied and night/unoccupied modes for the minimum air flow setpoints. For day/occupied operation, the cooling or heating minimum flow setpoints were designed to be the air flow for minimum cooling and ventilation or for air flow across heating coils. At night/unoccupied times the associated air handling unit was typically not running and therefore no distinction was necessary.

## Control Loops

The controller is controlled by three Proportional, Integral, and Derivative (PID) control loops; two temperature loops and a flow loop.

The two temperature loops are a cooling loop and a heating loop. The active temperature loop maintains room temperature at the value in CTL STPT. See *Control Temperature Setpoints*.

**Heating Loop** – Generates heating loopout which is then used to generate the FLOW STPT. FLOW STPT is the result of scaling the heating loopout to the appropriate range of values determined by HTG FLOW MIN and HTG FLOW MAX.

As described in the figure, the flow setpoint is calculated by:

$\text{FLOW STPT} = [\text{HTG LOOPOUT} \times (100\% - \% \text{ minimum setpoint})] + \% \text{ minimum setpoint}$ .

Where percent minimum setpoint is:

$\% \text{ minimum setpoint} = (\text{HTG FLOW MIN} / \text{HTG FLOW MAX}) \times 100 \%$

### Example

If HTG FLOW MIN = 100 cfm, and HTG FLOW MAX = 1000 cfm, the minimum flow setpoint is  $(100 \text{ cfm} / 1000 \text{ cfm}) \times 100\% \text{ flow} = 10\%$ .

When HTG LOOPOUT is 0%, FLOW STPT = 10% flow.

$[0\% \times (100\% - 10\%)] + 10\% = 10\%$

This ensures that the airflow out of the terminal box is no less than HTG FLOW MIN.

When HTG LOOPOUT is 50%, FLOW STPT = 55% flow.

$[50\% \times (100\% - 10\%)] + 10\% = 55\%$

When HTG LOOPOUT is 100%, FLOW STPT = 100% flow.

$[100\% \times (100\% - 10\%)] + 10\% = 100\%$

**Flow Loop** – The flow loop maintains FLOW STPT by modulating the supply air damper, DMPR COMD. The flow loop maintains the airflow between CTL FLOW MIN and CTL FLOW MAX.

#### DAY/OCCUPIED MODE

When the controller is in day cooling mode:

- CTL FLOW MIN = larger of CLG FLOW MIN and VENT DMD MIN, and CTL FLOW MAX = CLG FLOW MAX.

When the controller is in day heating mode:

- CTL FLOW MIN = larger of HTG FLOW MIN and VENT DMD MIN, and CTL FLOW MAX = HTG FLOW MAX.

#### NIGHT/UNOCCUPIED MODE

When the controller is in night cooling mode:

- CTL FLOW MIN = NGT FLOW MIN, and CTL FLOW MAX = CLG FLOW MAX.

When the controller is in night heating mode:

- CTL FLOW MIN = NGT FLOW MIN, and CTL FLOW MAX = HTG FLOW MAX.

To enhance stable flow control, an advanced algorithm is used to calculate a controllable setpoint as the value approaches zero cfm (lps).

When the controller is in cooling mode, CTL FLOW MIN = CLG FLOW MIN, and CTL FLOW MAX = CLG FLOW MAX.

When the controller is in heating mode, CTL FLOW MIN = HTG FLOW MIN, and CTL FLOW MAX = HTG FLOW MAX.

You can set CLG FLOW MIN equal to, but not greater than, CLG FLOW MAX. If the minimum and maximum values are set equal, the flow loop becomes a constant volume loop and loses its ability to control temperature.

FLOW is the input value for the flow loop. It is calculated as a percentage based on where AIR VOLUME is between 0 cfm and CTL FLOW MAX. This percentage is referred to as % flow.

- If AIR VOLUME = 0 cfm, FLOW is 0% flow.
- If AIR VOLUME = CTL FLOW MAX, FLOW is 100% flow.

The low limit of FLOW STPT will be the percentage that corresponds to the volume given in CTL FLOW MIN. This percentage can be calculated as:

$$(\text{CTL FLOW MIN} / \text{CTL FLOW MAX}) \times 100\% \text{ flow}$$

The flow loop ensures that the supply air will not be less than CTL FLOW MIN.

### Example

If CTL FLOW MIN = 250 cfm, and CTL FLOW MAX = 1000 cfm,  
the low limit of FLOW STPT =  $(250 \text{ cfm} / 1000 \text{ cfm}) \times 100\% \text{ flow}$   
=  $0.25 \times 100\% \text{ flow}$   
= 25% flow.

Since 25% of 1000 cfm = 250 cfm, the minimum airflow out of the terminal box will be 250 cfm.

## Calibration

Calibration of the controller's internal air velocity sensor(s) is periodically required to maintain accurate air velocity readings. CAL SETUP is set with the desired calibration option during controller startup.

Depending on the value of CAL SETUP, calibration may be set to take place automatically or manually. If CAL AIR = YES, calibration is in progress.

- For a controller used without an Autozero Module (CAL MODULE, = NO), the damper is commanded closed to get a zero airflow reading during calibration.
- For a controller used with an Autozero Module (CAL MODULE = YES), calibration occurs without closing the damper.



### CAUTION

On long board controllers, the Autozero Module is connected to DO 8.

At the end of a calibration sequence, CAL AIR automatically returns to NO. A status of NO indicates that the controller is not in a calibration sequence.

The Autozero Module is enabled when it is wired to DO 8 and CAL MODULE is set to YES.

### Floating Control Actuation Auto-correct

In addition to the existing options for floating control actuator full stroke actions, all floating control actuators are provided with additional logic to fully drive open or closed when commanded to 100% or 0%.

## Room Unit Operation

### Sensor Select

SENSOR SEL is a configurable, enumerated point (values are additive). This point tells the controller what type of room unit is being used and how to handle loss of data. It

also provides the ability to enable the optional RH and CO2 sensors and which thermistor type is connected.

### Room Temperature, Setpoint, RH and CO2

- When the digital room unit (Series 2200/2300) is used, SENSOR SEL selects the source for temperature and setpoint and enables a loss of communications indication:
  - Temperature/Setpoint enable and supervision for fail communications (temperature) with a value of 1.
  - Relative humidity enable and supervision for fail communications with a value of 2.
  - CO2 enable and supervision for fail communications with a value of 4.
- When the analog room unit (Series 1000/2000) is used, default temperature sensing (0) from an analog room unit is enabled (relative humidity and CO2 sensing are not available and should not be selected).

### Thermistor Inputs

- Default for either input is 10K.
- To enable 100K thermistor on input, see the following table for additive values of 8 or 16.

### Other Inputs (only available on Digital Room Unit)

- Use the following table to select and enable communications supervision of room temperature/setpoint dial, relative humidity and CO2 for additive values of 1, 2 and 4.

SENSOR SEL Value * (additive)	Description (include values to enable feature)
1	Select Digital Room Unit (for temperature sensing and setpoint dial)
2	Relative Humidity (RH) sensing
4	CO <sub>2</sub> sensing
8	If short board: 100K $\Omega$ thermistor on AI 3 (else input is 10K $\Omega$ ) If long board: 100K $\Omega$ thermistor on AI 5 (else input is 10K $\Omega$ )
16	Long board only: 100K $\Omega$ thermistor on AI 4 (else input is 10K $\Omega$ )

### Room CO2

RM CO2 displays the CO<sub>2</sub> value in units of parts-per-million (PPM). RM CO2 (from the digital 2200/2300 room units) can be used with PPCL in the PTEC/ATEC controller or unbundled for control or monitoring purposes.

### Room RH

RM RH displays the relative humidity value in percent. RM RH can be used for PPCL in the PTEC or unbundled for control or monitoring purposes.

RM RH displays the relative humidity value in percent.

## Room DEW POINT

The controller provides a calculation for DEW POINT temperature in Fahrenheit degrees (or Celsius degrees) using room temperature (using CLT TEMP) and room humidity (using RM RH). This calculation is valid for ranges of 55°F (12.8°C) to 95°F (35°C) and 20 to 100% relative humidity.

## Auto Discovery

Auto Discovery allows you to automatically discover and identify PTEC/ATEC controllers on the BACnet MS/TP Network. There are two basic configurations:

- Devices not configured with an address. (Devices are discovered by their unique serial number.)
- Devices configured with an address and available for modification.

## Auto Addressing

Auto Addressing allows you to automatically assign device addresses to a PTEC controller on the BACnet MS/TP Network. If a controller is not configured with a MAC address, you have the option to auto-address or manually address the controller. During this time the baud rate is automatically detected by the controller.

Controller(s) must be connected on the BACnet/IP network in order for automatic addressing to occur.

## PPCL STATUS

PPCL STATUS displays LOADED or EMPTY.

- LOADED = PPCL programming is present in the controller. A new application number must be assigned (12000 through 12999).
- EMPTY = NO PPCL programming is present.

The maximum number of PPCL dynamic points is 15.

## Fail Mode Operation

If the air velocity sensor fails, the controller uses pressure dependent control. The temperature loop controls the operation of the damper.

If the room temperature sensor fails, the controller operates using the last known temperature value.

## Application Notes

- If temperature swings in the room are excessive or there is trouble maintaining the setpoint, the cooling loop needs to be tuned. If FLOW is oscillating while FLOW STPT is constant, the flow loop requires tuning.
- The controller, as shipped from the factory, keeps all associated equipment OFF. See the appropriate *Start-up Procedures* for information on how to release the controller and its equipment to application control.
- Spare DOs can be used as auxiliary points that are controlled by the field panel after being defined in the field panel's database.

## Wiring Diagram


**NOTE:**

The controller's DOs control 24 Vac loads only. The maximum rating is 12 VA for each DO. An external interposing relay is required for any of the following:

- VA requirements higher than the maximum
- 110 or 220 Vac requirements
- DC power requirements
- Separate transformers used to power the load  
(for example part number 540-147, Terminal Equipment Controller Relay Module)

**NOTE:**

Thermistor inputs are 10K (default) or 100K software selectable (AUX TEMP AI X).

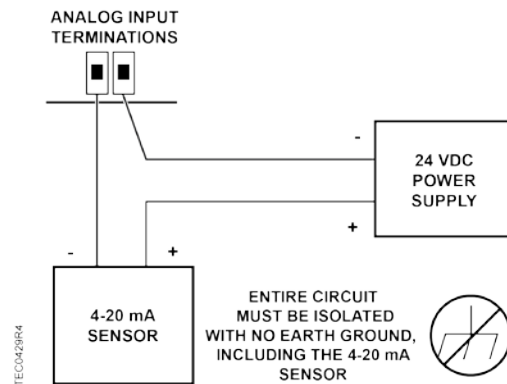

*Wiring for AI with a 4 to 20 mA Sensor.*

**CAUTION**


Each 4-20 mA sensor requires a **SEPARATE** dedicated power limited 24 VDC power supply.

DO NOT use the same transformer to power both the sensor and the controller.

**NOTE:**

 If the voltage/current switch is set to current and a 4 to 20 mA sensor is connected to an AI, then special wiring requirements must be followed.





### Application 6601 – Variable Air Volume Cooling or Heating.

## Application 6601 Point Database

Object Type <sup>1</sup>	Object Instance (Point Number)	Object Name (Descriptor)	Factory Default (SI Units) <sup>2</sup>	Eng Units (SI Units)	Range	Active Text	Inactive Text
AO	1	CTLR ADDRESS	255	--	0-255	--	--
AO	2	APPLICATION	6687	--	0-32767	--	--
AO	3	RMTMP OFFSET	0.0 (0.0)	DEG F (DEG C)	-31.75-32	--	--
AI	{04}	ROOM TEMP	74.0 (23.44888)	DEG F (DEG C)	48-111.75	--	--
BO	{05}	HEAT.COOL	COOL	--	Binary	HEAT	COOL
AO	6	DAY CLG STPT	74.0 (23.44888)	DEG F (DEG C)	48-111.75	--	--
AO	7	DAY HTG STPT	70.0 (21.20888)	DEG F (DEG C)	48-111.75	--	--
AO	8	NGT CLG STPT	82.0 (27.92888)	DEG F (DEG C)	48-111.75	--	--
AO	9	NGT HTG STPT	65.0 (18.40888)	DEG F (DEG C)	48-111.75	--	--
BI	{10}	DI 6	OFF	--	Binary	ON	OFF
AO	11	RM STPT MIN	55.0 (12.80888)	DEG F (DEG C)	48-111.75	--	--
AO	12	RM STPT MAX	90.0 (32.40888)	DEG F (DEG C)	48-111.75	--	--
AI	{13}	RM STPT DIAL	74.0 (23.44888)	DEG F (DEG C)	48-111.75	--	--
BO	14	STPT DIAL	NO	--	Binary	YES	NO
AI	{15}	SUPPLY TEMP	74.0 (23.495556)	DEG F (DEG C)	37.5-165	--	--
BO	18	WALL SWITCH	NO	--	Binary	YES	NO
BI	{19}	DI OVRD SW	OFF	--	Binary	ON	OFF
AO	20	OVRD TIME	0	HRS	0-255	--	--
BO	{21}	NGT OVRD	NIGHT	--	Binary	NIGHT	DAY
BI	{24}	DI 2	OFF	--	Binary	ON	OFF
BI	{25}	DI 5	OFF	--	Binary	ON	OFF
BO	{29}	DAY.NGT	DAY	--	Binary	NIGHT	DAY
AO	31	CLG FLOW MIN	220 (103.818)	CFM ( LPS)	0-131068	--	--
AO	32	CLG FLOW MAX	2200 (1038.18)	CFM ( LPS)	0-131068	--	--
AO	33	HTG FLOW MIN	220 (103.818)	CFM ( LPS)	0-131068	--	--

Object Type <sup>1</sup>	Object Instance (Point Number)	Object Name (Descriptor)	Factory Default (SI Units) <sup>2</sup>	Eng Units (SI Units)	Range	Active Text	Inactive Text
AO	34	HTG FLOW MAX	2200 (1038.18)	CFM ( LPS)	0-131068	--	--
AI	{35}	AIR VOLUME	0 (0.0)	CFM ( LPS)	0-131068	--	--
AO	36	FLOW COEFF	1	--	0-2.55	--	--
AO	{37}	MTR3 COMD	0	PCT	0-102	--	--
AO	{38}	MTR3 POS	0	PCT	0-102	--	--
AO	39	MTR3 TIMING	130	SEC	0-511	--	--
BI	{40}	DI 4	OFF	--	Binary	ON	OFF
BO	{41}	DO 1	OFF	--	Binary	ON	OFF
BO	{42}	DO 2	OFF	--	Binary	ON	OFF
BO	{43}	DO 3	OFF	--	Binary	ON	OFF
BO	{44}	DO 4	OFF	--	Binary	ON	OFF
BO	{45}	DO 5	OFF	--	Binary	ON	OFF
BO	{46}	DO 6	OFF	--	Binary	ON	OFF
AO	{48}	DMPR COMD	0	PCT	0-102	--	--
AO	{49}	DMPR POS	0	PCT	0-102	--	--
AI	{50}	AI 4	74.0 (23.495556)	DEG F (DEG C)	37.5-165	--	--
AO	51	MTR1 TIMING	95	SEC	0-511	--	--
AO	{52}	MTR2 COMD	0	PCT	0-102	--	--
AO	{53}	MTR2 POS	0	PCT	0-102	--	--
AI	{54}	AI3	0	PCT	0-102	--	--
AO	55	MTR2 TIMING	130	SEC	0-511	--	--
AO	56	DMPR ROT ANG	90	--	0-255	--	--
AO	58	MTR SETUP	0	--	0-255	--	--
AO	59	DO DIR. REV	0	--	0-255	--	--
AO	61	COOL TEMP	65.0 (18.455556)	DEG F (DEG C)	37.5-165	--	--
AO	62	HEAT TEMP	80.0 (26.855556)	DEG F (DEG C)	37.5-165	--	--
AO	63	CLG P GAIN	20.0 (36.0)	--	0-63.75	--	--
AO	64	CLG I GAIN	0.01 (0.018)	--	0-1.023	--	--
AO	65	CLG D GAIN	0 (0.0)	--	0-510	--	--
AO	{66}	AOV 1	0	VOLTS	0-10.23	--	--
AO	67	HTG P GAIN	10.0 (18.0)	--	0-63.75	--	--
AO	68	HTG I GAIN	0.01 (0.018)	--	0-1.023	--	--
AO	69	HTG D GAIN	0 (0.0)	--	0-510	--	--

Object Type <sup>1</sup>	Object Instance (Point Number)	Object Name (Descriptor)	Factory Default (SI Units) <sup>2</sup>	Eng Units (SI Units)	Range	Active Text	Inactive Text
AO	{70}	AOV 2	0	VOLTS	0-10.23	--	--
AO	71	FLOW P GAIN	0	--	0-51.15	--	--
AO	72	FLOW I GAIN	0.01	--	0-1.023	--	--
AO	73	FLOW D GAIN	0	--	0-510	--	--
AO	74	FLOW BIAS	50	PCT	0-102	--	--
AO	{75}	FLOW	0	PCT	0-1023.75	--	--
AO	{76}	CTL FLOW MIN	220 (103.818)	CFM ( LPS)	0-131068	--	--
AO	{77}	CTL FLOW MAX	2200 (1038.18)	CFM ( LPS)	0-131068	--	--
AO	{78}	CTL TEMP	74.0 (23.44888)	DEG F (DEG C)	48-111.75	--	--
AO	{79}	CLG LOOPOUT	0	PCT	0-102	--	--
AO	{80}	HTG LOOPOUT	0	PCT	0-102	--	--
BO	87	CAL MODULE	NO	--	Binary	YES	NO
AO	{91}	AOV 3	0	VOLTS	0-10.23	--	--
AO	{92}	CTL STPT	74.0 (23.44888)	DEG F (DEG C)	48-111.75	--	--
AO	{93}	FLOW STPT	0	PCT	0-255.75	--	--
BO	{94}	CAL AIR	NO	--	Binary	YES	NO
AO	95	CAL SETUP	4	--	0-255	--	--
AO	96	CAL TIMER	12	HRS	0-255	--	--
AO	97	DUCT AREA	1.0 (0.09292)	SQ. FT (SQ M)	0-6.375	--	--
AO	98	LOOP TIME	5	SEC	0-255	--	--
AO	{99}	ERROR STATUS	0	--	0-255	--	--
BO	{102}	DO 7	OFF	--	Binary	ON	OFF
BO	{103}	DO 8	OFF	--	Binary	ON	OFF
AO	104	NGT FLOW MIN	0 (0.0)	CFM ( LPS)	0-131068	--	--
AO	{105}	VENT DMD MIN	220 (103.818)	CFM ( LPS)	0-131068	--	--
AO	106	STPT SPAN	0.0 (0.0)	DEG F (DEG C)	0-63.75	--	--
AI	{121}	DEW POINT	0	DEG F (DEG C)	48-111.75	--	--
AO	124	SENSOR SEL	0	--	0-255	--	--
AI	{125}	RM CO2	1000	PPM	0-8191	--	--
AI	{126}	RM RH	50	PCT	0-102	--	--
BO	{127}	PPCL STATE	EMPTY	--	Binary	LOADED	EMPTY



- 
- 1) Object Types are; Analog Input (AI), Analog Output (AO), Binary Input (BI) and Binary Output (BO).
  - 2) A single value in a column means that the value is the same in English units and in SI units.
  - 3) Point numbers that appear in brackets { } may be unbundled at the field panel.

Issued by  
Siemens Industry, Inc.  
Building Technologies Division  
1000 Deerfield Pkwy  
Buffalo Grove IL 60089  
Tel. +1 847-215-1000

© 2014 Siemens Industry, Inc.  
Technical specifications and availability subject to change without notice.