
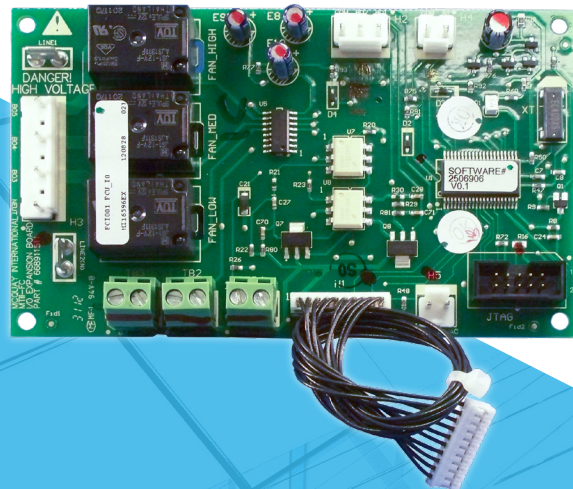


MICROTECH[®] CONTROLLER

MTIII UNIT CONTROLLER WITH I/O EXPANSION MODULE FOR FAN COILS

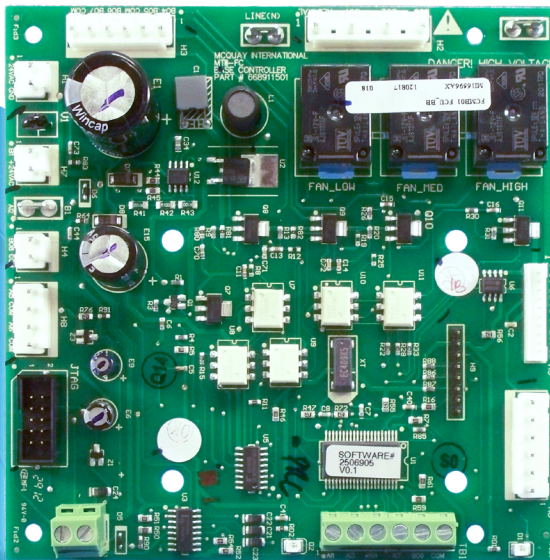

Safety Information	3	Alarms	17
Hazard Identification	3	Alarm Control Modes	17
Safety Considerations	3	Definitions	18
Introduction	3	Miscellaneous Control Definitions	18
MicroTech III Baseboard	4	MTIII Circuit Board Replacement	19
Control Inputs	4	Replacing a MicroTech Circuit Board	19
Control Outputs	5	Equipment Configuration Settings	19
I/O Expansion Module	6	Communication Modules	20
I/O Expansion Board Inputs & Outputs	6	Typical Wiring Diagrams	22
Input Description	6		
Output Description	6		
Connections and Terminals	7		
Operation	11		
Fan Coil/Cabinet Unit Heater Unit Control	11		
Fan Coil/Cabinet Unit Heater Control Output Tables	11		
Operating Modes	13		

©2026 Daikin Applied, Minneapolis, MN. All rights reserved throughout the world. This document contains the most current product information as of this printing. Daikin Applied Americas Inc. has the right to change the information, design, and construction of the product represented within the document without prior notice. For the most up-to-date product information, please go to www.DaikinApplied.com.

™@ MicroTech, ThinLine, and Daikin Applied are trademarks or registered trademarks of Daikin Applied Americas Inc. The following are trademarks or registered trademarks of their respective companies: BACnet from American Society of Heating, Refrigerating and Air-Conditioning Engineers, Inc.; Modbus from Schneider Electric; and Windows from Microsoft Corporation.

Safety Information

Hazard Identification



DANGER

Danger indicates a hazardous situation, which will result in death or serious injury if not avoided.



WARNING

Warning indicates a potentially hazardous situation, which can result in property damage, personal injury, or death if not avoided.



CAUTION

Caution indicates a potentially hazardous situation, which can result in minor injury or equipment damage if not avoided.

NOTICE

Notice indicates practices not related to physical injury.

NOTE: Indicates important details or clarifying statements for information presented in Figures or Tables.

Safety Considerations

This manual provides installation, operation, and maintenance information for a Daikin Applied MicroTech III Unit Controller.



DANGER

LOCKOUT/TAGOUT all power sources prior to service, pressurizing, depressurizing, or powering down the unit. Failure to follow this warning exactly can result in serious injury or death. Disconnect electrical power before servicing the equipment. More than one disconnect may be required to de-energize the unit. Be sure to read and understand the installation, operation, and service instructions within this manual.



WARNING

Electric shock hazard. Improper handling of this equipment can cause personal injury or equipment damage. This equipment must be properly grounded. Connections to and service of the MicroTech control panel must be performed only by personnel that are knowledgeable in the operation of the equipment being controlled.



CAUTION

Static sensitive components. A static discharge while handling electronic circuit boards can cause damage to the components. Discharge any static electrical charge by touching the bare metal inside the control panel before performing any service work. Never unplug any cables, circuit board terminal blocks, or power plugs while power is applied to the panel.

NOTICE

Installation and maintenance are to be performed only by licensed, if required by local codes and regulations, or qualified personnel who are familiar with local codes and regulations and are experienced with this type of equipment.

NOTICE

QUEBEC DISCLOSURE REGARDING AVAILABILITY OF REPLACEMENT PARTS, REPAIR SERVICES AND INFORMATION FOR MAINTENANCE AND REPAIR: Daikin Applied Americas Inc. (Daikin Applied) does not guarantee the availability of (1) replacement parts; (2) repair services; and (3) information necessary to maintain or repair products, within the meaning of section 39.1 of the Consumer Protection Act, CQLR, c P-40.1 and section 79.18 of the Regulation respecting the application of the Consumer Protection Act, CQLR, c P-40.1, r. 3.

AVIS POUR LE QUÉBEC CONCERNANT LA DISPONIBILITÉ DES PIÈCES DE RECHANGE, DES SERVICES DE RÉPARATION ET DES RENSEIGNEMENTS POUR L'ENTRETIEN ET LA RÉPARATION : Daikin Applied Americas Inc. (Daikin Applied) ne garantit pas la disponibilité (1) des pièces de rechange, (2) des services de réparation et (3) des renseignements pour l'entretien et la réparation, au sens de l'article 39.1 de la Loi sur la protection du consommateur, RLRQ c P-40.1 et de l'article 79.18 du Règlement d'application de la Loi sur la protection du consommateur, RLRQ c P-40.1, r. 3.

Introduction

The MicroTech unit controller is a fan coil/cabinet unit heater control platform used to control the fan coil/unit heater in all modes of operation, including economizers, control valves, and all components used to control conditioned space temperature. By adding a communication module, (LonWorks or BACnet) network integration is possible. The controller can be used with wall sensor control only.

No outside power sources may be used to operate MicroTech controller. All units must be properly grounded per local code requirements. See the fan coil unit installation manual for specific power requirements.

For information on LonWorks® or BACnet® communication modules and other ancillary components see:

- IM 1012 — MicroTech III Fan Coil LonWorks Communication Module.
- IM 1013 — MicroTech III Fan Coil Unit Controller BACnet MS/TP Communication Module.
- IM 933 — LonWorks Plug-In Software for use with MicroTech III Unit Controller - LonWorks Communication Module.
- IM 1171 — Digitally Adjustable Display Sensor Installation and Maintenance Manual
- OM 1095 — MicroTech III The Downloading And Configuration Procedure
- ED 15135 — MicroTech III Fan Coil Unit Controller Protocol Information

MicroTech III Baseboard

Control Inputs

The baseboard accepts the following analog and binary control inputs:

• Room Temp and Tenant Override	Analog
• Local Setpoint Adjust	Analog
• Fan Mode/Speed Switch	Analog
• Entering Water Temperature (EWT)	Analog
• Discharge Air Temperature (DAT)	Analog
• Heat/Cool/Auto Mode Switch	Analog
• Freeze Fault Detection	Binary
• Occupancy Sensor	Binary
• Condensate Overflow	Binary

Input Description

Room or Return Air Temp & Tenant Override

Analog input may be used to measure Room or Return Air temperature using a 10k NTC thermistor. The same analog input is used to sense the position of the timed override switch when a room sensor is applied. This sensor is mandatory in the Fan Coil/Cabinet Unit Heater units unless the input value is provided through network communications.

Condensate Overflow

Analog input may be used to detect the presence of water in condensate pan. While the input is analog (microOhms), the result of the algorithm is binary (dry or wet). If the value is below 2.5 microOhms, the pan is dry. If the value is above 2.5 microOhms, the pan is wet. Ultimately the pan is considered dry for analog inputs above 1.8 VDC.

Local Setpoint Adjust

Analog input may be used to determine hardwired setpoint position based on a 1.5K Ω potentiometer that is mounted on the room temperature sensor. Setpoint is at its minimum value at 0 Ohms (0.0 VDC), maximum value at 1.5K Ohms (3.0 VDC). Range of input is determined by the setting of an equipment configuration bit. Long range input is limited by Max and Min clamp settings. Either "Short" or "Long" range is selected during the unit order and preset at the Daikin Applied factory. See "nciSoftJumpers" in Table 18 for specification details.

- If "Short Range" is selected, the nvoSetptShift variables are used.
- If "Long Range" is selected, the nvoSetpoint variable is used.


Fan Mode/Speed Switch

Analog input may be used to determine the position of the fan mode and speed switch. Input DC voltages are defined as follows: 0.0v = Auto, 1.0v = High, 2.0v = Medium, 3.0v = Low, 4.0v = Off, 5.0v = Switch is not present.

Entering Water Temperature (EWT)

Analog input may be used to measure temperature of water entering the hydronic coil using a 10k NTC thermistor. The sensor is only required in 2-Pipe Cooling/Heating systems or Heating-only with Supplemental Electric Heat, and is optional elsewhere.

Figure 1: MicroTech Baseboard

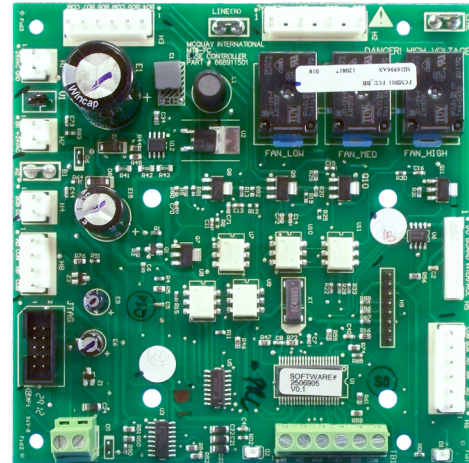

Discharge Air Temperature (DAT)

Analog input may be used to measure discharge air temperature sensor using a 10k NTC thermistor.

Heat/Cool/Auto Mode Switch

Analog input may be used to determine the position of the heat/cool/auto mode switch. Input DC voltages are defined as follows: 0.0v = Cool, 1.0v = Auto, 2.5v = Heat, 5.0v = Switch is not present.

Freeze Fault Detection

Binary input may be used to detect the position of a low discharge air temperature freeze fault detection switch. The sensor part of the switch is installed in the air stream. If the contact on the switch is open, the temperature in the air stream is below freezing (alarm active). If the contact on the switch is closed, the temperature in the air stream is above freezing (alarm inactive). Must use "nciSoftJumpers" to enable or disable this input. See Table 18. Input span is 0.0 to 3.6 VDC, with a threshold of 1.5 VDC.

NOTICE

Freezestat sensor should be provided from the factory or field-supplied.

Occupancy Sensor

Binary input may be used to detect the position of an occupancy sensor. This could be a motion detector or a time clock. Open sensor contact represents occupied, closed sensor contact represents unoccupied. Network-effective occupancy has priority over position of this input. Input span is 0.7 (unoccupied) to 5.0 VDC (occupied), with a threshold of 2.85 VDC.

NOTICE

Occupancy sensor is field-supplied.

Control Outputs

The MicroTech baseboard provides the following Binary Outputs:

- Fan Low Speed
- Fan Medium Speed
- Fan High Speed
- Valve Output #1
- Valve Output #2
- Valve Output #3/Electric Heat S1
- Valve Output #4
- Fresh (Outside) Air Damper – 2-Position only.
- Room Sensor Status Output

Output Description

Each binary output is either a relay with normally-open contacts or a triac. A triac is treated like a relay with normally-open contacts. In other words, energizing the triac is like closing a normally-open contact.

Fan Speed Outputs

There are three fan speed outputs on the baseboard, and three fan speed outputs on the I/O expansion board. The two separate fans operate in unison. In other words – if the low speed output on the baseboard is energized, the low speed output on I/O expansion board is also energized, etc. If all three outputs are de-energized, the fan motor is off. Only a single type (low, medium, high) of speed output shall be turned on when fan operation is required.

Low Speed

This binary output is used to operate the fan at low speed. If this output is energized, the fan operates at low speed.

Medium Speed

This binary output is used to operate the fan at medium speed. If this output is energized, the fan operates at medium speed.

High Speed

This binary output is used to operate the fan at high speed. If this output is energized, the fan operates at high speed.

Two-Position Damper Output

Binary output may be used to open a fresh air ventilation damper. If the output is de-energized, the damper is closed. If the output is energized, the damper is open.

Room Sensor Status Output

Binary output may be used to energize and de-energize an indicator located on the room sensor. See [Table 1](#).

Table 1: Room Sensor Status Output Annunciation

Condition	Indicator On Time (Sec)	Indicator Off Time (Sec)
Alarm Active: Specific Alarm Determines Number of Flashes (See Alarms section)	0.3	0.3 (1.3 Between Cycles)
Calibration or Network Wink Active	3.0	3.0
Service Test Mode	0.0	Continually
Unoccupied Mode	0.5	5.5
Standby Mode	5.5	0.5
Occupied, Bypass Mode	Continually	0.0

NOTE: Annunciation conditions are listed in order of priority.

Table 2: Baseboard Diagnostic LED Annunciation

Diagnostic LED State	Condition
LED #1: On Steady	Normal I/O Expansion Board SPI Communications
LED #1: Flashing	Failed I/O Expansion Board SPI Communications
LED #2: On Steady	Normal Comm Module SPI Communications
LED #2: Flashing	Failed Comm Module SPI Communications

I/O Expansion Module

The I/O Expansion Module is an extension of the main board and provides extra functionality to the MicroTech control system. The MicroTech unit controller in combination with the I/O Expansion Module will be the standard control system for ThinLine Fan Coils and Cabinet Unit Heaters. See [Figure 2](#).

Adding an I/O Expansion Module (with an interconnect cable) to the main controller allows:


- Economizer Control
- Second Fan Motor Control
- Additional Control Inputs

I/O Expansion Board Inputs & Outputs

I/O expansion board accepts the following inputs:

- Outdoor Air Temperature (OAT) – Analog
- Dirty Air Filter – Binary [Dirty Filter indication uses timer only.]

Figure 2: MicroTech I/O Expansion Module

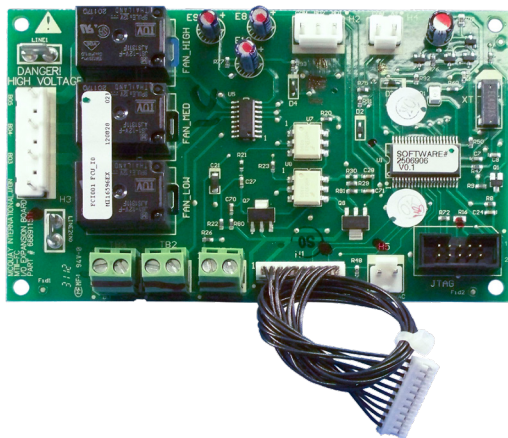

Input Description

Outdoor (Fresh) Air Temperature (OAT)

Analog input may be used to measure outdoor air temperature using a 10k NTC thermistor.

Dirty Air Filter

Binary input may be used to detect Dirty Filter condition. Dirty air filter alarm is active when the input contact opens. Must use “nciSoftJumpers” to enable or disable this input. See [Table 18](#) for details. Input span is 0.0 to 3.6 VDC, with a threshold of 1.5 VDC.

NOTICE

Dirty Filter input uses timer signal only.

Output Description

I/O Expansion Board provides the following binary Outputs:

- Economizer Open
- Economizer Closed
- Fan Low Speed
- Fan Medium Speed
- Fan High Speed

Economizer Control Outputs

I/O expansion board binary outputs 1 and 2 may be used for economizer control. Output #1 drives the economizer toward the open position. Output #2 drives the economizer toward the closed position.

Second Fan Motor Speed Outputs

There are three fan speed outputs on the baseboard, and three fan speed outputs on the I/O expansion board. The two separate fans operate in unison. If the low speed output on the baseboard is energized, the low speed output on the I/O expansion board is also energized, etc. If all three outputs are de-energized, the fan motor is off. Only a single type (low, medium, high) of speed output shall be turned on when fan operation is required.

Low Speed

This binary output is used to operate the fan at low speed. If this output is energized, the fan operates at low speed.

Medium Speed

This binary output is used to operate the fan at medium speed. If this output is energized, the fan operates at medium speed.

High Speed

This binary output is used to operate the fan at high speed. If this output is energized, the fan operates at high speed.

Table 3: I/O Expansion Board Diagnostic LED Annunciation

Condition	LED On Time (Sec)	LED Off Time (Sec)
SPI Communications Receive (RX) Fail	0.5	0.5
SPI Communications Transmit (TX) Fail (From Baseboard)	2.5	2.5
Normal SPI Communications	Continually	0.0

NOTE: Annunciation conditions are listed in order of priority.

Connections and Terminals

Figure 3: MicroTech Unit Controller & I/O Expansion Module Connectors Descriptions

MTIII-FC Base Controller Layout (Not to Scale)

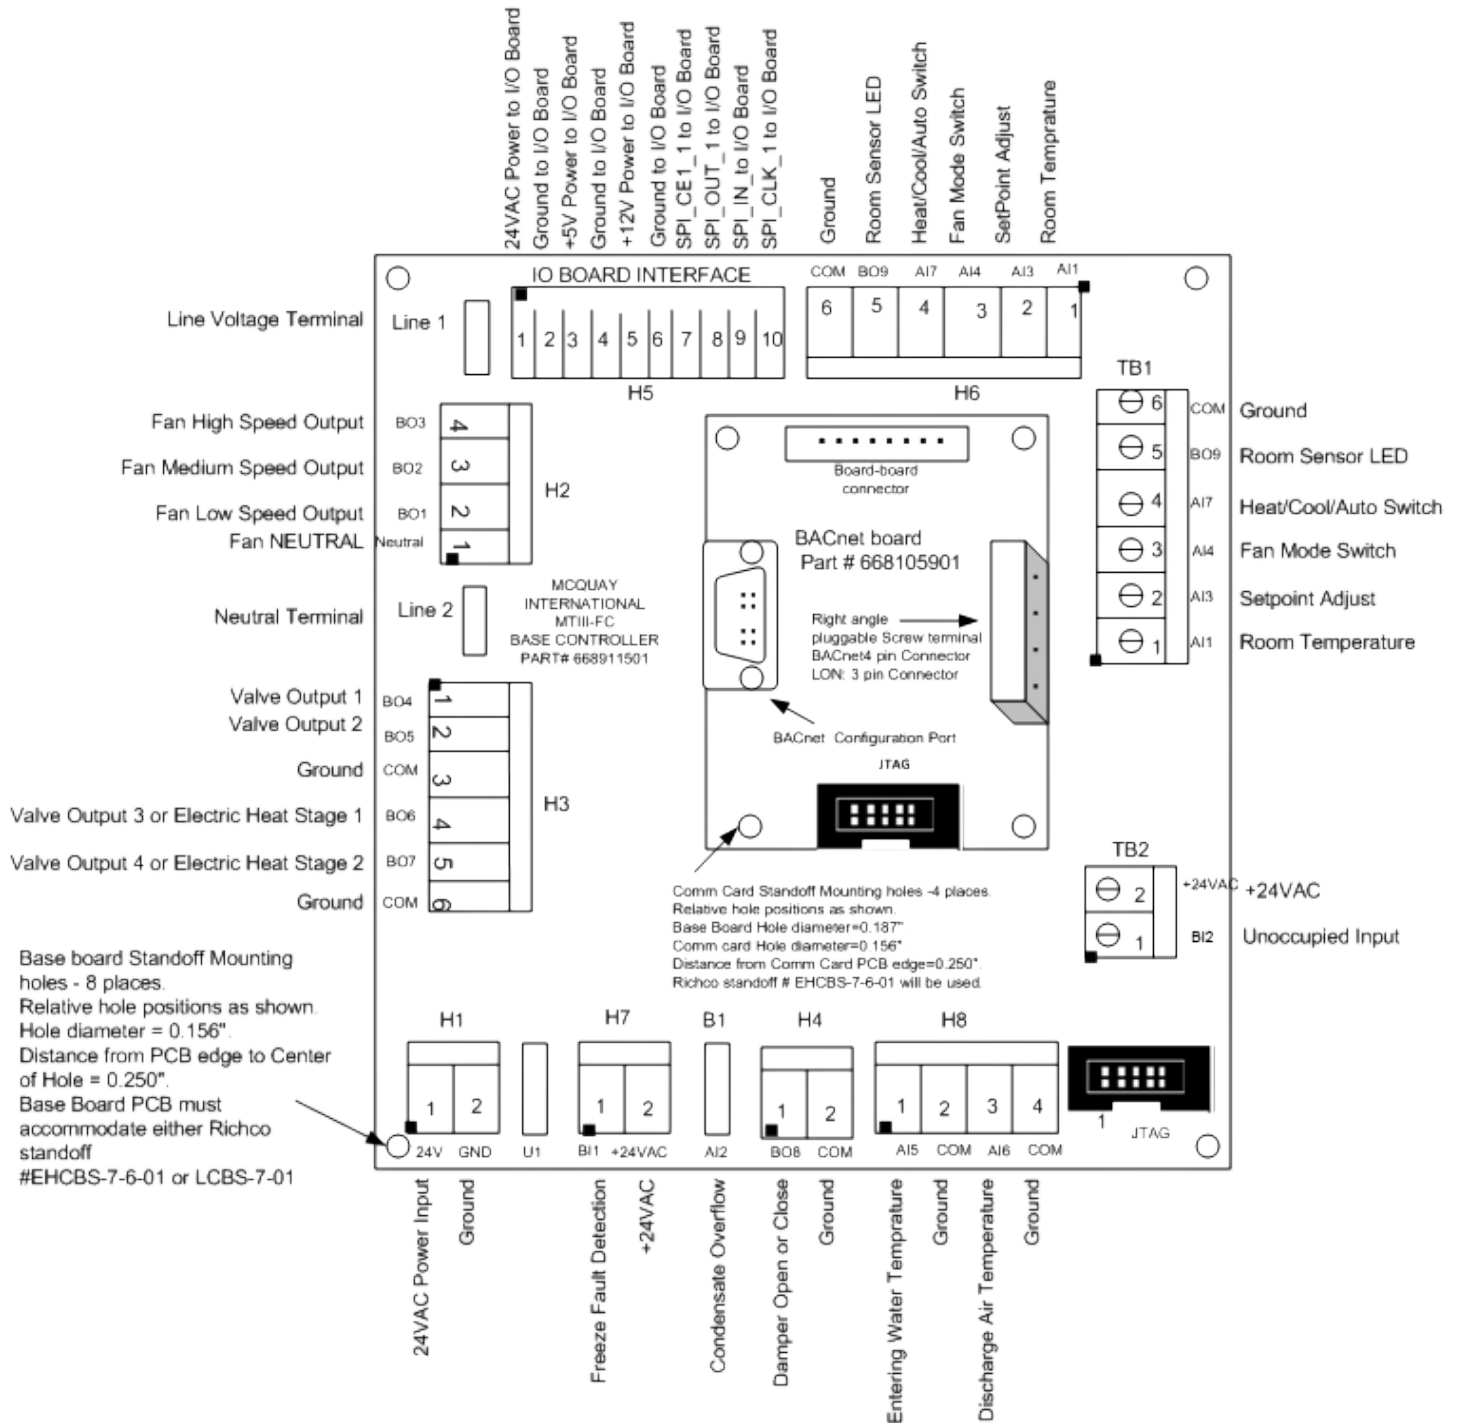


Table 4: MicroTech Unit Controller Terminals & Descriptions

Baseboard Connector – Terminal #	Silk Screen Label	Description
H1-1	24VAC	24VAC Power Input
H1-2	GND	Ground
H2-4	BO3	Fan High Speed Output
H2-3	BO2	Fan Medium Speed Output
H2-2	BO1	Fan Low Speed Output
H2-1	NEUTRAL	Fan Neutral
H3-1	BO4	Valve Output 1
H3-2	BO5	Valve Output 2
H3-3	COM	Ground
H3-4	BO6	Valve Output 3 or Electric Heat Stage 1
H3-5	BO7	Valve Output 4
H3-6	COM	Ground
H4-1	BO8	Damper Open
H4-2	COM	Ground
H5-1	I/O BOARD INTERFACE	24VAC Power to I/O Board
H5-2		Ground to I/O Board
H5-3		+5V Power to I/O Board
H5-4		Ground to I/O Board
H5-5		+12V Power to I/O Board
H5-6		Ground to I/O Board
H5-7		SPI_CE1_1 to I/O Board
H5-8		SPI_OUT_1 to I/O Board
H5-9		SPI_IN_1 to I/O Board
H5-10		SPI_CLK_1 to I/O Board
H6-1	AI1	Room Temperature
H6-2	AI3	SetPoint Adjust
H6-3	AI4	Fan Mode Switch
H6-4	AI7	Heat/Cool/Auto Switch
H6-5	BO9	Room Sensor LED
H6-6	COM	Ground
H7-1	BI1	Freeze Fault Detection
H7-2	24VAC	24VAC
H8-1	AI5	Entering Water Temperature
H8-2	COM	Ground
H8-3	AI6	Discharge Air Temperature
H8-4	COM	Ground
B1	AI2	Condensate Overflow
TB1-1	AI1	Room Temperature
TB1-2	AI3	SetPoint Adjust
TB1-3	AI4	Fan Mode Switch
TB1-4	AI7	Heat/Cool/Auto Switch
TB1-5	BO9	Room Sensor LED
TB1-6	COM	Ground
TB2-1	BI2	Unoccupied input
TB2-2	24VAC	24VAC
LINE1	LINE1	Line Voltage/ECM Terminal
LINE2(N)	LINE2(N)	Neutral Terminal

Figure 4: MicroTech III Fan Coil I/O Expansion Board Connector Layout

MTIII Fan Coil I/O Expansion Board Connector Layout (Not to Scale)

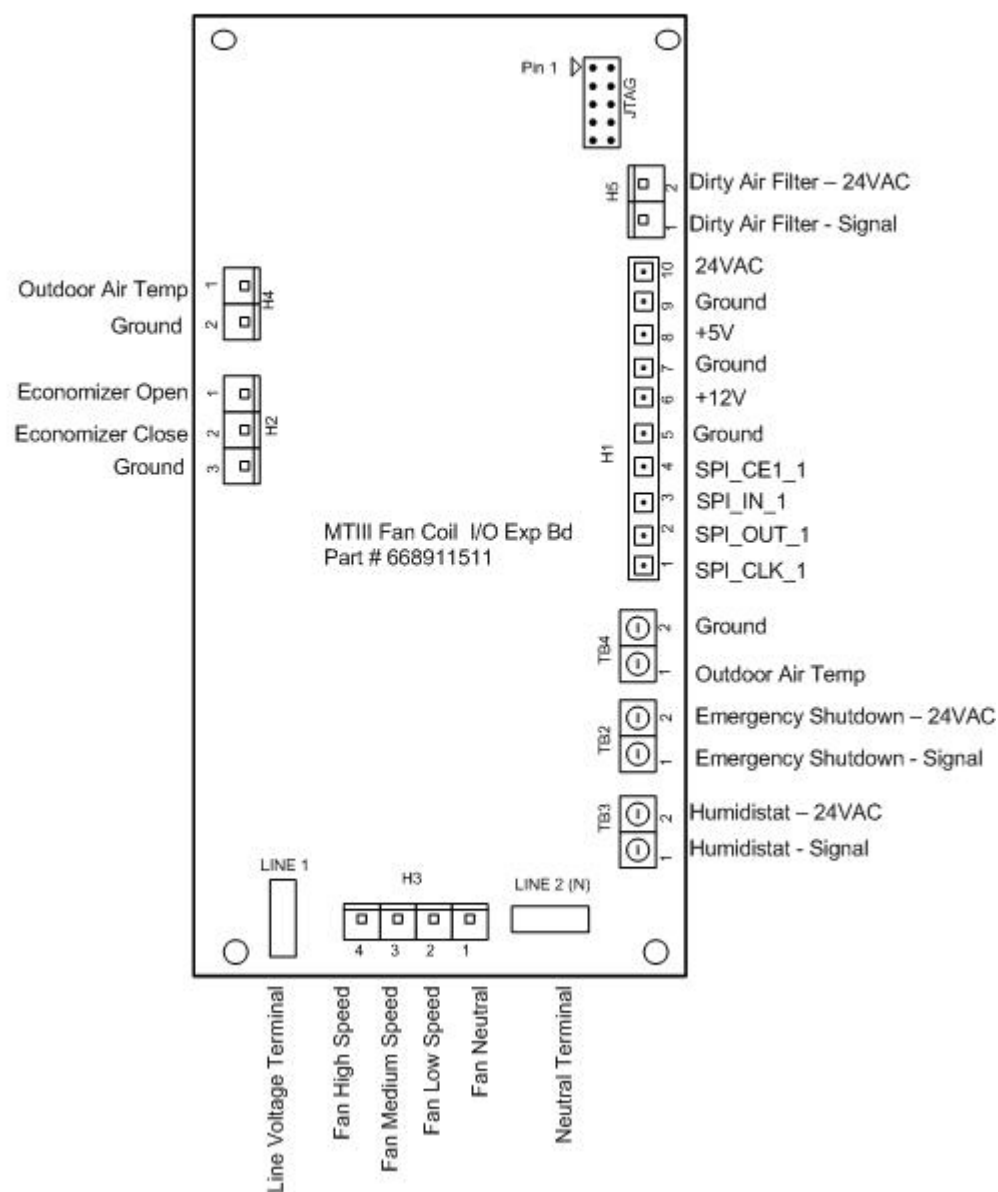


Table 5: I/O Expansion Module Connectors/Terminals

I/O Expansion Module Connector – Terminal #	Silk Screen Label	Description
H1-1	UNIT CONTROLLER INTERFACE	SPI_CLK_1 to I/O Board
H1-2		SPI_OUT_1 to I/O Board
H1-3		SPI_IN_1 to I/O Board
H1-4		SPI_CE1_1 to I/O Board
H1-5		Ground to I/O Board
H1-6		+12V Power to I/O Board
H1-7		Ground to I/O Board
H1-8		+5V Power to I/O Board
H1-9		Ground to I/O Board
H1-10		24VAC Power to I/O Board
H2-1	BO1	Economizer Open output
H2-2	BO2	Economizer Closed output
H2-3	COM	Ground
H3-4	BO5	Fan High Speed
H3-3	BO4	Fan Medium Speed
H3-2	BO3	Fan Low Speed
H3-1	NEUTRAL	Fan Neutral
H4-1, TB4-1	AI1	Outdoor Air Temp
H4-2, TB4-2	COM	Ground
TB2-1	BI1	Emergency Shutdown signal
TB2-2	24VAC	Emergency Shutdown 24VAC
TB3-1	BI3	Humidistat signal
TB3-2	24VAC	Humidistat 24VAC
H5-1	BI2	Dirty Air filter signal
H5-2	24VAC	Dirty Air Filter 24VAC

Figure 5: BACnet Communication Module

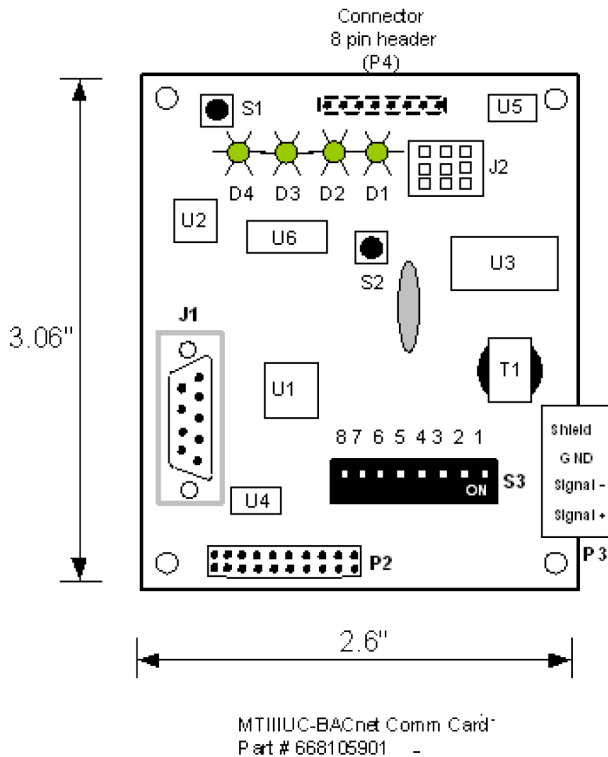


Figure 6: LonWorks Communication Module

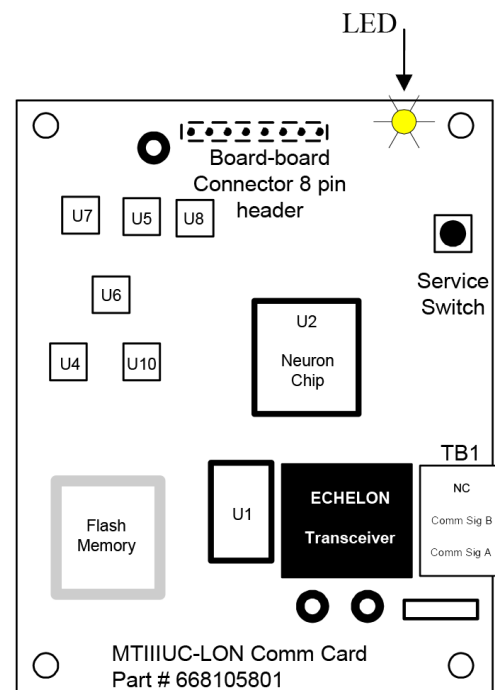


Table 6: BACnet Communication Module Connectors/Terminals

BACnet Module Connector – Terminal #	Silk Screen Label	Description
P3 – 1	P3	Network Signal +
P3 – 2		Network Signal –
P3 – 3		REF
P3 – 4		Shield

Table 7: LON Communication Module Connectors/Terminals

LONWORKS Module Connector – Terminal #	Silk Screen Label	Description
TB1 – 1	TB1	Network Signal A
TB1 – 2		Network Signal B
TB1 – 3		No Connection

Operation

Fan Coil/Cabinet Unit Heater Unit Control

The FCU primary operation depends on eight unit states of operation. When power is applied or controller is reset, the unit controller will go through a boot-up sequence, then go to the "Off" unit state. Refer to [Table 8](#) and [Table 9](#) for the state of every fan coil component in the Occupied and Unoccupied (Standby) Modes.

Possible FCU Machine States include:

- Off Alarm
- Off
- Start (actuator calibration occurs if applicable)
- Fan Only (fan is enabled, however may not be on)
- Heating
- Economizer
- Cooling (fan coils only)

Fan Coil/Cabinet Unit Heater Control Output Tables

Table 8: UNOCCUPIED or STANDBY

	Off Alarm	Off	Start	Fan Only	Heating	Economizer ¹	Cooling
Fan	Off	Off	Off	Off	Highest	N/A	Highest
Cooling Valve	Note ²	Closed ³	Closed	Closed	Closed	N/A	Open
Heating Valve	Note ²	Closed ³	Closed	Closed	Open	N/A	Closed
Electric Heat	Off	Off	Off	Off	On	N/A	Off
Damper	Closed	Closed	Closed	Closed	Closed	N/A	Closed
Economizer	Closed	Unchanged	Closed	Closed	Closed	N/A	Closed

NOTE 1: Economizer State not allowed.

NOTE 2: Dependant on specific alarm, see [Table 17](#).

NOTE 3: Two position valves closed, modulating valves are unchanged.

Table 9: OCCUPIED or BYPASS

	Off Alarm	Off	Start	Fan Only	Heating	Economizer	Cooling
Fan	Off	Off	Off	Controlled	Controlled	Controlled	Controlled
Cooling Valve	Note ²	Closed ³	Closed	Closed	Closed	Closed	Controlled
Heating Valve	Note ²	Closed ³	Closed	Closed	Controlled	Closed	Closed
Electric Heat	Off	Off	Off	Off	On	Off	Off
Damper	Closed	Closed	Closed	Controlled ⁴	Open	Open	Open
Economizer	Closed	Unchanged	Closed	Closed, Minimum ⁵	Minimum	Controlled Min to Open	Open, Minimum ⁶

NOTE 1: Economizer State allowed if enabled by Equipment Configuration.

NOTE 2: Dependant on specific alarm, see [Table 17](#).

NOTE 3: Two position valves closed, modulating valves are unchanged.

NOTE 4: Damper open if fan is on, closed if fan is off.

NOTE 5: Economizer closed if fan is off, otherwise at minimum position per fan speed.

NOTE 6: Economizer open if available to cool, otherwise at minimum position per fan speed.

Table 10: Fixed Timing Parameters Default Values

Fixed Timing Parameter	Normal
Condensate Overflow Alarm Activation Delay	60 sec
Dehumidification Minimum Off Timer	180 sec
Fan Runtime After Electric Heat Turnoff	30 sec
Fan Speed Change Timer	0.2 sec
Room Temperature Sensor Failure Delay When Analog Input is Shorted	4 min
Valve & Economizer Calibration Interval	24 hrs

Table 11: Configuration Property Default Values

Configuration Property	Usable Range	Default Value	Description
nciBypassTime	0, 30 to 120 min	120 m	Amount of time controller operates in the bypass occupancy mode when the user activates the timed override function.
nciSetpoints:Occ_cool	50 to 95°F	75°F	Occupied operating mode cooling setpoint.
nciSetpoints:Stby_cool	50 to 95°F	77°F	Standby operating mode cooling setpoint.
nciSetpoints:Unoc_cool	50 to 95°F	85°F	Unoccupied operating mode cooling setpoint.
nciSetpoints:Occ_heat	50 to 95°F	70°F	Occupied operating mode heating setpoint.
nciSetpoints:Stby_heat	50 to 95°F	66°F	Standby operating mode heating setpoint.
nciSetpoints:Unoc_heat	50 to 95°F	60°F	Unoccupied operating mode heating setpoint.
nciOccDiff	1 to 5°F	1°F	Differential between the effective on and off setpoints when operating in the occupied mode.
nciUnoccDiff	2 to 10°F	2°F	Differential between the effective on and off setpoints when operating in the unoccupied mode.
nciEwtFlowTimer	60 to 600 sec	120 s	Length of time flow is allowed after opening a hydronic valve before sampling the EWT.
nciEwtSampleTmr	0, 20 to 120 min	120 m	Length of time between EWT sampling processes.
nciFanMinOffTmr	120 to 1200 sec	180 s	Minimum length of time the fan must remain off after it initially turns off.
nciFanMinOnTmr	120 to 1200 sec	180 s	Minimum length of time the fan must remain running after it initially turns on.
nciFiltrChangeHrs	0, 360 to 4320 hr	1440 hr	Length of time the fan operates before a dirty air filter alarm is generated.
nciLocSptEnable	Disable, Enable	Enable	Variable to enable or disable the use of the local setpoint adjustment input from the room sensor.
nciSptAdjMax	55 to 95°F	95°F	Long range setpoint adjust input maximum value.
nciSptAdjMin	55 to 95°F	55°F	Long range setpoint adjust input minimum value.
Hydronic Heating Control			
nciHeatEnDiff	2 to 10°F	5°F	EWT must be warmer than the room temperature at least by this amount for hydronic heating to be allowed in two pipe systems.
nciHeatIntStgTmr	120 to 1200 sec	300 s	Inter stage time used between automatic heating capacity fan speed changes.
nciHeatKp	5 to 160%	25%	Hydronic heating valve PI control loop proportional gain setting.
nciHeatKi	0 to 1200 sec	20 s	Hydronic heating valve PI control loop integral setting.
nciHeatDB	3 to 100%	3%	Hydronic heating valve actuator positioning deadband.
nciHeatVlvStroke	15 to 600 sec	180 s	Hydronic heating valve actuator full travel time.
Hydronic Cooling Control			
nciCoolEnDiff	2 to 10°F	5°F	EWT must be colder than the room temperature at least by this amount for hydronic cooling to be allowed in two pipe systems.
nciCoolIntStgTmr	120 to 1200 sec	300 s	Inter stage time used between automatic cooling capacity fan speed changes.
nciCoolKp	5 to 160%	40%	Hydronic cooling valve PI control loop proportional gain setting.
nciCoolKi	0 to 1200 sec	30 s	Hydronic cooling valve PI control loop integral setting.
nciCoolDB	3 to 100%	3%	Hydronic cooling valve actuator positioning deadband.
nciCoolVlvStroke	15 to 600 sec	180 s	Hydronic cooling valve actuator full travel time.
Economizer Cooling Control			
nciDaSptKp	5 to 160%	40%	Discharge air temperature setpoint PI control loop proportional gain setting.
nciDaSptKi	0 to 1200 sec	20 s	Discharge air temperature setpoint PI control loop integral setting.
nciMaxDaSpt	50 to 80°F	75°F	Economizer PI control block setpoint maximum value when the discharge air PI control loop output is at 0%.
nciMinDaSpt	50 to 80°F	55°F	Economizer PI control block setpoint minimum value when the discharge air PI control loop output is at 100%.
nciEconOaEnDiff	1 to 12°F	2°F	Outdoor air temperature must be colder than the room temperature at least by this amount for Economizer cooling to be allowed.
nciEconOaEnSpt	40 to 80°F	50°F	Outdoor air temperature must be above this setpoint to allow Economizer cooling.
nciEconKp	5 to 160%	90%	Economizer positioning PI control loop proportional gain setting.
nciEconKi	0 to 1200 sec	10 s	Economizer positioning PI control loop integral setting.
nciEconDB	3 to 100%	3%	Economizer actuator positioning deadband setting.
nciEconStroke	15 to 600 sec	66 s	Economizer actuator full travel time.
nciEconLowMin	0 to 100%	10%	Economizer minimum position when the fan is operating at low speed.
nciEconMedMin	0 to 100%	10%	Economizer minimum position when the fan is operating at medium speed.
nciEconHighMin	0 to 100%	10%	Economizer minimum position when the fan is operating at high speed.

NOTE: Reference the ED15135 protocol information document for more details on configuration properties and other network variables.

Operating Modes

Start-up

The unit will not operate until all the inputs and safety controls are checked for normal conditions.

General Sequences of Operation

Fan Operation

The Table 12 describes fan operation in the various controller modes. Fan operation depends on the occupied/unoccupied status of the controller, the position of the room sensor mounted (or unit mounted) fan speed switch, and the capacity requested from the control algorithm.

Table 12: Fan Mode

Fan Mode	Occupied	Unoccupied
Off	Off	Off
Low	Low speed, continuous operation	Fan runs on low speed when heating or cooling capacity is required. Fan is off otherwise.
Medium	Medium speed, continuous operation	Fan runs on medium speed when heating or cooling capacity is required. Fan is off otherwise.
High	High speed, continuous operation	Fan runs on high speed when heating or cooling capacity is required. Fan is off otherwise.
Auto – Continuous	Fan runs continuously on low, medium or high depending on capacity required.	Fan runs on high speed when heating or cooling capacity is required. Fan is off otherwise.
Auto – Cycling	When no capacity is required, fan is off and damper is closed. When capacity is required, fan runs on low, medium or high depending on capacity required.	Fan runs on high speed when heating or cooling capacity is required. Fan is off otherwise.

Occupied/Unoccupied Operation

The occupied/unoccupied operation of the unit is either controlled from the occupied/unoccupied binary input or over the communications network. When in the occupied mode, the controller will control to the occupied heating and cooling setpoints. In the unoccupied mode, unoccupied heating and cooling setpoints will be used. Fan operation is as described above. Heating and cooling operation will not be enabled until the fan is running. When the occupied/unoccupied state of the controller is being controlled over the communications interface, the local binary input will be ignored.

Occupied Capacity Control

Occupied Operation

The board will be in Occupied mode if the unoccupied terminal (BI2) is not shorted to ground. Heating and cooling will not operate until the fan is running.

Cooling

If the room temperature is above the Occupied Cooling On Setpoint in the fan auto cycling mode, the fan will start before the cooling state is entered. After the fan is on, the cooling valve will open (two position valves) or a proportional-integral control algorithm will modulate the cooling valve open in an attempt to maintain the room temperature.

If the temperature remains above the Occupied Cooling On Setpoint for longer than a cooling stage time when the cooling valve is full open and the fan is on Low speed (auto fan mode), the fan will stage to Medium speed in an attempt to satisfy the load. If the temperature remains above the Occupied Cooling On Setpoint for longer than a cooling stage time when the cooling valve is full open and the fan is on Medium speed (auto fan mode), the fan will stage to High speed in an attempt to satisfy the load.

If the temperature is below the Cooling On Setpoint and the cooling Interstage timer has expired, the fan will stage from High to Medium speed. If the temperature is below the Cooling On Setpoint and the cooling Interstage timer has expired, the fan will stage from Medium to Low speed. If the temperature remains below the Cooling Off Setpoint for longer than the cooling stage time and the fan is at its lowest fan speed, cooling valve will close and the unit will enter the “Fan Only” state. When the Fan Minimum On timer has expired, the fan will turn off if fan cycling is enabled.

Heating

If the room temperature is below the Occupied Heating On Setpoint in the fan auto cycling mode, the fan will start before the heating state is entered. After the fan is on, the heating valve will open (two position valves), the electric heat will be enabled, or a proportional-integral control algorithm will modulate the heating valve open in an attempt to maintain the room temperature.

If the temperature remains below the Occupied Heating On Setpoint for longer than a heating stage time when the heating valve is full open and the fan is on Low speed (auto fan mode), the fan will stage to Medium speed in an attempt to satisfy the load. If the temperature remains below the Occupied Heating On Setpoint for longer than a heating stage time when the heating valve is full open and the fan is on Medium speed (auto fan mode), the fan will stage to High speed in an attempt to satisfy the load.

If the temperature is above the Heating On Setpoint and the heating Interstage timer has expired, the fan will stage from High to Medium speed. If the temperature is above the Heating On Setpoint and the heating Interstage timer has expired, the fan will stage from Medium to Low speed. If the temperature remains above the Heating Off Setpoint for longer than the heating stage time and the fan is at its lowest fan speed the heating valve will close, electric heat will shut off, and the unit will enter the Fan Only state. When the Fan Minimum On and the Fan On After Electric Heat timers have expired, the fan will turn off if fan cycling is enabled.

Unoccupied Capacity Control

Cooling

When the room temperature rises above the Unoccupied Cooling On Setpoint, the fan will start in High speed and the cooling valve will fully open in an attempt to maintain room temperature. When the temperature is satisfied (temperature drops below the Unoccupied Cooling On Setpoint minus the unoccupied differential) and the cooling Interstage timer has expired, the valve will first close and then the fan will shut off.

Heating

When the room temperature falls below the Unoccupied Heating On Setpoint, the fan will start in High speed and the heating valve will fully open (or the electric heat will be enabled) in an attempt to maintain room temperature. When the temperature is satisfied (temperature rises above the Unoccupied Heating On Setpoint plus the unoccupied differential) and the heating Interstage timer has expired, the valve will first close, electric heat will shut off and then the fan will shut off.

2-Pipe Cooling Only System:

- Fan is on at lowest available speed.
- Heating valve is non-existent.
- Dehumidification is only allowed when the effective space temperature is greater than the effective heating on setpoint, and becomes disabled when space temperature drops below the effective heating on setpoint minus a 2°F fixed differential.

4-Pipe Modulating Heating & Cooling System:

- Fan is on at speed determined by capacity and effective fan mode/speed.
- Heating valve is controlled.

General Operation

Unit status will change to the "Fan Only" state if all of the following conditions exist:

- Dehumidification isn't required or is not available, heating or cooling capacity becomes required.
- The cooling valve has been driven closed.
- The 4-pipe system heating valve has been driven closed.
- Fan is running at the lowest possible speed based on: selected occupancy and fan mode/speed switch setting.

Dehumid State Notes

- For dehumidification availability definition, see "Miscellaneous Control Definitions section".
- When leaving "Dehumid" state, the 180 second fixed "dehumidification minimum off" timer will be started. This prevents returning back to the "Dehumid" state too soon.

Total Electric Heat Mode (2-Pipe Cooling Systems Only)

On an initial call for heating:

1. The fan will start at Low speed in "Fan Only" state
2. Unit enters Heating state, electric heat is energized, and heating Interstage timer is started
3. If Heating Interstage Countdown Timer has expired and room temperature is below the Heating On Setpoint, fan speed will be changed from Low to Medium, and Heating Interstage Countdown Timer is started again.
4. If Heating Interstage Countdown Timer has expired and room temperature is below the Heating On Setpoint, fan speed will be changed from Medium to High, and Heating Interstage Countdown Timer is started again.

Once room temperature reaches the Heating On Setpoint the fan will be run at Medium and Low speed with Interstage Countdown Timer started each time the fan speed is changed. When the room setpoint conditions are satisfied, electric heat will be de-energized and the fan will continue to operate at its "fan only" setting when enabled, for continuous fan operation. If fan cycling is enabled, the fan will turn off after 30 seconds once room setpoint conditions are satisfied.

Supplemental (Intermediate) Electric Heat mode [for 2-pipe Cooling/Heating systems only]

On an initial call for heating, the controller will open the water valve for Flow Timer" to check for appropriate entering water temperature. Once the water valve is 100% open, a 120-second (default setting) flow timer will start and flow allowed. When timer has expired and if water temperature is colder than required for hydronic heating the control valve will fully closed, fan started and electric heater energized. The rest of the operation will run as described in paragraph Total Electric heat above exclusively using electric heat (EWT is not sampled for systems with Total Electric Heat).

Proportional–Integral Control Parameters

Associated with each Proportional-Integral (PI) control loop are three adjustable parameters: Proportional Gain (Kp), Integral Time (Ki), and Deadband (DB). When the fan coil unit (FCU) is properly sized for the space, the factory settings for these parameters will provide the best control action for all the various operating scenarios.

PI Control Algorithm

The PI control algorithm calculates the desired actuator output, and ranges from 0 to 100%.

Definitions:

- Error: Value is calculated one of two ways depending on the PI blocks fixed action type.
- Direct Acting Block: Error = (PV – SP)
- Reverse Acting Block: Error = (SP – PV)
- Process Variable (PV): Measured analog input reading.
- Sample Time: Scan rate of the PI control blocks, which is an internal fixed value of 10 seconds.
- Sum of Errors: Summation, or total, of all past errors.

Output Formula:

PI Output = (Kp × Error) + ((Sample Time × Sum of Past Errors) / Ki)

If field problems arise, first ensure these parameters are set back to the factory default settings. If adjustment is required, only make small adjustments to one parameter at a time. After each adjustment, induce an instantaneous error into the PI algorithm and allow enough time for the system to stabilize before making any further modifications. If you do not have the means to graph the process variable performance, record the actual measured value and set point for the duration of the test and then plot the results using a spreadsheet to determine the correct action to take.



CAUTION

Adjusting PI parameters can cause erratic unit operation, and potentially damage the equipment.

PI control parameters must only be adjusted by trained personnel having a complete understanding of how these parameters affect system operation. Generally these parameters do not need to be adjusted from the factory settings.

Proportional Gain

The proportional gain, or proportional action, causes the controlled output to change in proportion to the magnitude of the present error amount. Error is the difference between the sensors present value and the set point. When the Kp setting is too low, the process variable (PV) response will change too slowly. When the Kp setting is too high, the process variable response will excessively overshoot and possibly oscillate around the setpoint (SP). If faster system response is desired increase the proportional gain (Kp) setting. Use caution not to become too aggressive with the proportional gain setting to avoid causing system instability.

Integral Time

The integral time, or integral action, accumulates the error amounts and causes the controlled output to approach the set point over time in an attempt to eliminate any system offset. The smaller the integral (Ki) setting, the more the integral will affect the process under control. When the Ki setting is too low, the process variable (PV) will oscillate around the setpoint. When the Ki setting is too high, the process variable will never reach the setpoint.

Deadband

The deadband parameter serves two main purposes. First deadband prevents the actuator from constantly hunting or overcorrecting, and secondly ensures the actuator physically moves every time a new positioning command is given. Deadband will prevent small output changes from modifying the actuator position. When the deadband configuration property is set to 3%, the PI control output adjustment must exceed plus or minus 1.5%, or the actuator position will not be changed.

PI Control Blocks

The fan coil unit contains four PI control loop blocks. The PI control blocks are defined as follows:

- Modulating Hydronic Heating Valve
- Modulating Hydronic Cooling Valve
- Economizer Discharge Air Temperature (DAT) Setpoint
- Economizer Position

The following is a brief summary of the fan coil PI control blocks and their associated support functions. Applicable LonWorks network variables are listed first, along with their BACnet equivalent objects. Refer to the ED15135 protocol information document for more details pertaining to the fan coil network variables.

Table 13: PI Control Block #1 – Modulating Hydronic Heating Valve Control

Inputs / Outputs	Interpretation
Polarity Type: Reverse Acting (Not Adjustable)	Error is defined as: (Effective Heat SP minus Room Temp)
SP: Effective Heating Setpoint	The desired heating setpoint input.
PV: nvoSpaceTemp (AV-22)	Room temperature is used as the process variable input.
KP: nciHeatKp (Loop1:Proportional_Constant)	Proportional gain used in the PI control algorithm.
KI: nciHeatKi (Loop1:Integral_Constant)	Integral time used in the PI control algorithm.
Output: nvoHeatVlvOut (Loop1:Present_Value)	Heating valve position output command.
DB: nciHeatDB (AV-29)	Deadband used to determine if the PI output is applied to the heating valve positioning control.

Table 14: PI Control Block #2 – Modulating Hydronic Cooling Valve Control

Inputs / Outputs	Interpretation
Polarity Type: Direct Acting (Not Adjustable)	Error is defined as: (Room Temp minus Effective Cool SP)
SP: Effective Cooling Setpoint	The desired cooling setpoint input.
PV: nvoSpaceTemp (AV-22)	Room temperature is used as the process variable input.
KP: nciCoolKp (Loop2:Proportional_Constant)	Proportional gain used in the PI control algorithm.
KI: nciCoolKi (Loop2:Integral_Constant)	Integral time used in the PI control algorithm.
Output: nvoCoolVlvOut (Loop2:Present_Value)	Cooling valve position output command.
DB: nciCoolDB (AV-9)	Deadband used to determine if the PI output is applied to the cooling valve positioning control.

Table 15: PI Control Block #3 – Economizer Discharge Air Setpoint Control

Inputs / Outputs	Interpretation
Polarity Type: Direct Acting (Not Adjustable)	Error is defined as: (Room Temp minus Effective Cool SP)
SP: Effective Cooling Setpoint	The desired cooling setpoint input.
PV: nvoSpaceTemp (AV-22)	Room temperature is used as the process variable input.
KP: nciDASptKp (Loop3:Proportional_Constant)	Proportional gain used in the PI control algorithm.
KI: nciDASptKi (Loop3:Integral_Constant)	Integral time used in the PI control algorithm.
Output: nvoDASptOut (Loop3:Present_Value)	Economizer position output command.
Translator: nciMaxDaSpt (AV-11)	Translated DA temperature SP that is sent to PI block #4 when the PI output is at 0%.
Translator: nciMinDaSpt (AV-12)	Translated DA temperature SP that is sent to PI block #4 when the PI output is at 100%.


Table 16: PI Control Block #4 – Economizer Position Control

Inputs / Outputs	Interpretation
Polarity Type: Direct Acting (Not Adjustable)	Error is defined as: (DAT minus Discharge Air SP)
SP: Discharge Air SP from PI Control Block #3 Output	The desired DAT setpoint input. The PI block #3 output is translated into a discharge air temperature SP value.
PV: nvoDischAirTemp (AI-4)	Discharge air temperature is used as the process variable input.
KP: nciDASptKp (Loop4:Proportional_Constant)	Proportional gain used in the PI control algorithm.
KI: nciDASptKi (Loop4:Integral_Constant)	Integral time used in the PI control algorithm.
Output: nvoEconOut (Loop4:Present_Value)	Economizer position output command.
DB: nciEconDB (AV-18)	Deadband used to determine if the PI output is applied to the Economizer positioning control.


Tuning the PI Blocks

If the temperature control behavior of the FCU is poor, it may be necessary to tune the PI control blocks of the cooling valve, heating valve, or economizer position. When tuning the control blocks, it is highly recommended that you use the following procedure. Failure to do so may result in increased tuning time and sub-par performance.

1. Zero out the Ki setting.
2. Choose a starting point for Kp.
3. Introduce a step change to the room setpoint.
4. Observe FCU performance and temperature control.
5. Adjust Kp based on the following graph.

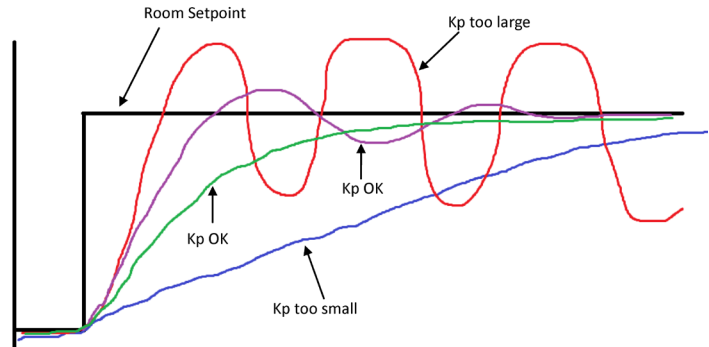

6. Repeat steps 3-5 until the temperature control matches the acceptable Kp behavior in the above graph. Behavior should be somewhere between the two "Kp OK" system responses detailed above. Please note that there may be an offset error after the Kp value is tuned. This is OK, as the Ki variable will eliminate the offset error.
7. While keeping Kp constant, choose a starting value for Ki.
8. Introduce a step change to the room setpoint.
9. Observe FCU performance and temperature control.
10. Adjust Ki based on the following graph:

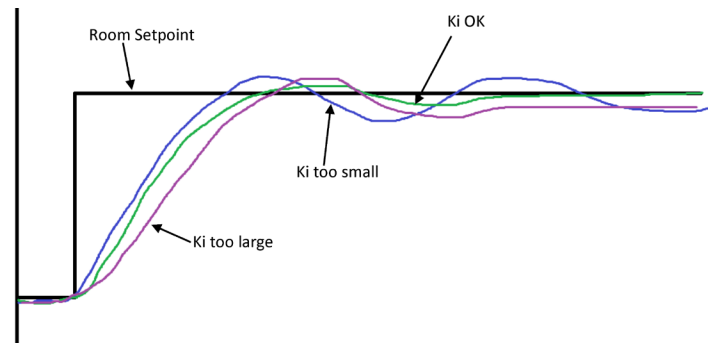

11. Repeat steps 8-10 until the FCU temperature control is acceptable. There should be no offset error and no temperature oscillations when the loops are fully and correctly tuned.

NOTICE

The PI blocks controlling the economizer behavior (PI Control Block #3 & PI Control Block #4) are used in a 'cascade' arrangement, meaning the output of block #3 directly affects the behavior and output of block #4. If changes to the behavior of these blocks are needed, then both blocks should be tuned, to avoid negatively affecting the performance by just changing one of the control blocks. Block #4 should be tuned first, followed by block #3. In addition, the PI control for the economizer behavior may be affected by the minimum damper position, or the minimum or maximum setpoint outputs (nciMaxDaSpt (AV-11) and nciMinDaSpt (AV-12)). If erratic temperature control behavior is exhibited, it should be investigated whether the PI block or these other settings are negatively affecting the performance.

Alarms

Alarm Control Modes

- Display Only: Full control is maintained, alarm is for display purposes only.
- Modified: Normal unit control is slightly modified by this type of alarm.
- Shutdown #1: Fan & electric heat immediately turned off; damper & economizer closed; valves are unchanged.
- Shutdown #2: Fan & electric heat immediately turned off; damper & economizer closed; all valve types closed.
- Shutdown #3: Fan & electric heat immediately turned off; damper & economizer closed; previous control mode valve type is opened.

Table 17: Alarm Control & Reset Table

Room Sensor LED Pulses	Alarm Definition	Control Type	Auto Recover	Tenant Override Button Reset	Remote Clear Alarm
2	Invalid Equipment Configuration	Shutdown #1	No	No	No
3	Emergency Shutdown	Shutdown #2	Yes	No	No
4	Freeze Fault Detection	Shutdown #3	No	Yes	Yes
5	Entering Water Temp Sensor Fail (EWT Sampling Systems)	Shutdown #2	No	No	Yes
6	Room Temp Sensor Fail	Shutdown #2	No	No	Yes
7	I/O Expansion Communications Fail (I/O Exp Board Selected)	Shutdown #2	Yes	No	No
8	Condensate Overflow (Econ, Cool, & Dehumid Modes Only) (Fixed 60s Delay)	Shutdown #2	Yes ¹	No	Yes
9	Outdoor Air Temp Sensor Fail (Economizer Selected)	Modified: Disable Economizer	No	No	Yes
10	Discharge Air Temp Sensor Fail (Economizer Selected)	Modified: Disable Economizer	No	No	Yes
11	Dirty Air Filter (Currently Based on Settable Timer) ²	Display Only	No	Yes	Yes
12	Serial EEPROM Corrupted	Display Only	No	No	No

NOTE 1: Auto recover is subject to intelligent alarm reset.

NOTE 2: Timer is user-adjustable through network. Setting timer to 0 (zero) disables the alarm. Refer to ED 15135 for more details. Alarm conditions are listed in order of priority.

Definitions

Miscellaneous Control Definitions

Heating Capacity Required

Heating capacity is considered “required” when Effective Space Temperature (nvoSpaceTemp) goes below calculated effective heating on setpoint; then becomes “not required” when the temperature goes above calculated effective heating off setpoint.

Cooling Capacity Required

Cooling capacity is considered “required” when Effective Space Temperature (nvoSpaceTemp) goes above calculated effective cooling on setpoint; then becomes “not required” when the temperature goes below calculated effective cooling off setpoint. Economizer state, if available, has priority over cooling state.

Dehumidification Required

Dehumidification is considered “required” when the humidistat binary input is active, and no heating or cooling capacities are required. Also in 2-Pipe cooling only systems, the effective space temperature (nvoSpaceTemp) must be greater than the effective heating on setpoint for dehumidification to be allowed.

Fan Availability

Fan is considered available if all of the following conditions exist:

- Equipment configuration software jumper (nciSoftJumpers) has selected a valid fan speed type.
- Remote application mode (nviApplicMode) is not set to “Off”.
- Local hardwired fan mode/speed switch (nvoFanModeSpdSw) is not set to “Off”.
- The “fan minimum off” timer has expired.

Dehumidification Availability

Dehumidification is considered available if all of the following conditions exist:

- Equipment configuration software jumper (nciSoftJumpers) states that a 2-Pipe hydronic cooling only without electric heat; or 4-Pipe hydronic modulating heating and cooling system is selected in the fan coil unit.
- For 2-Pipe Cooling only systems the Effective Space Temperature (nvoSpaceTemp) must be above the Effective Heating On setpoint.
- Remote application mode (nviApplicMode) is set to “Auto”, “Dehumid”, or “Null”.
- Local Heat/Cool/Auto mode switch (nvoHeatCoolAuto) is set to “Auto” or “Cool”.
- I/O expansion board communications is not failed.
- Effective occupancy (nvoEffectOccup) is occupied or bypass mode.
- The fixed “dehumidification minimum off” timer has expired.
- Condensate overflow alarm is not active.

Economizer Availability

Economizer is considered available if all of the following conditions exist:

- Equipment configuration software jumper (nciSoftJumpers) states economizer is present in the fan coil unit.
- Remote application mode (nviApplicMode) is set to “Auto”, “Economy”, or “Null”.
- Local Heat/Cool/Auto mode switch (nvoHeatCoolAuto) is set to “Auto” or “Cool”.
- Effective occupancy (nvoEffectOccup) is occupied or bypass mode.
- Difference between indoor and outdoor air temperature is greater than economizer indoor to outdoor air control enable differential (nciEconIOAEnDiff) setting for ability to cool. Prevents using outdoor air that's too hot.
- Outdoor air temperature is greater than economizer outdoor air temperature control enable (nciEconOAEEn) setting. Prevents using outdoor air that's too cold.
- I/O expansion board communications failure alarm is not active.
- Condensate overflow alarm is not active.
- Outdoor air temperature sensor failure alarm is not active.
- Discharge air temperature sensor failure alarm is not active.

Electric Heating Availability

Electric heating is considered available if all of the following conditions exist:

- Equipment configuration software jumper (nciSoftJumpers) states electric heating is selected in the fan coil unit.
- Remote application mode (nviApplicMode) is set to “Auto”, “Heat”, or “Null”.
- Local Heat/Cool/Auto mode switch (nvoHeatCoolAuto) is set to “Auto” or “Heat”.

Hydronic Heating Availability

Hydronic heating is considered available if all of the following conditions exist:

- Equipment configuration software jumper (nciSoftJumpers) states hydronic heating is selected in the fan coil unit.
- Remote application mode (nviApplicMode) is set to “Auto”, “Heat”, or “Null”.
- Local Heat/Cool/Auto mode switch (nvoHeatCoolAuto) is set to “Auto” or “Heat”.

Hydronic Cooling Availability

Hydronic cooling is considered available if all of the following conditions exist:

- Equipment configuration software jumper (nciSoftJumpers) states hydronic cooling is selected in the fan coil unit.
- Remote application mode (nviApplicMode) is set to “Auto”, “Cool”, or “Null”.
- Local Heat/Cool/Auto mode switch (nvoHeatCoolAuto) is set to “Auto” or “Cool”.
- Condensate overflow alarm is not active.

MTIII Circuit Board Replacement

Replacing a MicroTech Circuit Board



WARNING

The MicroTech circuit board incorporates static sensitive de-vices. A static charge from touching the device can damage the electronic components. To help prevent damage during service, use static discharge wrist straps. Static discharge wrist straps are grounded to the fan coil chassis through a 1 MOhm resistor.

Replacement part is shipped from Daikin Applied with correct configuration preset at the factory.

1. Connect grounding wrist strap to unit.
2. Remove faulty board and place on static protected surface.
3. Remove replacement board from static protected bag.

NOTICE

Do not touch circuit board; hold by edges.

4. Holding board in grounded hand, install board in unit.
5. Insert faulty board in empty static bag for return.

NOTICE

The new board needs to have correct equipment configuration performed at the factory otherwise it will not operate properly. Contact Daikin Applied factory representative for directions.

Equipment Configuration Settings

Configuration property variable are used to determine the equipment configuration; which are read from the serial EEPROM when the controller initially boots. The FCU control option bits are then initialized based on the “nciSoftJumpers” values read from the serial EEPROM. The controller must be rebooted after modifying the software configuration settings before they will be used in controlling the FCU. Setting is considered: open when bit is zero, and closed when bit is one.

Table 18: Equipment Configuration Setting Options

Function	Bit/Binary Setting	Model/Feature
Service Test Mode	Byte 1: b0	0 = Normal Operation 1 = Service Test Mode
Continuous/Cycling Fan	Byte 1: b1	0 = Continuous Fan 1 = Cycling Fan
Setpoint Adjust – Temperature Range	Byte 1: b2	0 = Short Range (-5 to +5°F) 1 = Long Range (55 to 95°F)
IO Expansion Board Selection	Byte 1: b3	0 = No IO Expansion Board Present 1 = Enable IO Expansion Board
Economizer Selection	Byte 1: b4	0 = No Economizer Present 1 = Enable Economizer Use
N.O./N.C. Two Position Heating Valve	Byte 1: b5	0 = Normally Open Heating Valve 1 = Normally Closed Heating Valve
N.O./N.C. Two Position Cooling Valve	Byte 1: b6	0 = Normally Open Cooling Valve 1 = Normally Closed Cooling Valve
Two Position/Modulating Valves	Byte 1: b7	0 = Two position Hydronic Valves 1 = Modulating Hydronic Valves
Electric Heat Selection	Byte 2: b1=0, b0=0 Byte 2: b1=0, b0=1 Byte 2: b1=1, b0=0	00 = No Electric Heating 01 = One Stage Electric Heat 11 = Not Valid
Hydronic Valves Selection	Byte 2: b4=0, b3=0, b2=0 Byte 2: b4=0, b3=0, b2=1 Byte 2: b4=0, b3=1, b2=0 Byte 2: b4=0, b3=1, b2=1 Byte 2: b4=1, b3=0, b2=0	000 = No Hydronic Valves 001 = 2-Pipe Heating Only 010 = 2-Pipe Cooling Only 011 = 2-Pipe Heat & Cool Changeover 100 = 4-Pipe Hydronic Heat & Cool
Fan Speed Selection	Byte 2: b6=0, b5=0 Byte 2: b6=0, b5=1 Byte 2: b6=1, b5=0	00 = 1Speed (Uses: High) 01 = 2Speed (Uses: Low, High) 10 = 3Speed (Uses: Low, Med, High)
Freeze Fault Detect Binary Input Selection	Byte 2: b7	0 = Disable Binary Input 1 = Enable Binary Input
Emergency Shutdown Binary Input Selection	Byte 3: b0	0 = Disable Binary Input 1 = Enable Binary Input
Dirty Air Filter* Binary Input Selection	Byte 3: b1	0 = Disable Binary Input 1 = Enable Binary Input

NOTE: *Currently functions based on user-adjustable timer.

Communication Modules

Optional Communication Modules

MicroTech Unit Controller with an Optional LonWorks® Communication Module

For installation and operation information on LonWorks Communication Module and other ancillary control components, see:


- IM 1012 — MicroTech III Fan Coil LonWorks Communication Module.
- IM 933 — LonMaker Integration Plug-in Tool: For use with the MicroTech III Unit Controller.
- IM 1171 — Digitally Adjustable Display Sensor Installation and Maintenance Manual

Each Daikin Applied ThinLine fan coil can be equipped with a LonWorks communication module that is LonMark 3.4 certified to meet the LonMark Space Comfort Control (SCC) profile for fan coils. The controller is microprocessor-based and is designed to communicate over a LonWorks network with the optional factory or field-installed communication module.



The unit controller is programmed and tested with all the logic required to monitor and control the unit. An optional wall sensor may be used with the communication module to provide limited local control of the Fan Coil or Cabinet Unit Heater unit. The unit controller monitors water and air temperatures and passes information to the communication module. The module communicates with the BAS to provide network control of the Fan Coil or Cabinet Unit Heater unit.

Figure 7: LonWorks Communication Module

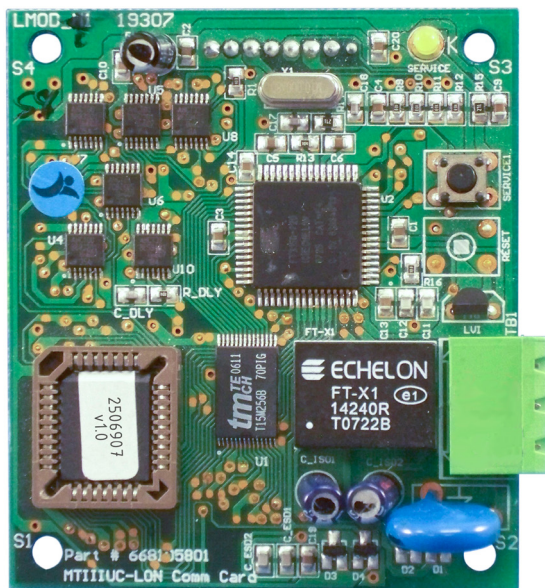

The MicroTech unit controller with communication module includes a unit-mounted discharge air and entering water temperature sensors. Entering air temperature can be monitored either by selecting either unit-mounted return air temperature or wall-mounted room temperature sensors. Room sensor options includes one with a setpoint adjustment, unit mode, fan speed, and tenant override. See actual sensor to make sure these options are present.

MicroTech Unit Controller with LonWorks Communication Module orchestrates the following unit operations:

- Enable heating and cooling to maintain setpoint based on a room sensor
- Monitors all equipment protection controls
- Monitors room and discharge air temperatures
- Monitors outside air temperature for units with economizer option
- Relays status of all vital unit functions

The MicroTech unit controller with an optional communication module should include:

- Return Air Temperature sensor (RAT) (factory- or field-mounted)
- Discharge Air Temperature sensor (DAT) (factory- or field-mounted)
- Entering Water Temperature sensor (EWT) (factory- or field-mounted)

NOTICE

Refer to IM 956 for details to install (RAT) & (DAT).



WARNING

When an optional wall-mounted room temperature sensor is connected to the unit controller, the Return Air Temperature (RAT) sensor must not be installed. A wall-mounted room temperature sensor and the return air temperature sensor must not be connected simultaneously or the unit will not operate properly.

The communication module provides access to setpoints for operational control

Available wall sensors include:

- Room sensor with LED status and tenant override button
- Room sensor with LCD display, fan speed selection switch, tenant override button, and $\pm 5^{\circ}\text{F}$ setpoint adjustment
- Room sensor with LCD display, fan speed selection switch, tenant override button, 55° to 95°F setpoint adjustment

MicroTech Unit Controller with an optional BACnet® Communication Module

For installation and operation information on MicroTech unit controller and other ancillary components, see:

- IM 1013 — MicroTech Fan Coil BACnet Communication Module
- IM 1171 — Digitally Adjustable Display Sensor Installation and Maintenance Manual

Daikin Applied ThinLine fan coils and cabinet unit heaters are

available with an optional BACnet MS/TP communication module that is designed to communicate over a BACnet MS/TP




communications network to a building automation system (BAS). It can be factory or field-installed.

The module makes operational data and commands available on a communications network using BACnet objects and properties:

- The network cable is a shielded twisted-pair cable
- Network communications run up to 76.8 Kbps
- DIP switches on the controller enable the MS/TP MAC address to be set in the range 0-127
- Four green status LEDs on the communication module indicate communication activity on the MS/TP communication network and with the unit controller

Figure 8: MicroTech BACnet MS/TP Snap-in Communication Module

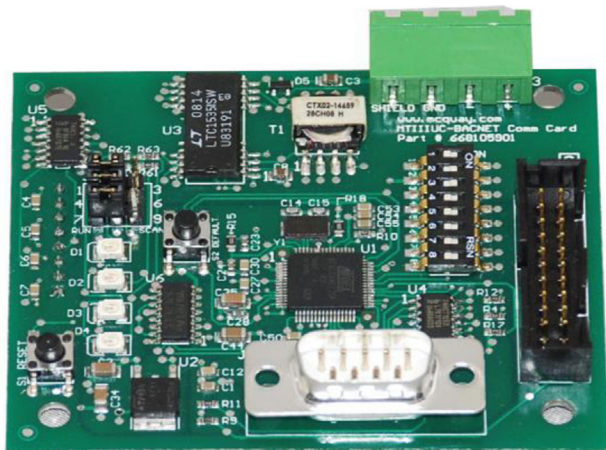

The unit controller is programmed and tested with all the logic required to monitor and control the unit. An optional wall sensor may be used with the communication module to provide limited local control of the fan coils and cabinet unit heater unit. Room sensor options include one with a setpoint adjustment, unit mode, fan speed, and tenant override. See actual sensor to make sure these options are present.

The unit controller monitors water and air temperatures and passes information to the communication module. The module communicates with the BAS, to provide network control of the fan coils and cabinet unit heater unit.

MicroTech Unit Controller with BACnet MS/TP Communication Module orchestrates the following unit operations:

- Enable heating and cooling to maintain setpoint based on a room sensor
- Monitors all equipment protection controls
- Monitors room and discharge air temperatures
- Monitors outside air temperature for units with economizer option
- Relays status of all vital unit functions

The MicroTech unit controller with an optional communication module should include:

- Return Air Temperature sensor (RAT) (factory- or field-mounted)
- Discharge Air Temperature sensor (DAT) (factory- or field-mounted)
- Entering Water Temperature sensor (EWT) (factory- or field-mounted)

NOTICE

Refer to IM 956 for details to install (RAT) & (DAT).



WARNING

When an optional wall-mounted room temperature sensor is connected to the unit controller, the Return Air Temperature (RAT) sensor must not be installed. A wall-mounted room temperature sensor and the return air temperature sensor must not be connected simultaneously or the unit will not operate properly.

The communication module provides access to setpoints for operational control

Available wall sensors include:

- Room sensor with LED status and tenant override button
- Room sensor with LCD display, fan speed selection switch, tenant override button, and $\pm 5^{\circ}\text{F}$ setpoint adjustment
- Room sensor with LCD display, fan speed selection switch, tenant override button, 55° to 95°F setpoint adjustment

Typical Wiring Diagrams

Figure 9: 1 PSC Motor, No Electric Heat, 2 Position Actuators, 2 Position Valves – Page 1

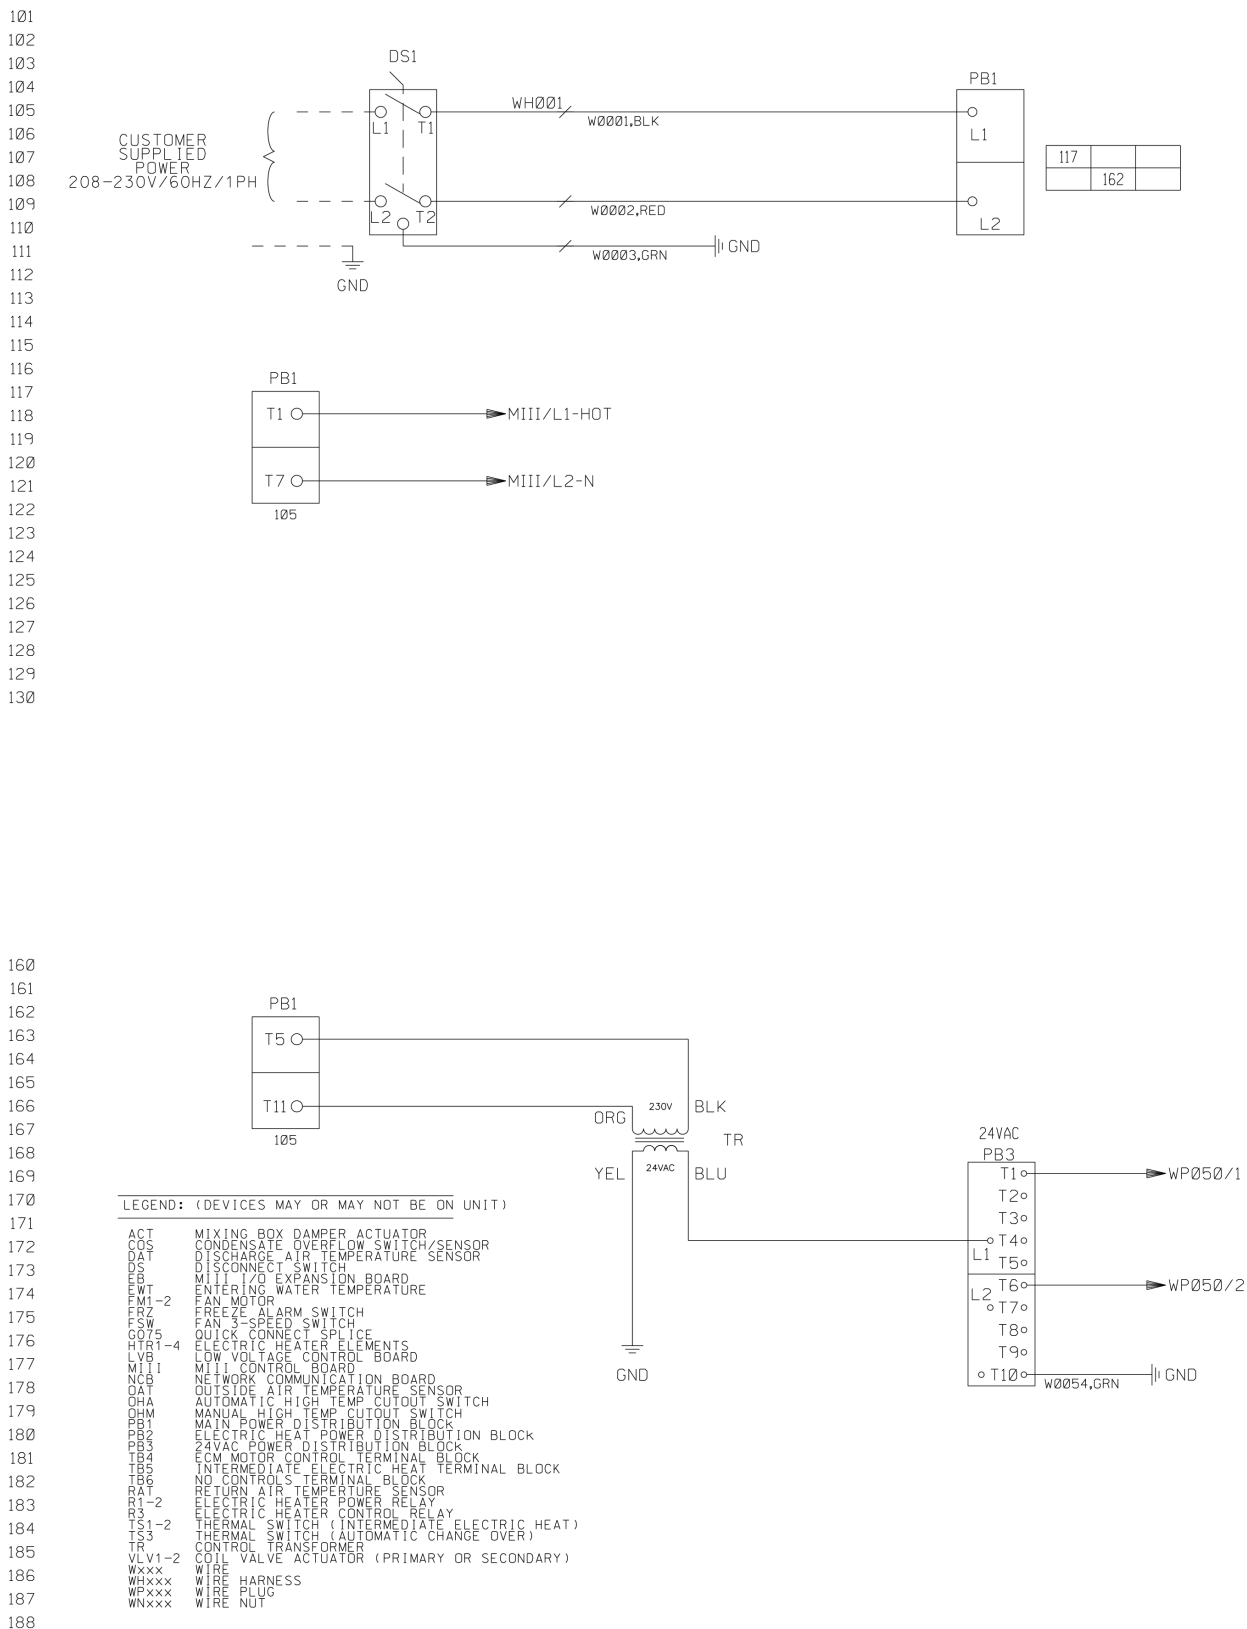


Figure 10: 1 PSC Motor, No Electric Heat, 2 Position Actuators, 2 Position Valves – Page 2

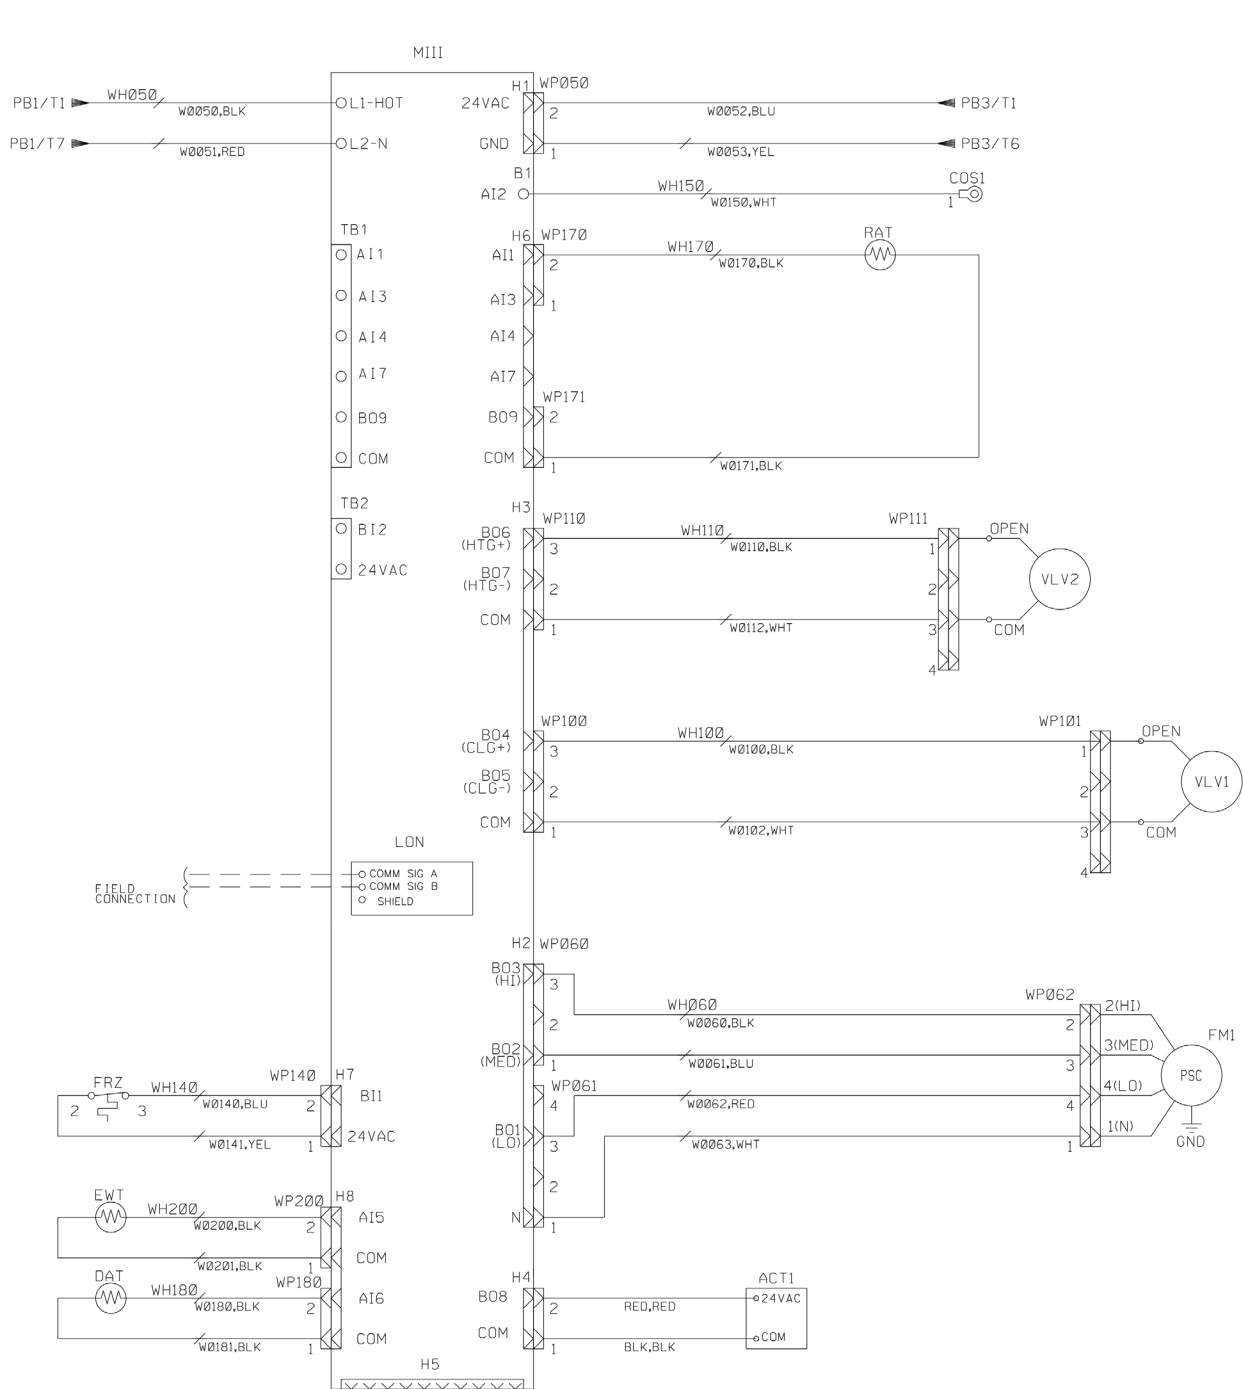


Figure 11: PSC Motor, No Electric Heat, Valve1 FLT, No Return Air Temperature – Page 1

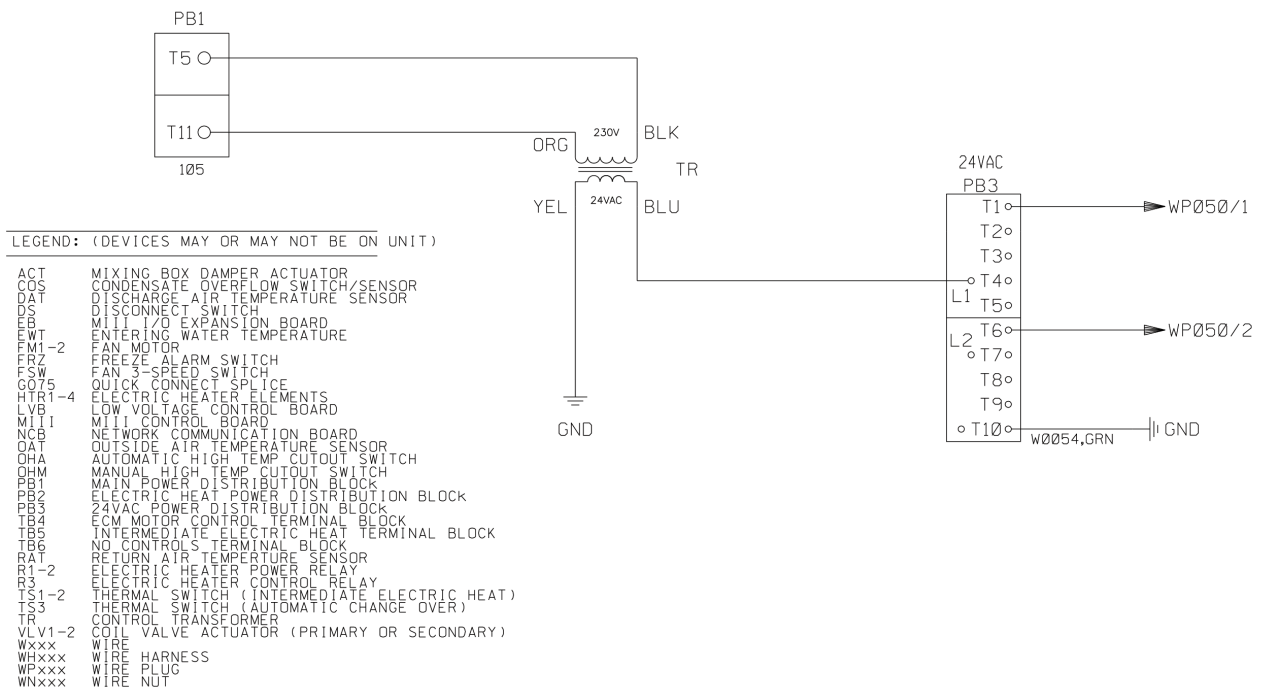
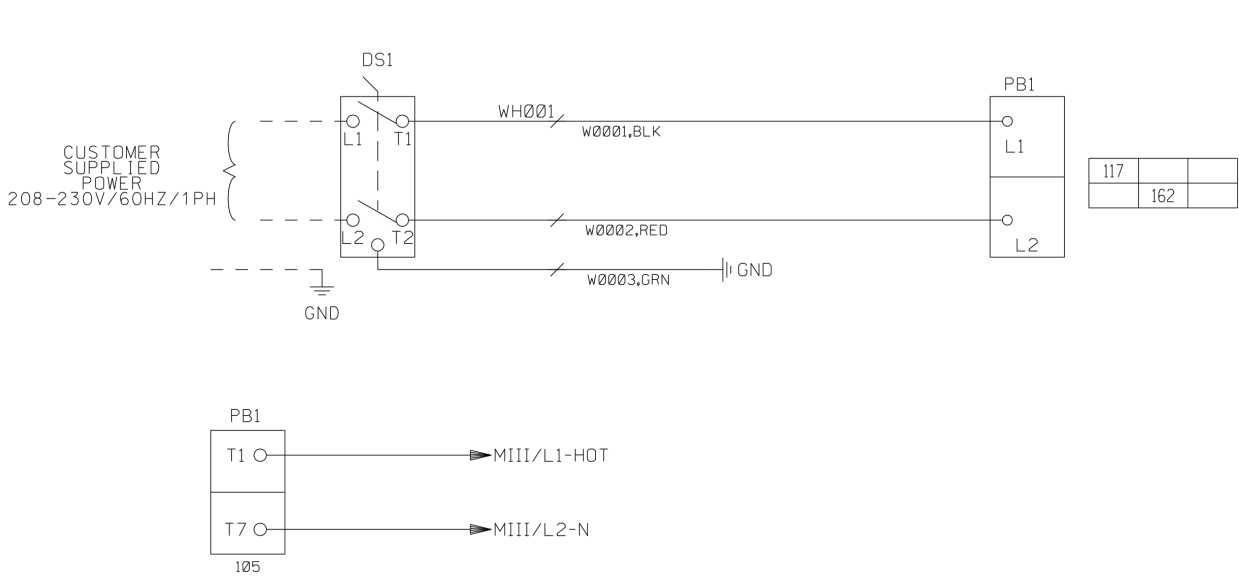


Figure 12: 1 PSC Motor, No Electric Heat, Valve1 FLT, No Return Air Temperature – Page 2

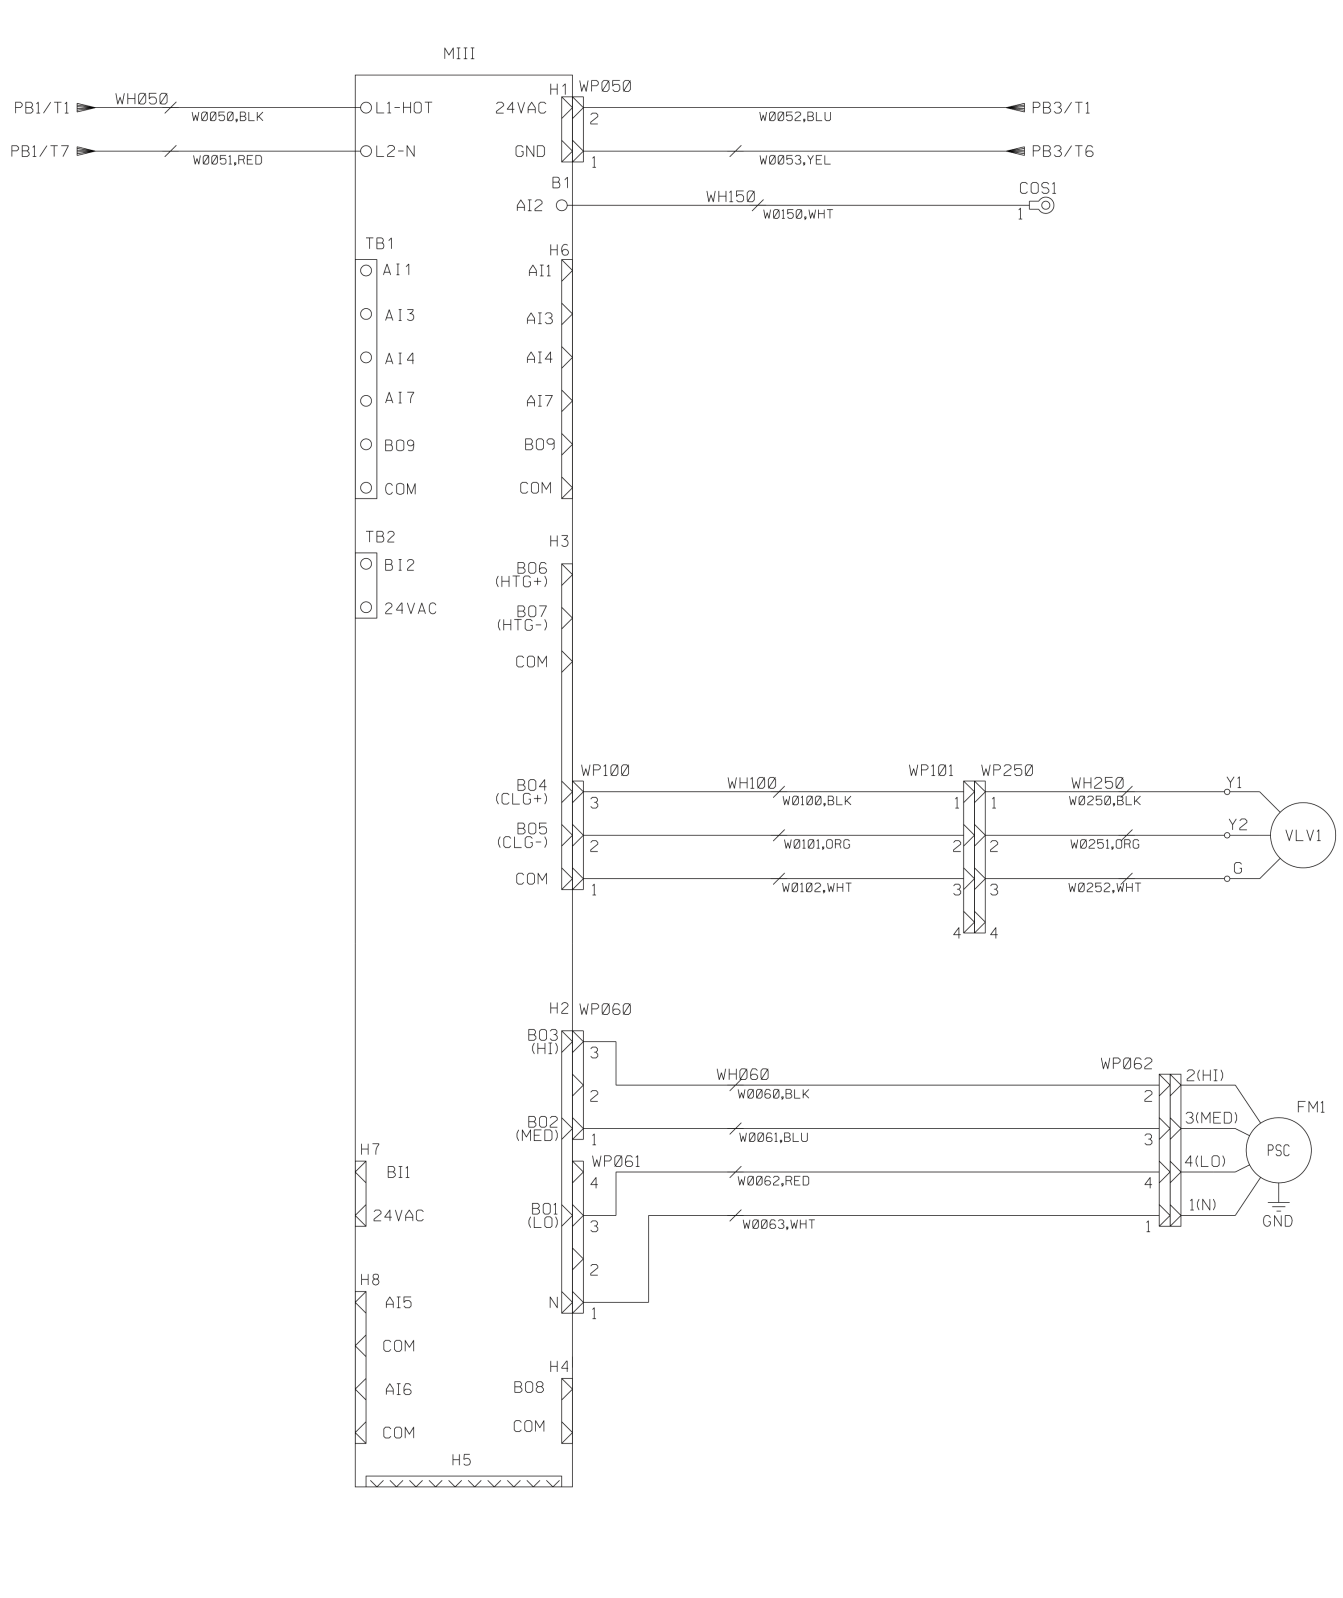


Figure 13: ECM Motor, Electric Heat, 230V, Economizer – Page 1


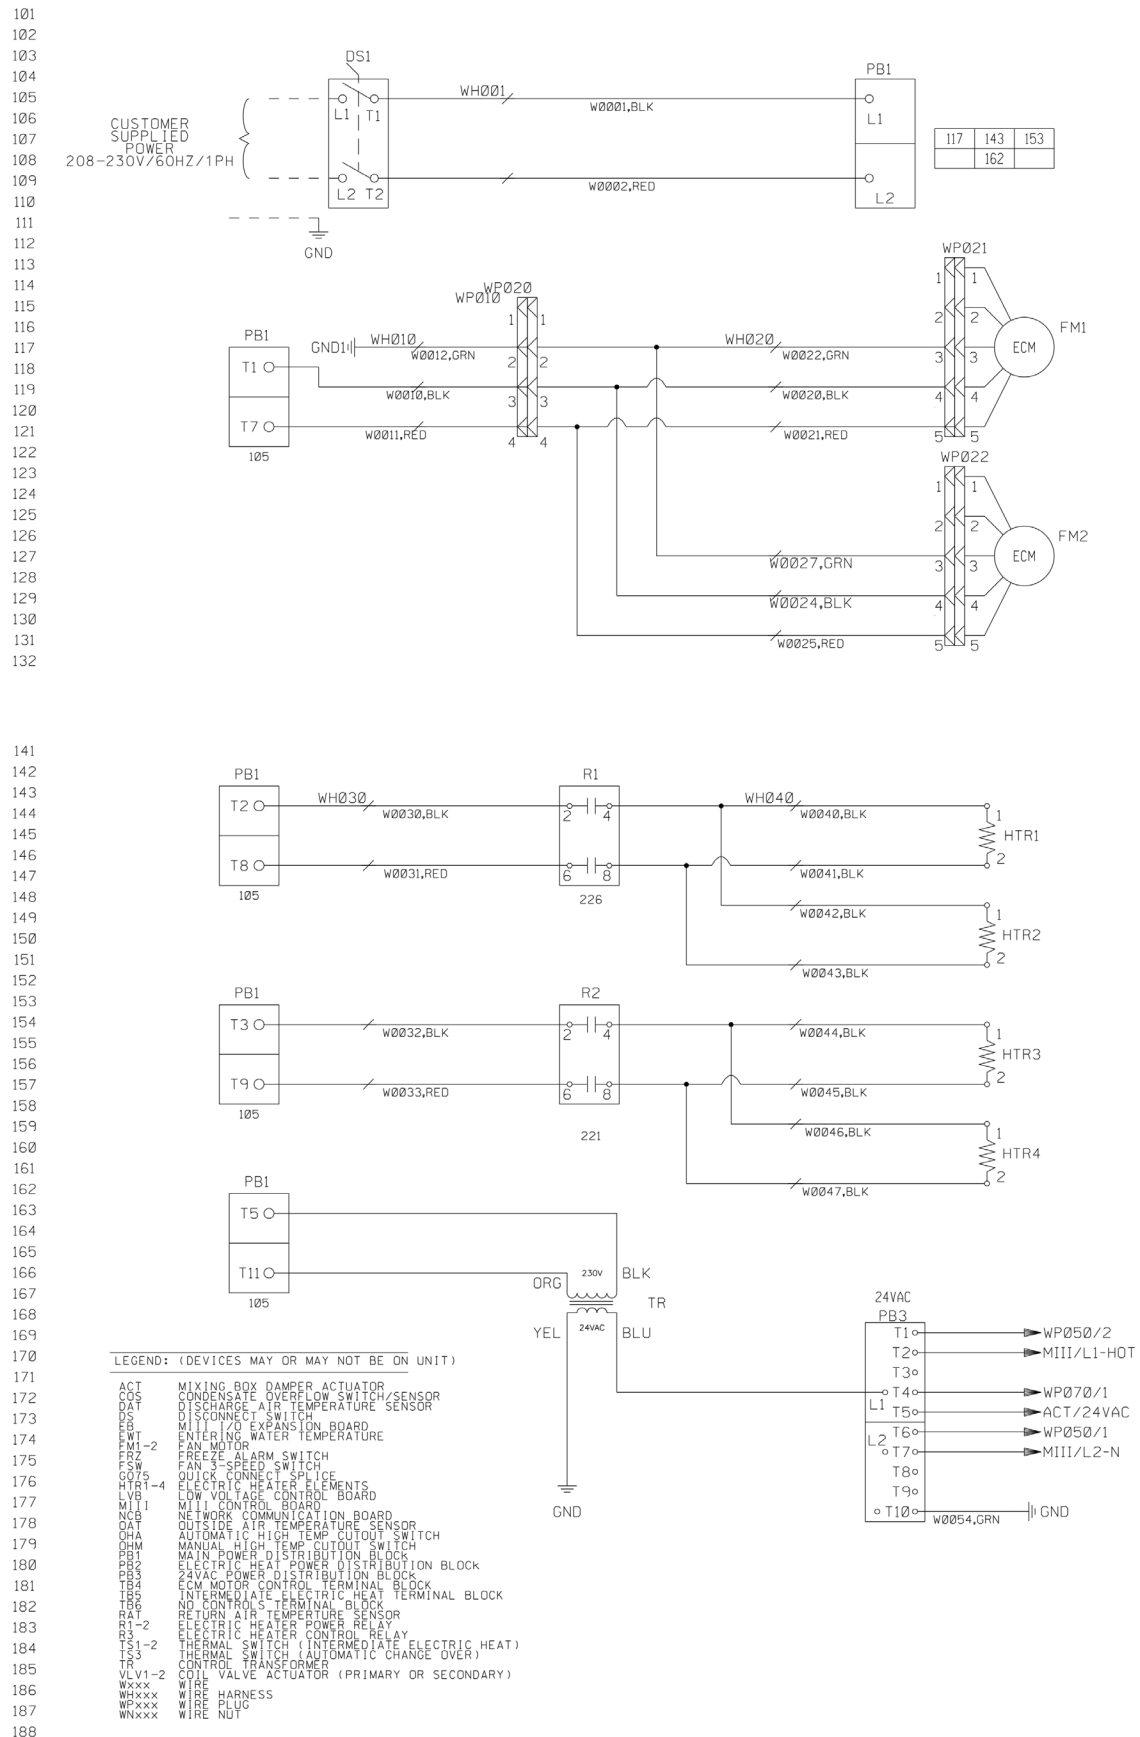


Figure 14: ECM Motor, Electric Heat, 230V, Economizer – Page 2



COMPLETE HVAC SYSTEM SOLUTIONS

SELF-CONTAINED | ROOFTOPS | COILS | CONDENSING UNITS
AIR HANDLERS | WATER-COOLED CHILLERS | AIR-COOLED CHILLERS
MODULAR CENTRAL PLANTS | CONNECTED BUILDING CONTROLS
UNIT HEATERS | FAN COILS | AIR PURIFIERS | WATER SOURCE HEAT PUMPS
VARIABLE AIR VOLUME UNITS | UNIT VENTILATORS

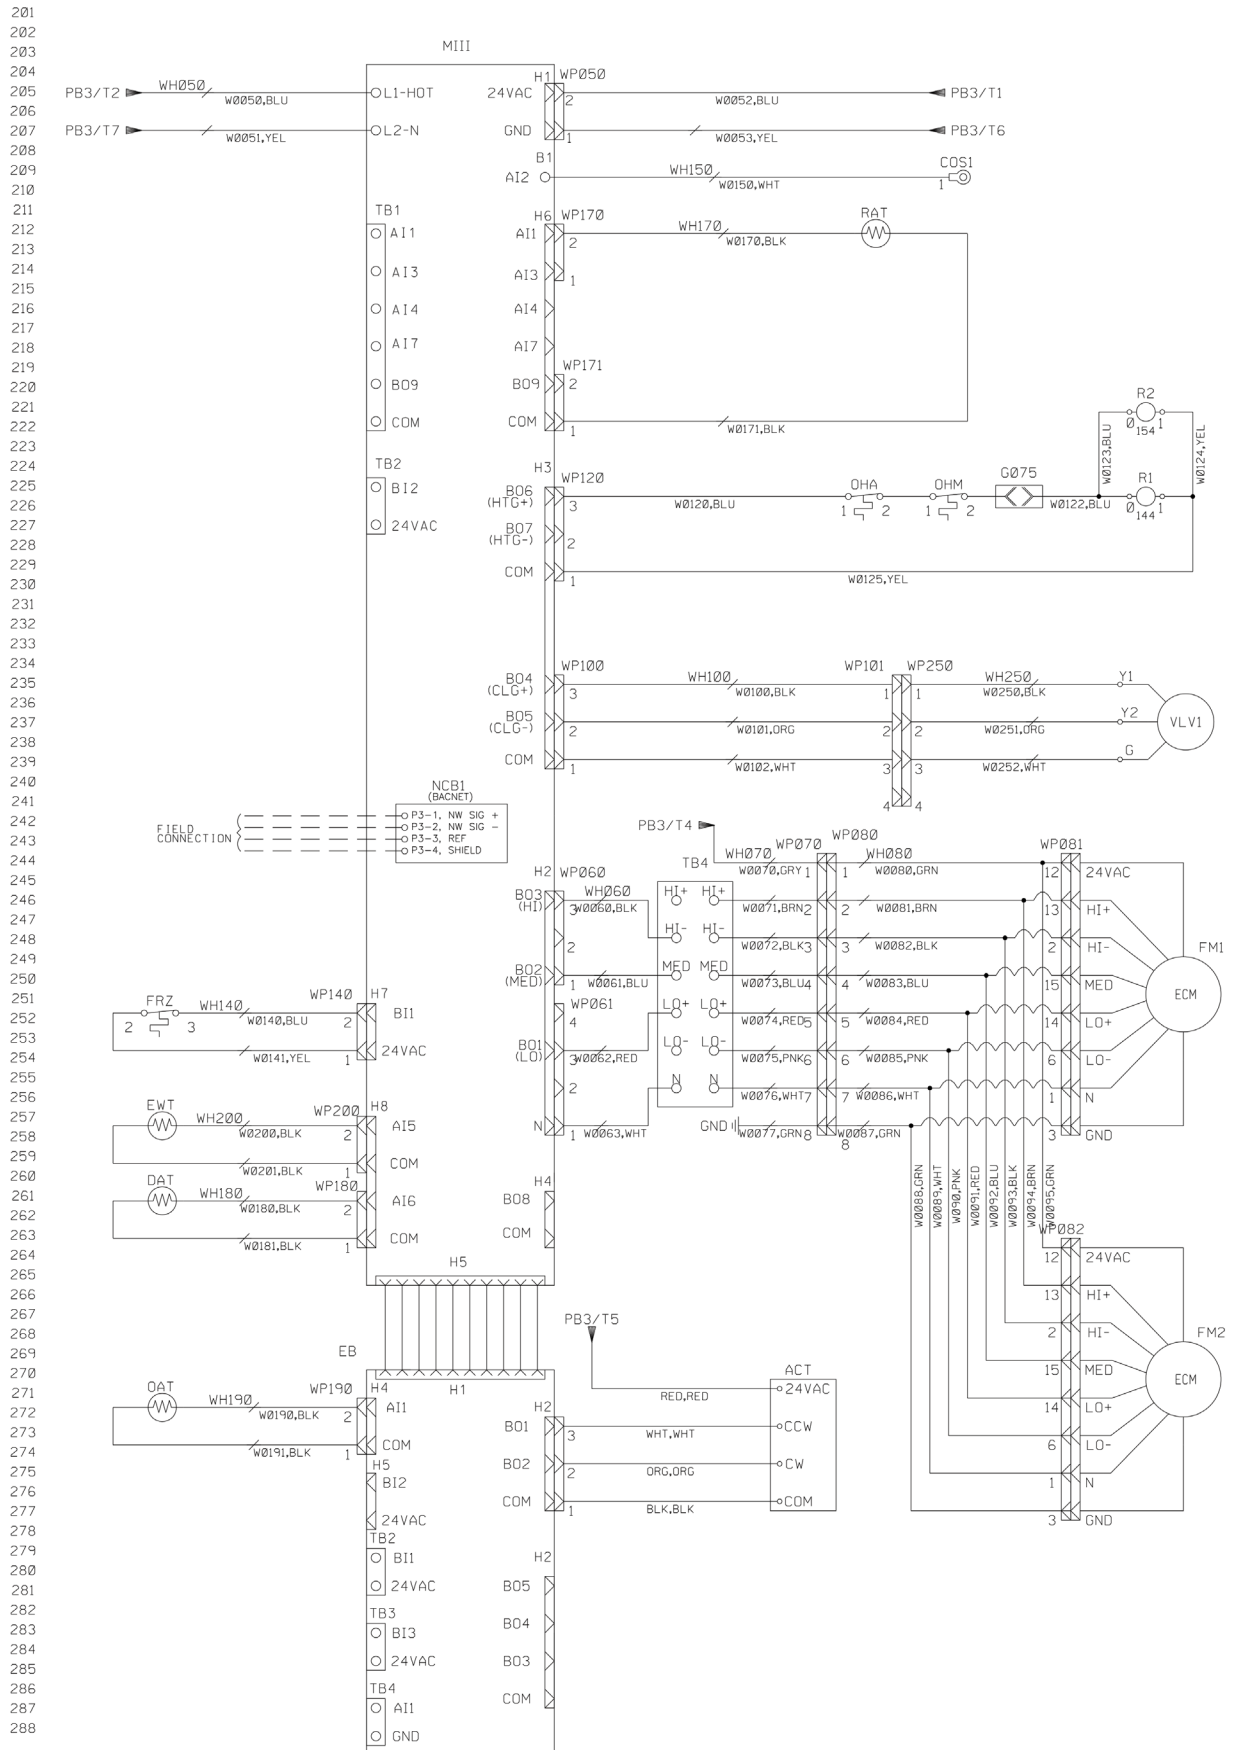

13600 INDUSTRIAL PARK BLVD. | MINNEAPOLIS, MN 55441
1-800-432-1342 | 763-553-5330

LEARN MORE AT
DAIKINAPPLIED.COM

PART NUMBER: OM1111

© 2026 DAIKIN APPLIED | (800) 432.1342 | WWW.DAIKINAPPLIED.COM