

SIEMENS



TEC Controller

Unit Conditioner - Fan Coil Unit
2-Stage Cooling and Electric
Heat, Application 2052

Application Note

Table of Contents

Overview 4

Hardware Inputs 5

Hardware Outputs..... 5

Ordering Notes 5

Sequence of Operation 6

Control Temperature Setpoints 6

Room Temperature and CTL TEMP 7

Day and Night Modes 8

Night Mode Override Switch 8

Heating/Cooling Switchover..... 8

Control Loops 9

Cooling Operation 9

Heating Operation..... 9

Electric Reheat 9

Fail Mode Operation 10


Application Notes 10

Wiring Diagram 11


Application 2052 Point Database 12

Overview

In Application 2052, the controller energizes a maximum of two stages of cooling and a maximum of three stages of electric heat in the fan coil unit. The fan coil unit also has a fan to circulate room air.

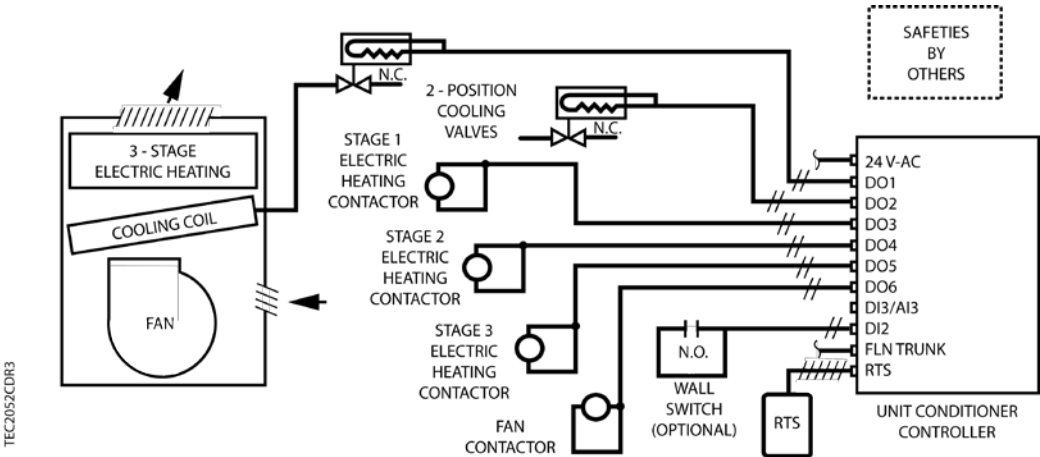

Application 2052 -- Fan Coil Unit - Two-Stage Cooling and Electric Heat Control Diagram.

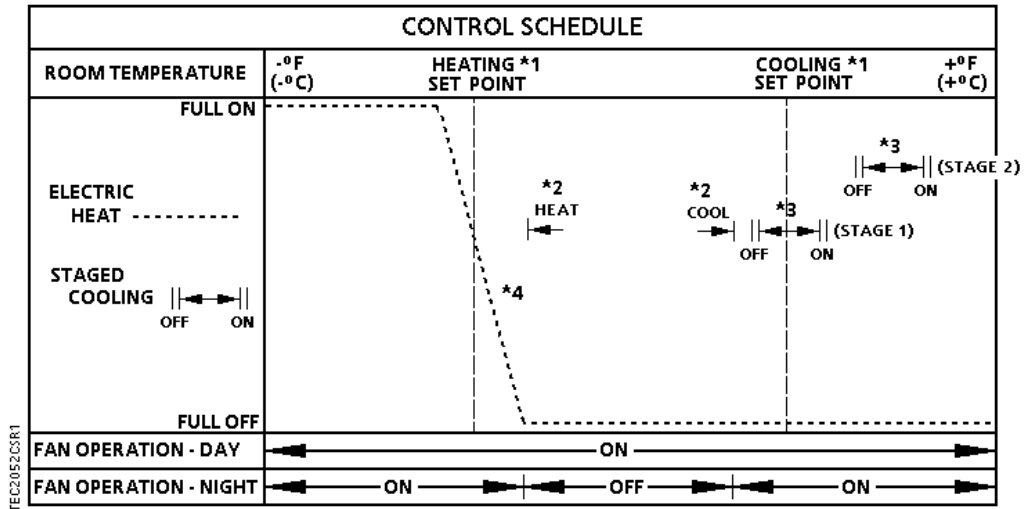

Application 2052 Control Schedule.



Hardware Inputs

Analog

- Auxiliary temperature sensor (optional)
- Room temperature sensor
- Room temperature setpoint dial (optional)

Digital

- Night mode override (optional)
- Wall switch (optional)

Hardware Outputs

Analog

- None

Digital

- Fan (switched 24 Vac, pilot duty)
- Stage 1 cooling (2-position valve actuator or cooling compressor)
- Stage 2 cooling (2-position valve actuator or cooling compressor)
- Stage 1 electric heat
- Stage 2 electric heat
- Stage 3 electric heat

Ordering Notes

540-110N Siemens TEC Unit Conditioner Controller

Sequence of Operation

The following paragraphs present the sequence of operation for the Siemens TEC Unit Conditioner (Fan Coil) Controller.

Control Temperature Setpoints

This application has a number of different room temperature setpoints (DAY HTG STPT, NGT CLG STPT, RM STPT DIAL, etc.). The application actually controls using the CTL STPT. CTL STPT is set to different values depending on its override status, the time of day, whether or not a temperature deadband (zero energy band) has been configured, and the type of RTS used.

CTL STPT is Overridden:

If CTL STPT is overridden, that value is used regardless of any other settings. This disables the setpoint deadband feature.

CTL STPT in Night Mode:

The controller is in Night Mode if DAY.NGT = NGT and NGT OVRD = NGT.

When the controller is in night mode, CTL STPT holds the value of NGT CLG STPT or NGT HTG STPT depending on the value of HEAT.COOL. When the controller is in night mode the value of RM STPT DIAL is ignored.

CTL STPT in Day Mode:

The controller is in Day Mode if DAY.NGT = DAY or NGT OVRD = DAY.

Without setpoint dial:

When the controller is in day mode and STPT DIAL = NO, CTL STPT holds the value of DAY CLG STPT or DAY HTG STPT depending on the value of HEAT.COOL.

With setpoint dial:

When the controller is in day mode and STPT DIAL = YES, CTL STPT is set based on the value of the setpoint dial and the setpoint deadband.

The setpoint deadband exists to allow the controller to provide a separation of the heating and cooling temperature setpoints when a setpoint dial is enabled.

The setpoint deadband is the difference between the cooling and heating day setpoints (DAY CLG STPT - DAY HTG STPT). The setpoint deadband can be disabled by setting DAY HTG STPT equal to DAY CLG STPT. When DAY HTG STPT does not equal DAY CLG STPT, a setpoint deadband (or zero energy band) is used.

The following values are used in the calculation of CTL STPT:

- *Dial value* is the value of RM STPT DIAL limited between the value of RM STPT MIN and RM STPT MAX.
- *Deadband* is the value of the difference between DAY CLG STPT and DAY HTG STPT, half of which is applied to establish the current heating and cooling setpoints.
 - $Deadband = (DAY\ CLG\ STPT - DAY\ HTG\ STPT)$

CTL STPT is calculated as follows:

With Deadband Disabled:

CTL STPT = *Dial value*

With Deadband enabled in Heat Mode:

CTL STPT = *Dial value* – 0.5 * *Deadband* (limited between the value of RM STPT MIN and RM STPT MAX)


With Deadband enabled in Cool Mode:

CTL STPT = *Dial value* + 0.5 * *Deadband* (limited between the value of RM STPT MIN and RM STPT MAX).



NOTE:

If RM STPT DIAL is failed, it maintains the last known value.

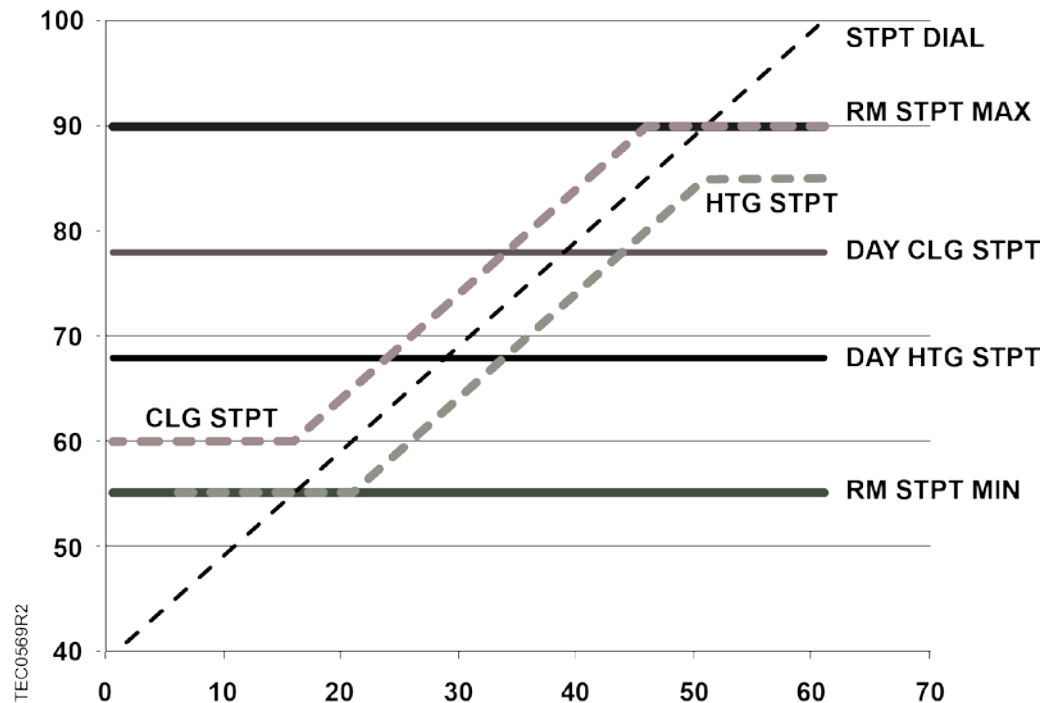

Room Temperature and CTL TEMP

ROOM TEMP is the temperature that is being sensed by the room temperature sensor (RTS).

CTL TEMP is the room temperature that is used for control purposes. In other words, what the application is trying to do is to maintain CTL TEMP at the control setpoint.

If CTL TEMP is overridden then:

- CTL TEMP equals its overridden value and ROOM TEMP has no effect on the value of CTL TEMP.

Day and Night Modes

The day/night status of the space is determined by the status of DAY.NGT. The control of this point differs depending on whether the controller is monitoring the status of a wall switch or if the controller is connected to a field panel.

When a wall switch is physically connected to the termination strip on the controller DI 2 (see the Control Diagram(s), and WALL SWITCH = YES, the controller monitors the status of DI 2.) When the status of DI 2 is ON (the switch is closed), then DAY.NGT will be set to DAY indicating that the controller is in day mode. When the status of DI 2 is OFF (the switch is open), then DAY.NGT will be set to NIGHT indicating that the controller is in night mode.

When WALL SWITCH = NO, the controller does not monitor the status of the wall switch, even if one is connected to it. In this case, if the controller is operating stand-alone, then the controller stays in day mode all the time. If the controller is operating with centralized control (that is, it is connected to a field panel), then the field panel can send an operator or PPCL command to override the status of DAY.NGT. See *Powers Process Control Language (PPCL) User's Manual* (125-1896) and *Field Panel User's Manual* (125-3019) or *BACnet Field Panel User's Manual* (125-3020) for more information.

Night Mode Override Switch

If an override switch is present on the room temperature sensor and a value (in hours) other than zero has been entered into OVRD TIME, pressing the override switch will reset the controller to DAY operational mode for the time period that is set in OVRD TIME. The status of NGT OVRD changes to DAY. After the override time elapses, the controller returns to night mode and the status of NGT OVRD changes back to NIGHT. The override switch on the room sensor will only affect the controller when it is in night mode.

Heating/Cooling Switchover

The heating/cooling switchover determines whether the controller is in heating or cooling mode by monitoring the room temperature and the demand for heating and cooling (as determined by the temperature control loops).

If the following conditions are met for the length of time set in SWITCH TIME, the controller switches from heating to cooling mode by setting HEAT.COOL to COOL:

- HTG LOOPOUT < SWITCH LIMIT.
- CTL TEMP > CTL STPT by at least the value set in SWITCH DBAND.
- CTL TEMP > the appropriate cooling setpoint minus SWITCH DBAND.

If the following conditions are met for the length of time set in SWITCH TIME, the controller switches from cooling to heating mode by setting HEAT.COOL to HEAT:

- CLG LOOPOUT < SWITCH LIMIT.
- CTL TEMP < CTL STPT by at least the value set SWITCH DBAND.
- CTL TEMP < the appropriate heating setpoint plus SWITCH DBAND.



Control Loops

The Siemens TEC Unit Conditioner (Fan Coil) Controller is controlled by two Proportional, Integral, and Derivative (PID) temperature loops.

The two temperature loops are a cooling loop and a heating loop. The active temperature loop maintains room temperature at the value in CTL STPT. See Control Temperature Setpoints [→ 6].

Cooling Operation

In cooling mode, the controller uses CTL STPT and CTL TEMP as inputs for the cooling loop.

The cooling loop controls up to two stages of cooling as defined by the value of CLG STG CNT.

The staged cooling operates as follows:

- CLG STG 1 will turn ON when CLG LOOPOUT > CLG 1 ON , provided that CLG STG 1 has been OFF for at least the time set in CLG MIN OFF .
- CLG STG 2 will turn ON when CLG LOOPOUT > CLG 2 ON , provided that CLG STG 2 has been OFF for at least the time set in CLG MIN OFF.
- CLG STG 2 will turn OFF, when CLG LOOPOUT < CLG 2 OFF , provided that CLG STG 2 has been ON for at least the time set in CLG MIN ON .
- CLG STG 1 will turn OFF, when CLG LOOPOUT < CLG 1 OFF , provided that CLG STG 1 has been ON for at least the time set in CLG MIN ON.
- HTG LOOPOUT = 0%.

When in heating mode, both stages of cooling are OFF.

Heating Operation

In heating mode, the controller uses CTL STPT and CTL TEMP as inputs for the heating loop.

The output of the heating loop, HTG LOOPOUT, modulates the electric reheat in order to warm up the space. CLG LOOPOUT is set to 0%.

When in cooling mode, all stages of heating are OFF.

Electric Reheat



⚠ CAUTION

Verify that the equipment is supplied with safeties by others, to ensure there is airflow across the heating coils when they are to be energized.

The heating loop controls up to three stages of electric reheat to warm up the room. The electric reheat is time modulated using a duty cycle as shown in the following example.

When the controller is in cooling mode, the electric heat is OFF at all times.

Example

If the duty cycle is 10 minutes (STAGE TIME = 10 minutes), and the heating loop is calling for 60% of heating (HTG LOOPOUT = 60%) for every 10-minute period, the stages of electric auxiliary heat cycle are as follows:

	Stage 1: minutes		Stage 2: minutes		Stage 3: minutes	
	ON	OFF	ON	OFF	ON	OFF
With 1 stage of electronic heat	6	4	--	--	--	--
With 2 stages of electric heat	10	0	2	8	--	--
With 3 stages of electric heat	10	0	8	2	0	10

Fail Mode Operation

If the room temperature sensor fails, the controller operates using the last known temperature value.

Application Notes

- If temperature swings in the room are excessive or there is trouble maintaining the setpoint, the cooling loop, the heating loop, or both need to be tuned.
- The controller as shipped from the factory keeps all associated equipment OFF. See the *Start-up Procedures* document for how to release the controller and its equipment to application control.
- Spare DOs can be used as auxiliary points that are controlled by the field panel after being defined in the field panel's database. DO 3, DO 4, and DO 5 control the stages of electric heat. If less than three stages are being controlled by the application, the DOs that are not used will be spare. See the *Start-up Procedures* document on Asset Portal or InfoLink for more information.

For more information, contact your nearest Siemens Industry, Inc. representative.

Wiring Diagram




CAUTION

The controller's DOs control 24 Vac loads only. The maximum rating is 12 VA for each DO. An external interposing relay is required for any of the following:

- VA requirements higher than the maximum
- 110 or 220 Vac requirements
- DC power requirements
- Separate transformers used to power the load

(for example part number 540-147, Terminal Equipment Controller Relay Module)

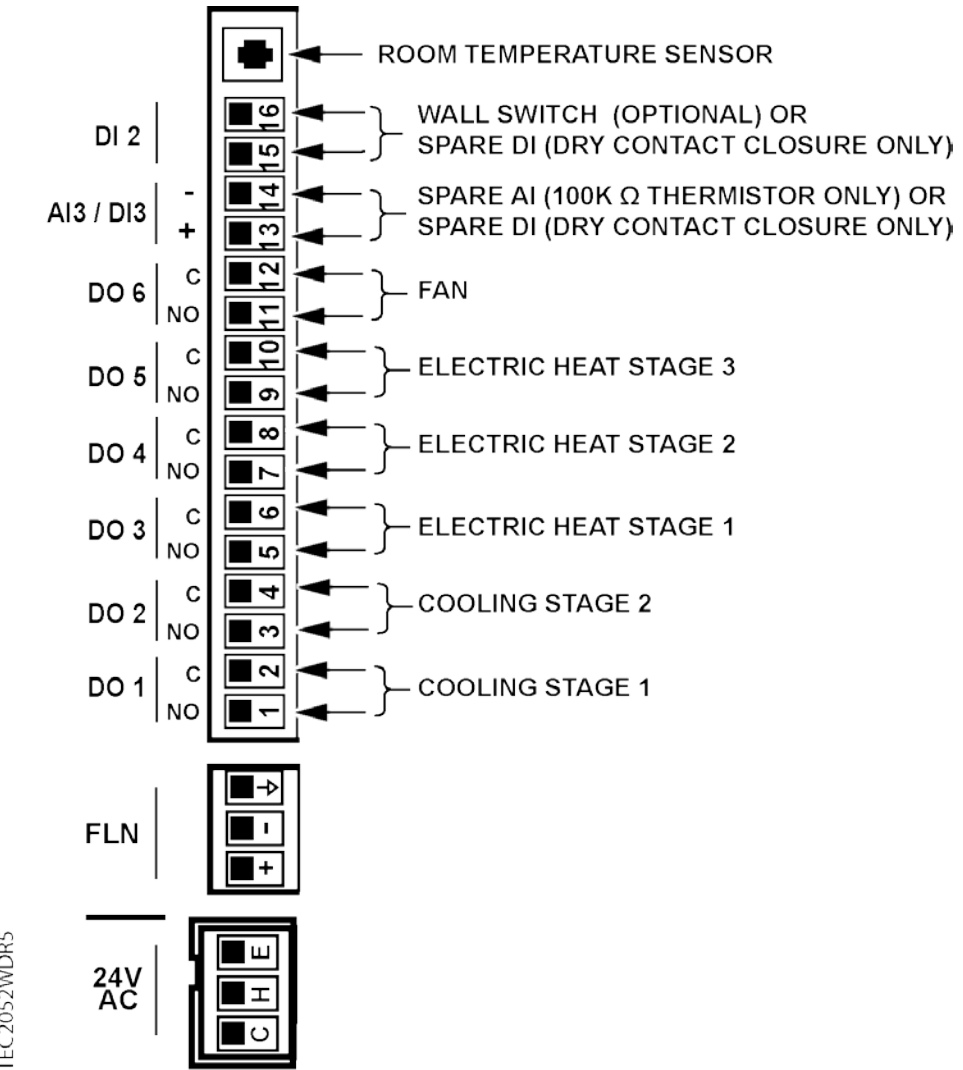

Application 2052 – Fan Coil Unit Two-Stage Cooling and Electric Heat.

Application 2052 Point Database

Point Number	Descriptor	Factory Default (SI Units) ²⁾	Eng Units (SI Units)	Slope (SI Units)	Intercept (SI Units)	On Text	Off Text
1	CTLR ADDRESS	99	--	1	0	--	--
2	APPLICATION	2090	--	1	0	--	--
{04}	ROOM TEMP	74.0 (23.44888)	DEG F (DEG C)	0.25 (0.14)	48.0 (8.88888)	--	--
{05}	HEAT.COOL	COOL	--	--	--	HEAT	COOL
6	DAY CLG STPT	74.0 (23.44888)	DEG F (DEG C)	0.25 (0.14)	48.0 (8.88888)	--	--
7	DAY HTG STPT	70.0 (21.20888)	DEG F (DEG C)	0.25 (0.14)	48.0 (8.88888)	--	--
8	NGT CLG STPT	82.0 (27.92888)	DEG F (DEG C)	0.25 (0.14)	48.0 (8.88888)	--	--
9	NGT HTG STPT	65.0 (18.40888)	DEG F (DEG C)	0.25 (0.14)	48.0 (8.88888)	--	--
11	RM STPT MIN	55.0 (12.80888)	DEG F (DEG C)	0.25 (0.14)	48.0 (8.88888)	--	--
12	RM STPT MAX	90.0 (32.40888)	DEG F (DEG C)	0.25 (0.14)	48.0 (8.88888)	--	--
{13}	RM STPT DIAL	74.0 (23.44888)	DEG F (DEG C)	0.25 (0.14)	48.0 (8.88888)	--	--
14	STPT DIAL	NO	--	--	--	YES	NO
{15}	AUX TEMP	74.0 (23.495556)	DEG F (DEG C)	0.5 (0.28)	37.5 (3.055556)	--	--
18	WALL SWITCH	NO	--	--	--	YES	NO
{19}	DI OVRD SW	OFF	--	--	--	ON	OFF
20	OVRD TIME	0	HRS	1	0	--	--
{21}	NGT OVRD	NIGHT	--	--	--	NIGHT	DAY
{24}	DI 2	OFF	--	--	--	ON	OFF
{25}	DI 3	OFF	--	--	--	ON	OFF
{29}	DAY.NGT	DAY	--	--	--	NIGHT	DAY
{41}	CLG STG 1	OFF	--	--	--	ON	OFF
{42}	CLG STG 2	OFF	--	--	--	ON	OFF
{43}	HTG STG 1	OFF	--	--	--	ON	OFF
{44}	HTG STG 2	OFF	--	--	--	ON	OFF
{45}	HTG STG 3	OFF	--	--	--	ON	OFF
{46}	FAN	OFF	--	--	--	ON	OFF
58	MTR SETUP	0	--	1	0	--	--
59	DO DIR. REV	0	--	1	0	--	--

Point Number	Descriptor	Factory Default (SI Units) ²⁾	Eng Units (SI Units)	Slope (SI Units)	Intercept (SI Units)	On Text	Off Text
60	CYCLE FAN	NO	--	--	--	YES	NO
63	CLG P GAIN	20.0 (36.0)	--	0.25 (0.45)	0	--	--
64	CLG I GAIN	0.01 (0.018)	--	0.001 (0.0018)	0	--	--
65	CLG D GAIN	0 (0.0)	--	2 (3.6)	0	--	--
66	CLG BIAS	0	PCT	0.4	0	--	--
67	HTG P GAIN	10.0 (18.0)	--	0.25 (0.45)	0	--	--
68	HTG I GAIN	0.01 (0.018)	--	0.001 (0.0018)	0	--	--
69	HTG D GAIN	0 (0.0)	--	2 (3.6)	0	--	--
70	HTG BIAS	0	PCT	0.4	0	--	--
71	CLG 1 ON	40	PCT	0.4	0	--	--
72	CLG 1 OFF	20	PCT	0.4	0	--	--
73	CLG 2 ON	80	PCT	0.4	0	--	--
74	CLG 2 OFF	60	PCT	0.4	0	--	--
75	CLG STG CNT	2	--	1	0	--	--
76	CLG MIN ON	120	SEC	1	0	--	--
77	CLG MIN OFF	120	SEC	1	0	--	--
{78}	CTL TEMP	74.0 (23.44888)	DEG F (DEG C)	0.25 (0.14)	48.0 (8.88888)	--	--
{79}	CLG LOOPOUT	0	PCT	0.4	0	--	--
{80}	HTG LOOPOUT	0	PCT	0.4	0	--	--
{81}	AVG HEAT OUT	0	--	2	0	--	--
82	HTG STG MAX	90	PCT	0.4	0	--	--
83	HTG STG MIN	10	PCT	0.4	0	--	--
84	STAGE FAN	10	PCT	0.4	0	--	--
85	SWITCH LIMIT	5.2	PCT	0.4	0	--	--
86	SWITCH TIME	10	MIN	1	0	--	--
88	HTG STG CNT	1	--	1	0	--	--
89	HTG STG TIME	10	MIN	1	0	--	--
90	SWITCH DBAND	1.0 (0.56)	DEG F (DEG C)	0.25 (0.14)	0	--	--
{92}	CTL STPT	74.0 (23.44888)	DEG F (DEG C)	0.25 (0.14)	48.0 (8.88888)	--	--
98	LOOP TIME	5	SEC	1	0	--	--
{99}	ERROR STATUS	0	--	1	0	--	--

¹⁾ Points not listed are not used in this application.

²⁾ A single value in a column means that the value is the same in English units and in SI units.

- ³⁾ Point numbers that appear in brackets { } may be unbundled at the field panel.

Issued by
Siemens Industry, Inc.
Building Technologies Division
1000 Deerfield Pkwy
Buffalo Grove IL 60089
Tel. +1 847-215-1000

© 2014 Copyright Siemens Industry, Inc.
Technical specifications and availability subject to change without notice.