



## Installation and Maintenance Manual

**IM 1321-1**

Group: **Air Cleaners**

Part Number: **910392721**

Date: **May 2022**


## Daikin Air Purifier

**Unit Nominal Capacity Ranges – 500 CFM and 1000 CFM**



<b>Hazard Identification Information</b> . . . . .	<b>2</b>	<b>Operating Instructions</b> . . . . .	<b>7</b>
<b>Model Nomenclature</b> . . . . .	<b>2</b>	CFM Adjust Example: . . . . .	7
<b>Introduction</b> . . . . .	<b>3</b>	DAP.0500.P.0.R ASTROcel Airflow/Voltage . . . . .	7
<b>Precautions and Warnings</b> . . . . .	<b>3</b>	DAP.1000.P.0.R ASTROcel Airflow/Voltage . . . . .	7
<b>Important Safety Instructions</b> . . . . .	<b>3</b>	DAP.0500.P.0.R MEGAcel Airflow/Voltage . . . . .	8
Intended Use . . . . .	3	DAP.1000.P.0.R MEGAcel Airflow/Voltage . . . . .	8
<b>Product Overview</b> . . . . .	<b>4</b>	DAP.0500.E.0.R Airflow/Voltage . . . . .	8
Product Overview . . . . .	4	DAP.1000.E.0.R Airflow/Voltage . . . . .	8
Features . . . . .	4	Operating Environmental Conditions . . . . .	9
<b>Shipping and Receiving</b> . . . . .	<b>5</b>	Storage Environment . . . . .	9
Unpacking . . . . .	5	On/Off and Air Flow Selection . . . . .	9
Items Shipped Per Carton: . . . . .	5	Internal Fuse . . . . .	9
<b>Installation Instructions</b> . . . . .	<b>5</b>	<b>Wiring Diagram</b> . . . . .	<b>9</b>
Tools Required . . . . .	5	EC Motor, 120V/60Hz/1PH . . . . .	9
Quick Start Guide and Operation . . . . .	6	<b>Maintenance and Service</b> . . . . .	<b>10</b>
Air Flow Calculation . . . . .	6	Filter Replacement . . . . .	10
Motor Speed Adjustment . . . . .	6	Removing The Fan Motor . . . . .	11
		<b>Troubleshooting Guide</b> . . . . .	<b>12</b>
		<b>Replacement Parts</b> . . . . .	<b>12</b>


**Hazard Identification Information**

 **DANGER**

Danger indicates a hazardous situation, which will result in death or serious injury if not avoided.

 **CAUTION**

Caution indicates a potentially hazardous situation, which can result in minor injury or equipment damage if not avoided.

 **WARNING**

Warning indicates a potentially hazardous situation, which can result in property damage, severe personal injury, or death if not avoided.

**Note:** *Indicates important details or clarifying statements for information presented.*

**Model Nomenclature**

<b>Code Item</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>
<b>Code Option</b>	DAP	0500	P	0	R

Category	Code Option	Code Designation	Description
<b>Product Category</b>	1-3	DAP	= Daikin Air Purifier
<b>Capacity</b>	4-7	0500	= 500 CFM Nominal
		1000	= 1000 CFM Nominal
<b>Product Class</b>	8	P	= Premium (EC Motor, 3 Speed Selection Switch, 4" MERV 13 Pre-Filter, 12" HEPA Post-Filter)
		E	= Economy (EC Motor, 3 Speed Selection Switch, 2" MERV 8 Pre-Filter, 4" MERV 13 Post-Filter)
<b>Accessories</b>	9	0	= None
<b>Product Type</b>	10	R	= Recirculation

- P – Premium (4" MERV 13 Pre Filter, HEPA Post Filter)
- E – Economy (2" MERV 8 Pre Filter, 4" MERV 13 Post Filter)
- 0 – No Accessories
- R – Recirculation
- E – Exhaust (duct collar)

This document contains the information necessary to properly receive, assemble, install, operate, and maintain the Daikin Air Purifier. The purchaser, installer, and operator of the Daikin Air Purifier **MUST** read and comply with this document in its entirety. Failure to comply with the requirements of this document may result in serious injury, potentially death, and void the product warranty.

These instructions are specific to the Daikin Air Purifier. All ancillary tasks including, but not limited to, electrical and mechanical work, equipment handling, and safety procedures must be performed in accordance with industry accepted practice and all relevant local, state, and federal government codes, laws, and policies.

Before proceeding with installation, operation, or maintenance, review this Installation, Operation, and Maintenance Manual in its entirety and all safety procedures with your company's safety personnel.

**Precautions and Warnings**

- Equipment must be properly transported and handled, as improper transport and/or handling can result in damage and/or blemishes.
- Deliveries are to be immediately inspected in the presence of the freight carrier to ensure equipment is delivered in full and damage free.
- The installation site and environmental conditions must be suitable for equipment installation and operation.

**Important Safety Instructions  
Read and Save These Instructions**

**WARNING**

To reduce the risk of fire, electrical shock, or personal injury, you must observe the following:

1. Equipment must be installed and operated with filters specified in this document. Other filters cannot be substituted as this will impact the performance of the equipment.
2. Use this equipment in the manner intended by the manufacturer. If you have questions, contact the manufacturer.

**Note:** See back page of this manual for contact information.

3. Before servicing or cleaning equipment, turn the power dial located on the right side of the unit to "OFF" and unplug the power cable to prevent power from being switched on accidentally.
4. Power cord should never be exposed to water, heat, or sharp objects. Check power cord before use. Never operate with a damaged power cord, replace immediately.
5. Equipment should always be operated indoors and in HVAC conditioned space, never be exposed to water.
6. Installation work and electrical wiring must be done by a qualified person(s) in accordance with all applicable codes and standards, including fire rated construction.
7. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
8. When cutting or drilling into wall or ceiling, do not damage electrical wiring or other hidden utilities.
9. Ducted fans must always be vented to the outdoors.

**DANGER**

**LOCKOUT/TAGOUT** all power sources prior to wiring or servicing the unit. Hazardous voltage can cause serious injury or death. Disconnect electric power before servicing equipment. More than one disconnect may be required to de-energize the unit.

**Intended Use**

The Daikin Air Purifier is designed to increase Indoor Air Quality within classrooms, clinics, office buildings, restaurants, and healthcare facilities. This is accomplished by recirculating conditioned air and removing contaminants from the space.

## Product Overview

The Daikin Air Purifier is **Not Intended** for use as a dust/smoke extraction system for remediation of a “dirty” environment. Such use will significantly reduce product performance and may effect warranty coverage.

The Daikin Air Purifier platform includes a Premium and Economy model tailored to provide solutions to those with specific needs and/or applications. The Premium model features UL900 certified HEPA filtration. The Economy model features MERV 13 filtration.

Premium and Economy models are both offered in 500 CFM and 1000 CFM nominal capacities. Refer to "[Table 1: Specifications](#)" for all models in the platform.

- EC Motor technology for efficient operation of 2 different capacity ranges
- Pre-installed locking caster wheels and filters
- No assembly required
- 3-speed selection dial with customizable Low, Medium, and High settings
- 115V/120V operation for plug-&-play installation
- Green LED light “ON” indicator
- Double layer 20 gauge cabinet with powder coat finish
- Internally fuse protected
- UL 507 Listed
- One-year limited warranty

## Features

- 2 stage filtration technology
  - **Premium Models** – 4" MERV 13 Pre-Filter and 12" HEPA Post-Filter – 99.97% capture efficiency of particles 0.3 microns or greater
  - **Economy Models** – 2" MERV 8 Pre-Filter and 4" MERV 13 Post-Filter

**Table 1: Specifications**

Daikin Air Purifier Models				
Model Type	500 CFM Premium Recirculation	1000 CFM Premium Recirculation	500 CFM Economy Recirculation	1000 CFM Economy Recirculation
Part Number	263666806	263666807	263666808	263666809
Model Number	DAP.0500.P.0.R	DAP.1000.P.0.R	DAP.0500.E.0.R	DAP.1000.E.0.R
Voltage-Hz	120V-60Hz	120V-60Hz	120V-60Hz	120V-60Hz
Output Power (Watts)	250	750	250	750
Max Airflow Rate (CFM)	800	1200	800	1200
* Operational Airflow Rate (CFM)	300-550	450-1000	350-550	500-1000
Low/Med/High Settings (CFM)	300/450/550	450/750/1000	350/450/550	500/750/1000
Dimensions (H x W x D)	48" x 20 <sup>5</sup> / <sub>8</sub> " x 20 <sup>3</sup> / <sub>4</sub> "	48" x 20 <sup>5</sup> / <sub>8</sub> " x 20 <sup>3</sup> / <sub>4</sub> "	48" x 20 <sup>5</sup> / <sub>8</sub> " x 20 <sup>3</sup> / <sub>4</sub> "	48" x 20 <sup>5</sup> / <sub>8</sub> " x 20 <sup>3</sup> / <sub>4</sub> "
Weight (Lbs)	165	170	146	151
Pre Filter Dimensions (Inches)	18" x 18" x 4"	18" x 18" x 4"	18" x 18" x 2"	18" x 18" x 2"
Post Filter Dimensions (Inches)	18" x 18" x 12"	18" x 18" x 12"	18" x 18" x 4"	18" x 18" x 4"
Pre Filter Efficiency (MERV)	13	13	8	8
Post Filter Efficiency	True HEPA 99.97%	True HEPA 99.97%	MERV 13	MERV 13
Motor Type (EC)	Variable Speed	Variable Speed	Variable Speed	Variable Speed
Motor Power (HP)	0.33	1	0.33	1
Max Current Draw - FLA (Amps)	5.5	14.75	5.5	14.75
Blower Type	Forward Curved	Forward Curved	Forward Curved	Forward Curved
Accessories	None	None	None	None

**Notes:**

\* Air flow measured at 0.10 ESP (External Static Pressure) using clean pre and post filters. Max rated velocity for HEPA filter is 475 FPM. Max rated velocity for cardboard pleated filters is 550 FPM. Operating above these rated velocities may sacrifice filtration efficiency.

**Shipping and Receiving**

Deliveries are to be immediately checked in the presence of the carrier as being intact and complete. Equipment must be properly transported. Improper transport can lead to:

- Internal components disconnection
- Metallic structure deformation
- Broken casters

**Unpacking**

**IMPORTANT**

If the equipment is to be stored prior to installation, carefully remove the equipment from the shipping carton and complete an internal inspection of the unit to ensure no damage has occurred during transportation.

2. Remove equipment from pallet and place on ground in upright position.
3. Equipment comes with pre-installed locking casters. Ensure when the equipment is removed from the package it is placed upon smooth, level, and stable ground.
4. Inspect for concealed damage and any hardware that may have become loose in transport.
5. Inspect for further damage that may adversely affect the equipment.

**Items Shipped Per Carton:**

1. Daikin Air Purifier with pre-installed filtration technology
  2. Installation, Operation, and Maintenance Manual
- See "Table 7: Parts" on page 12 for a list of spare parts sold separately.

**Installation Instructions**

**CAUTION**

All Electrical connections must be made by qualified trained personnel only in accordance with all local, state, national electrical codes and federal regulations.

**IMPORTANT**

The equipment is "Plug and Play" and requires a standard 8 foot (3m) power cord for normal operation which is included with the unit. The power cord has a Type B male plug for connection to the wall outlet.

**Tools Required**

- 5/16" Hex Nut Driver
  - Phillips Head Screwdriver
1. Read and observe all safety instructions included in this document for safe installation & operation.
  2. Determine where the Daikin Air Purifier is to be installed.
  3. Remove the equipment from the packaging as described in "Unpacking" of this document.
  4. Ensure when the equipment is removed from the package it is placed upon smooth, level, and stable ground.
  5. Place the equipment upright on the pre installed caster wheels.
    - a. Daikin Air Purifiers come with pre-installed caster wheels and filters. There is no required assembly by the installer.
  6. Remove the 10 screws on the rear access using the 5/16" Hex Nut Driver.
    - a. Using the provided handle on the rear access panel lift the panel and remove from the equipment chassis.
    - b. Inspect that the filters are fully seated within each designated filter rack.
    - c. Inspect fan to ensure fan spins freely
  7. Reassemble rear access panel.
  8. Remove the fuse holder located on the control panel.
    - a. Inspect for damage.
  9. Unlock the caster wheels.
  10. Carefully move the unit to the desired location of service.

**WARNING**

Unit must be on a flat, smooth, solid surface. When moving the unit place your hands around the center of the unit. Provide a path free of any obstacles. Make sure the wheels are unlocked.

**TIP OVER HAZARD** – failure to follow the warning above could result in personal injury and/or property damage.



11. Once in the desired location of service lock the caster wheels.
12. Ensure the power dial located on the right side panel is in the "Off" position.
13. Plug the power cord into a suitable 115V/120V grounded electrical receptacle on an electrically protected circuit.
14. See "[Quick Start Guide and Operation](#)" for instructions on unit start up and operation.

**Quick Start Guide and Operation**

1. Read and observe all safety and installation instructions provided in the Introduction and Installation Instructions section of this document.

**⚠ CAUTION**

Ensure rear access panel and filters are installed prior to operation. If rear access panel and/or filters are not installed during operation the EC motor may over drive causing the equipment fuse to blow/open.

2. After completion of installation, turn the power dial located on the right side of the unit to one of the desired speed selections (High, Medium, Low). The preset CFM rating at each setting is shown below:

**Table 2: Preset CFM Ratings**

Model Type	CFM		
	Low	Medium	High
DAP.0500.P.O.R	300	450	550
DAP.1000.P.O.R	450	750	1000
DAP.0500.E.O.R	350	450	550
DAP.1000.E.O.R	500	750	1000

To adjust the Low, Medium, and High CFM settings see "[Motor Speed Adjustment](#)" for details on how to make CFM adjustments.

4. When powered a green LED indicator located on the right side of the device will illuminate indicating that the unit is on and running.
  - a. If the unit motor does not run immediately upon power-up, allow 10 seconds for it to ramp up to full operating RPM.
5. Once the motor is operating at full operating RPM adjust the speed dial based on desired CFM output.

**Air Flow Calculation**

To calculate the recommended CFM flow rate to achieve 2ACH for a given space, or to calculate a desired ACH at a given CFM flow rate follow the formulas below:

- $CFM = (Ceiling\ Height) \times (Room\ Square\ Footage) \times (ACH) \times (1hr/60min)$

As an example, if the unit is installed in a 35' x 40' room with 10' ceilings and the user would like to achieve an additional 2 ACH, the recommended CFM for the unit would be:

- $CFM = (10') \times (35' \times 40') \times (2ACH) \times (1hr/60min) = 466\ CFM$
- $ACH = [(CFM) \times (60min)] / [(Ceiling\ Height) \times (Room\ Square\ Footage)]$

The preset air flow settings on the equipment have been set to the following CFM rates. Corresponding recommended maximum room sizes to achieve 2 ACH at each air flow setting have been provided.

**Table 3: Maximum Recommended Room Size to Achieve 2 Additional ACH**

Unit Nominal Capacity	Air Flow Setting	CFM	Max Recommended Room Size
500 CFM	Low	300	1,125 Square Feet
	Medium	450	1,688 Square Feet
	High	550	2,063 Square Feet
1000 CFM	Low	450	1,688 Square Feet
	Medium	750	2,813 Square Feet
	High	1000	3,750 Square Feet


**Notes:**

1. To change the preset air flow settings, see the EC Motor Speed Adjustment section of this document.
2. Table data reflects CFM settings for Premium models only.
3. Room size assumes 8 foot ceiling.

**Motor Speed Adjustment**

The fan will run at the factory set flow rates when the unit is installed. If a different CFM rate is required, turn the flow dial corresponding to the preset High/Medium/Low CFM setting until the desired CFM is achieved or the measured DC reference voltage between the com port and corresponding flo port equals the correct value from the tables under the heading, "[CFM to Voltage](#)" on page 7 and page 8. High CFM setting corresponds to Flo3 Dial, Medium CFM setting corresponds to Flo2 Dial, Low CFM setting corresponds to Flo1 Dial. When making voltage adjustments do not exceed motor Full Load Amps specified in Table 1 on page 4.

**Figure 1: EVO Board Key Components and Locations**

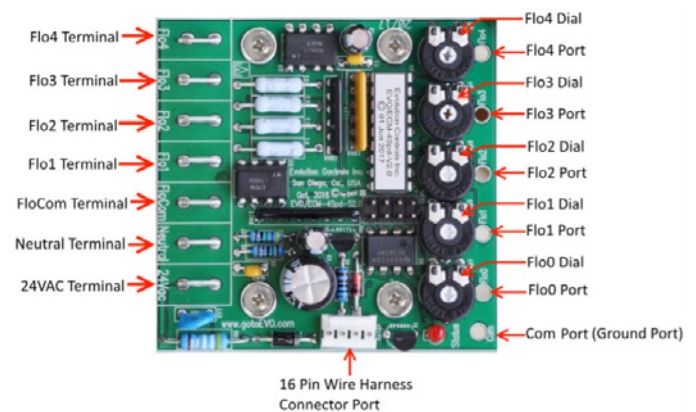

### CFM Adjust Example:

If Low CFM setting is selected and the Flo1 dial is turned until the Flo1 reference voltage between common and Flo1 port = 2.5, then the motor will run at the CFM that corresponds to 2.5V.

**Notes:**

1. In the Wiring Diagram "Call 1-3" represents "Flo 1-3 ports".
2. The Flo0 dial should always be set at 0V to prevent the fan from running when all speed outputs are OFF.

**Table 4: Airflow / Voltage Presets**

Unit Model	CFM			Airflow/Control Voltage						Filter Configuration
	Low	Medium	High	Low Motor	Low EVO	Medium Motor	Medium EVO	High Motor	High EVO	
DAP.0500.P.0.R	300	450	550	1.20	0.60	2.40	1.20	3.00	1.5	MEGAcel HEPA
DAP.1000.P.0.R	450	750	1000	2.10	1.05	3.80	1.90	6.50	3.25	MEGAcel HEPA
DAP.0500.P.0.R	300	450	550	1.50	0.75	2.80	1.40	3.40	1.7	ASTROcel HEPA
DAP.1000.P.0.R	500	750	1000	2.60	1.30	4.50	2.25	7.20	3.6	ASTROcel HEPA
DAP.0500.E.0.R	350	450	550	1.20	0.60	1.60	0.80	2.30	1.15	MERV 13 Post Filter
DAP.1000.E.0.R	500	750	1000	1.30	0.65	3.40	1.70	5.50	2.75	MERV 13 Post Filter

### CFM to Voltage

#### DAP.0500.P.0.R ASTROcel Airflow/Voltage

Airflow CFM	Motor Voltage	EVO Voltage	RPM	Internal SP	ESP	Total SP
300	1.5	0.75	590	0.13	0.1	0.23
400	2.3	1.15	720	0.23	0.1	0.33
500	3.1	1.55	850	0.36	0.1	0.46
600	3.9	1.95	980	0.52	0.1	0.62
700	4.7	2.35	1110	0.71	0.1	0.81
800	5.5	2.75	1240	0.93	0.1	1.03

#### DAP.1000.P.0.R ASTROcel Airflow/Voltage

Airflow CFM	Motor Voltage	EVO Voltage	RPM	Internal SP	ESP	Total SP
500	2.6	1.3	840	0.36	0.1	0.46
600	3.5	1.75	980	0.52	0.1	0.62
700	4.4	2.2	1130	0.71	0.1	0.81
800	5.4	2.7	1270	0.93	0.1	1.03
900	6.3	3.15	1420	1.17	0.1	1.27
1000	7.2	3.6	1560	1.45	0.1	1.55
1100	8.1	4.05	1700	1.75	0.1	1.85
1200	9.1	4.55	1850	2.09	0.1	2.19



## CFM to Voltage (Continued)

### DAP.0500.P.0.R MEGAcel Airflow/Voltage

Airflow CFM	Motor Voltage	EVO Voltage	RPM	Internal SP	ESP	Total SP
300	1.2	0.6	550	0.09	0.1	0.19
400	2	1	670	0.17	0.1	0.27
500	2.7	1.35	790	0.26	0.1	0.36
600	3.5	1.75	910	0.38	0.1	0.48
700	4.2	2.1	1030	0.51	0.1	0.61
800	5	2.5	1150	0.67	0.1	0.77

### DAP.1000.P.0.R MEGAcel Airflow/Voltage

Airflow CFM	Motor Voltage	EVO Voltage	RPM	Internal SP	ESP	Total SP
500	2.1	1.05	775	0.26	0.1	0.36
600	2.98	1.49	910	0.37	0.1	0.47
700	3.86	1.93	1045	0.50	0.1	0.60
800	4.74	2.37	1180	0.66	0.1	0.76
900	5.62	2.81	1315	0.83	0.1	0.93
1000	6.5	3.25	1450	1.03	0.1	1.13
1100	7.38	3.69	1585	1.25	0.1	1.35
1200	8.26	4.13	1720	1.48	0.1	1.58

### DAP.0500.E.0.R Airflow/Voltage

Airflow CFM	Motor Voltage	Evo Voltage	RPM	Internal SP	ESP	Total SP
350	1.2	0.6	500	0.05	0.1	0.15
400	1.3	0.65	600	0.06	0.1	0.16
500	2	1	662	0.10	0.1	0.20
600	2.7	1.35	788	0.14	0.1	0.24
700	3.4	1.7	914	0.20	0.1	0.30
800	4.2	2.1	1040	0.26	0.1	0.36

### DAP.1000.E.0.R Airflow/Voltage

Airflow CFM	Motor Voltage	Evo Voltage	RPM	Internal SP	ESP	Total SP
500	1.3	0.65	650	0.10	0.1	0.20
600	2.1	1.05	780	0.14	0.1	0.24
700	3	1.5	910	0.20	0.1	0.30
800	3.8	1.9	1040	0.26	0.1	0.36
900	4.7	2.35	1170	0.32	0.1	0.42
1000	5.5	2.75	1300	0.4	0.1	0.5
1100	6.3	3.15	1430	0.48	0.1	0.58
1200	7.2	3.6	1560	0.58	0.1	0.68



**Operating Environmental Conditions**

**Temperature:** Temperature limits: 20-120°F

**Humidity:** Do not store or operate in corrosive or condensing environments.

**Storage Environment**

Store units indoors in a clean, dry environment on a level surface. Moisture, debris, and minerals can cause permanent damage to the cabinet and components. Do not allow coverings to trap moisture on the galvanized surfaces."


**On/Off and Air Flow Selection**

The equipment can be adjusted to preset or customizable Low, Medium, and High air flow settings. Setting selection can be accomplished by turning the 3-speed selection dial located on the right side of the unit (Off, Low, Medium, High). The green LED indicator light will illuminate when the power cord is plugged in and the 3-speed selection dial is turned to one of the selection speeds.

To customize the preset Low, Medium, High speed settings, see "Motor Speed Adjustment" on page 6.


**Internal Fuse**

The equipment is protected by an inline cartridge fuse. This fuse is located to the left of the 3-speed selection dial. To access this fuse twist the fuse holder from the cabinet mounted fuse housing. Check for blown fuses in the event the green LED does not illuminate when the unit is powered on.

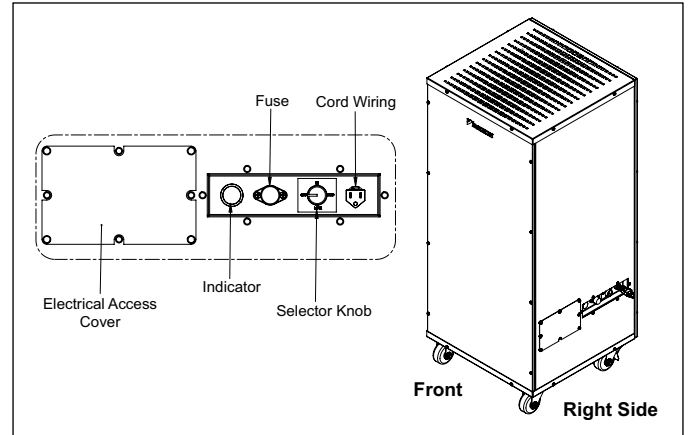

**Wiring Diagram**

**EC Motor, 120V/60Hz/1PH**

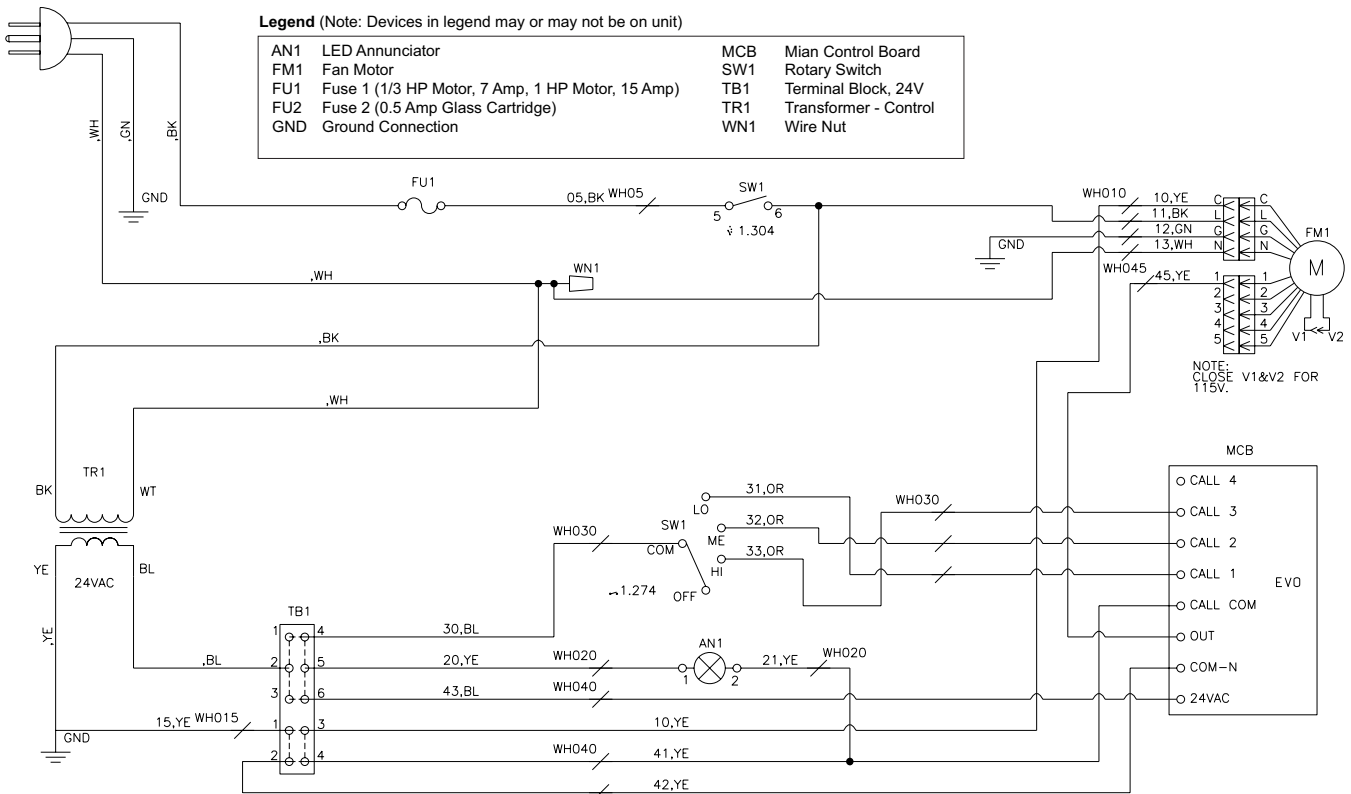

**Maintenance and Service**

**Filter Replacement**

**IMPORTANT**

Filters can be contaminated with various particles, including viable and potentially infectious contaminants. If a filter is suspected to be contaminated, it is recommended that before handling the filter, designated PPE devices must be available, suitable and used during filter replacement. Refer to local, state and federal regulations for PPE guidance.

To replace the pre- and post filters, please proceed according to the following steps:

1. Turn the dial switch located on the lower back of the unit to the off position.
2. Disconnect the power cord from the wall receptacle, wait for 15 seconds for electric discharge of internal components.
3. Remove the rear access panel by removing the 10- 5/16" hex screws.
4. Remove the pre-filter by sliding it out of the lower filter cabinet.
5. For premium models remove the HEPA filter by unscrewing the gasket seal screws and removing the HEPA filter. For Economy models remove the post filter from the filter rack.
6. After removing the filters, dispose into a plastic bag and seal properly.

**IMPORTANT**

Filters may be contaminated with various particulate, including viable and potentially infectious contaminants. Handle with extreme caution and their disposal must be in accordance with local, state and federal regulations.


7. Carefully remove new/replacement filters from the shipping carton.
8. Install the pre-filter by sliding it into the lower pre-filter track. Be sure the airflow direction arrow is pointed UPWARDS.
9. Install the post-filter by sliding it into the upper filter track. Be sure that the sealing gasket is located on the air outlet side of the equipment (this is the side closest to the equipment outlet grille). Check to ensure the airflow arrow position is pointed UPWARDS.

10. For premium models screw in the gasket seal screws to seal the HEPA filter. For Economy models insert the post filter in the filter rack.
11. Reinstall rear access panel and tighten 10- 5/16" hex screws.

**IMPORTANT**

For a proper, leak-free installation, adjust the maniples to seat the Post-Filter uniformly, compressing the gasket appropriately.


**Figure 2: Filter Locations**

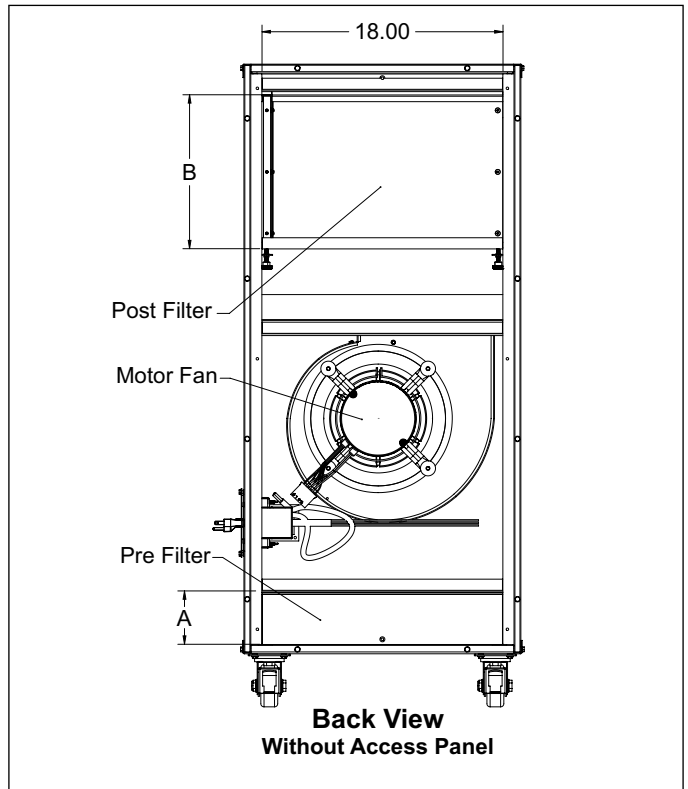


Back View without Access Panel			
Unit Model	Dimension A	Dimension B	Ionizer
DAP.0500.P.O.R	4"	12"	No
DAP.1000.P.O.R	4"	12"	No
DAP.0500.E.O.R	2"	4"	No
DAP.1000.E.O.R	2"	4"	No

**Removing The Fan Motor**


- IMPORTANT:** Remove power from equipment by unplugging power cord from receptacle. Be sure to unplug motor wiring molex plug. Remove screws along the back panel. Remove panel.

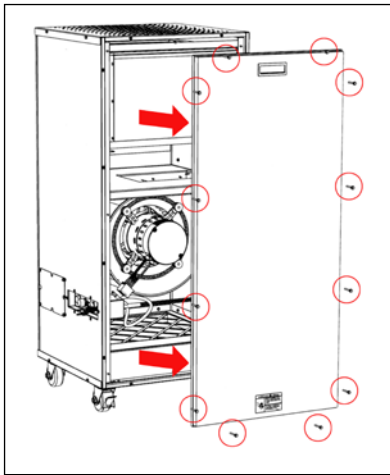

- Remove upper gasket seal screws to allow clear access, (2 thumb screws on each side).

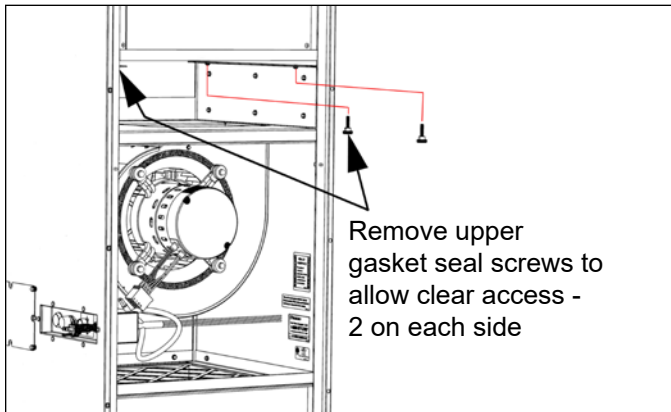


- Remove 12 screws on the interior right and left sides from the fan plenum frame.

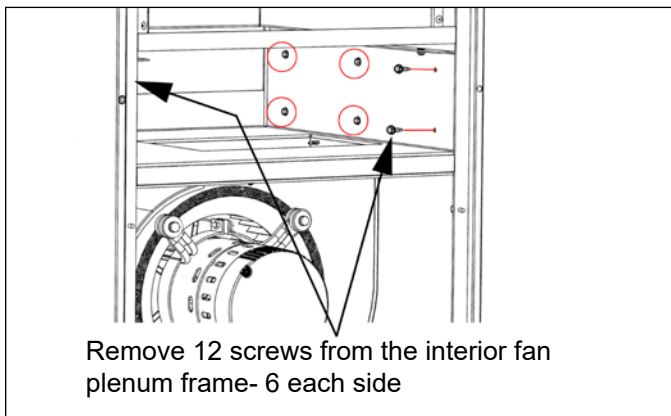


**CAUTION**

Support the underside of the motor and fan assembly while removing screws so it does not drop and damage components beneath it.


- Slide out fan motor assembly with plenum frame.

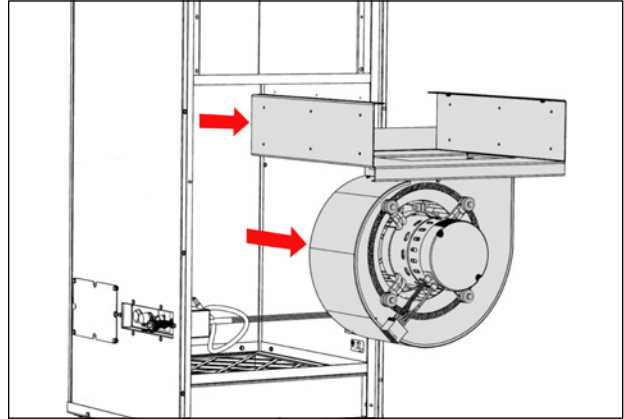

- Loosen motor shaft set screw.

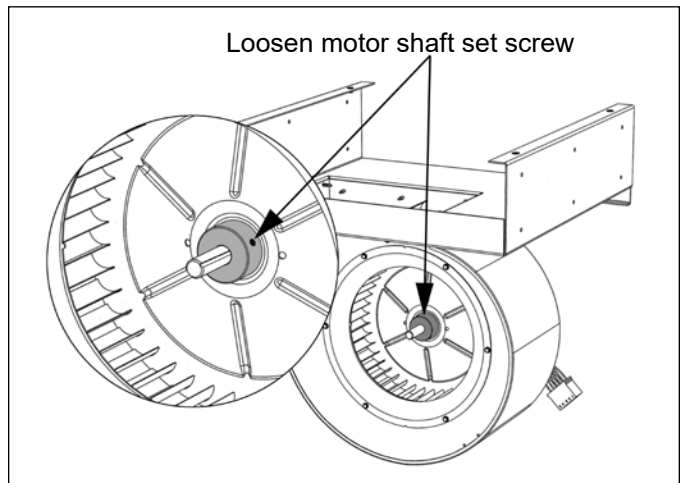

- Remove motor mount bolts and slide out motor from fan housing. Loosen motor belly-band threaded nut.

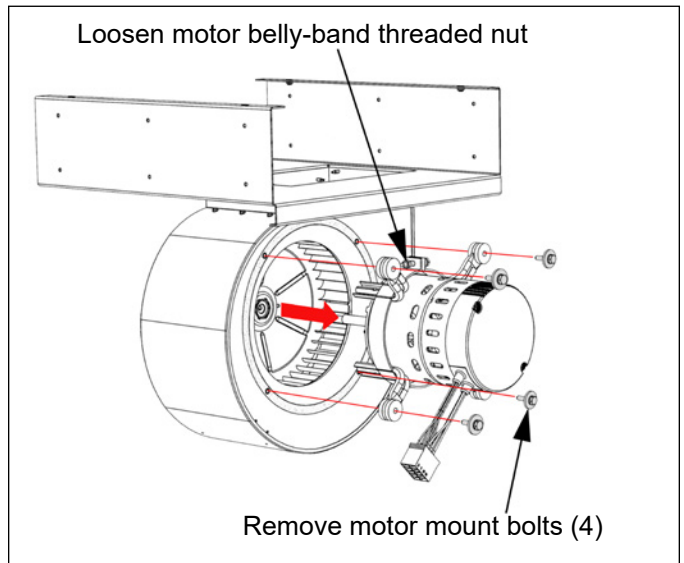

- Repeat these steps in reverse order to reinstall motor.

## Troubleshooting Guide

<b>Blow Fuse*</b>	Blown fuse
<b>No Equipment Power</b>	Loose power cord
	3-speed selection dial is in off position
	Inspect wall receptacle
<b>Low Air Velocity</b>	Filter change required on Pre or Post Filter
	Increase speed setting on 3-speed selection dial

**Note:** \* If motor speed was adjusted with dirty filters and clean filters are installed, motor may overload causing the fuse to blow. Motor speed adjustment is needed when clean filters are installed.

## Replacement Parts

**Table 5: HEPA Filters & Post-Filters**

Description	Size	Part Number
MegaCel HEPA Filter	18" x 18" x 2"	264190068
MERV 13 Post Filter	18" x 18" x 4"	910217164

**Table 6: Pre-Filters**

Description	Size	Part Number
MERV 13 Pre Filter	18" x 18" x 4"	910217164
MERV 8 Pre Filter	18" x 18" x 2"	910217142

**Table 7: Parts**

Description	Size	Part Number
Fan Assembly	9.5" Dia. x 4.62" Width	910210867
EC Motor	1/3 HP	910218048
	1HP	910234580
3-Speed Switch	Switch, Rotary, 2-Pole, 4-Position	057543001
	Hardware, Knob, Control	802018013
Fuse Holder	Terminal, Fuse Holder	4EHB1933
Fuse (Sizes 0500)	Fuse, 7.0 AMP, FNQ	4EHG7750
Fuse (Sizes 1000)	Fuse, 15 AMP, FNQ	4EHG8686
Transformer	Transformer, 120 - 24V, 50VA	910116204
ECM Control Board	Circuit Board, EVO/10Y-4SPD	910280227
Upper Gasket Seal Screws	Qty 4 Ea	910357609



### Daikin Applied Training and Development

Now that you have made an investment in modern, efficient Daikin equipment, its care should be a high priority. For training information on all Daikin HVAC products, please visit us at [www.DaikinApplied.com](http://www.DaikinApplied.com) and click on Training, or call 540-248-9646 and ask for the Training Department.

### Warranty

All Daikin equipment is sold pursuant to its standard terms and conditions of sale, including Limited Product Warranty. Consult your local Daikin Applied representative for warranty details. Refer to Form 933-430285Y. To find your local Daikin Applied representative, go to [www.DaikinApplied.com](http://www.DaikinApplied.com).

### Aftermarket Services

To find your local parts office, visit [www.DaikinApplied.com](http://www.DaikinApplied.com) or call 800-37PARTS (800-377-2787). To find your local service office, visit [www.DaikinApplied.com](http://www.DaikinApplied.com) or call 800-432-1342.

This document contains the most current product information as of this printing. For the most up-to-date product information, please go to [www.DaikinApplied.com](http://www.DaikinApplied.com).

Products manufactured in an ISO Certified Facility.