

Application 2319

TEC Custom Solutions Unit Vent with Humidity Control and Electric Reheat

This document contains the following topics:

- Overview
- Hardware Inputs
- Hardware Outputs
- Ordering Notes
- Sequence of Operation
 - Control Temperature Set Points
 - Day and Night Modes
 - Night Mode Override Switch
 - Day Heating Operation
 - Day Cooling Operation
 - Night Heating Operation
 - Night Cooling Operation
 - Humidity Control
 - Heating/Cooling Switchover
 - Control Loops
 - 2-position Humidifier Control
 - Electric Heat
 - Fan Operation
 - Fail-safe Operation
- Application Notes
- Wiring Diagrams
- Point Database

Overview

In Application 2319, the Unit Vent with Humidity Control controls a unit ventilator equipped with a chilled water coil for cooling and dehumidification, and 3-stages of electric reheat. Heating only and cooling only units can also be controlled with this application by overriding HEAT.COOL (Point 5). A humidifier is also controlled to maintain relative humidity.

Other features available in this application include night mode override, free-cooling, and dehumidification mode.

This application controls room temperature by directly modulating the coil control devices and outdoor air damper. The free-cooling/economizer function is turned on and off by the field panel using FREE CLG (Point 23). If free cooling is not available, then the outdoor air damper will be kept at minimum position; otherwise, the outdoor air damper will modulate in sequence with the coils to maintain room temperature. The outdoor air damper may also be two-position. The unit ventilator fan is also controlled in this application.

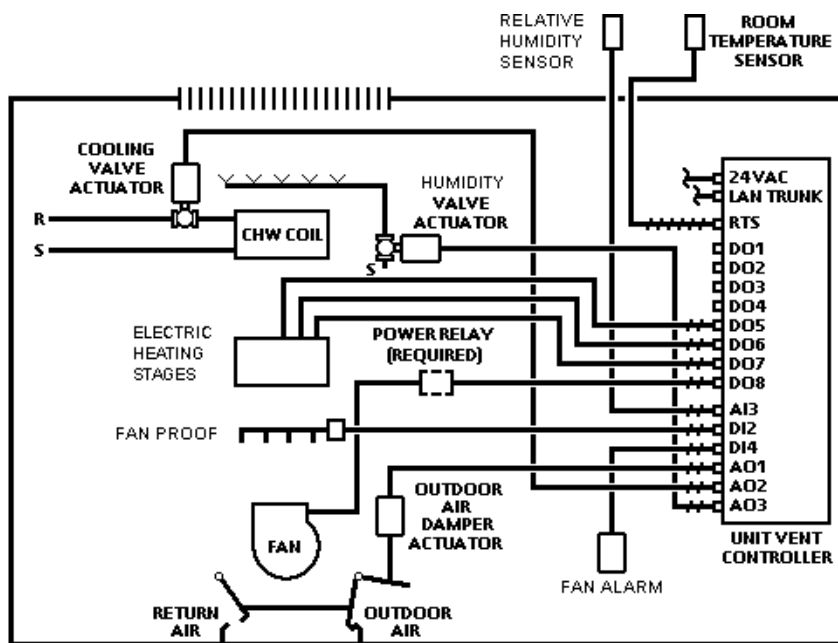


Figure 2319-1. Application 2319 Control Drawing with Modulating Damper and Humidifier.

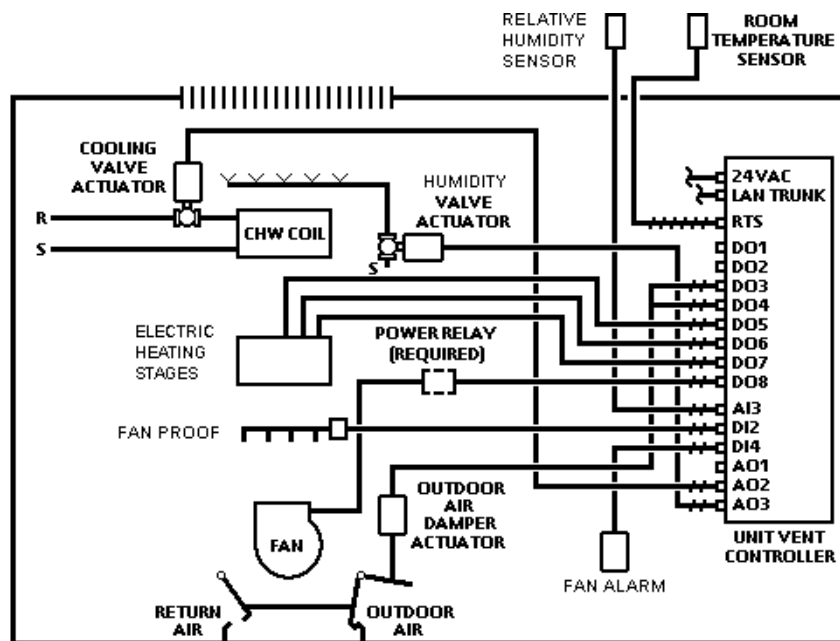


Figure 2319-2. Application 2319 Control Drawing with 2-Position Damper and Modulating Humidifier.

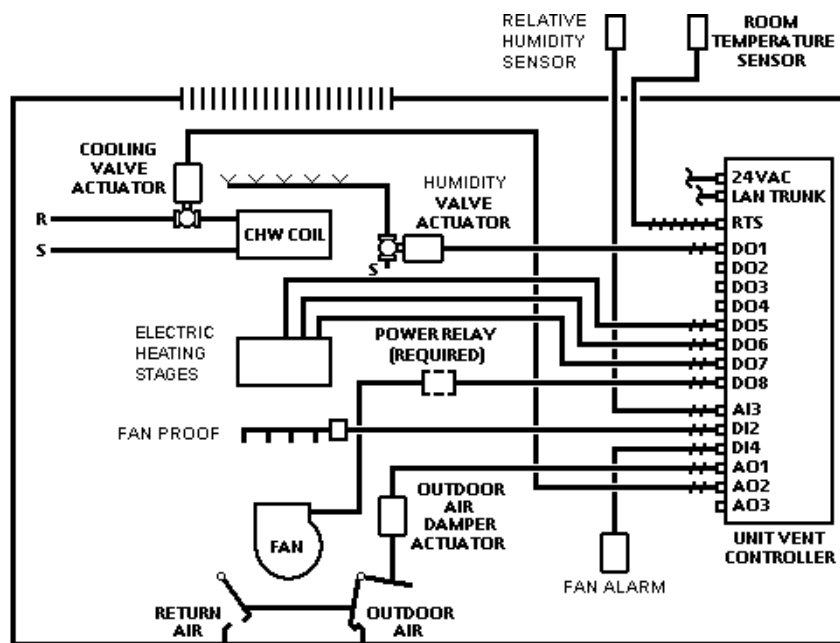


Figure 2319-3. Application 2319 Control Drawing with Modulating Damper and 2-Position Humidifier.


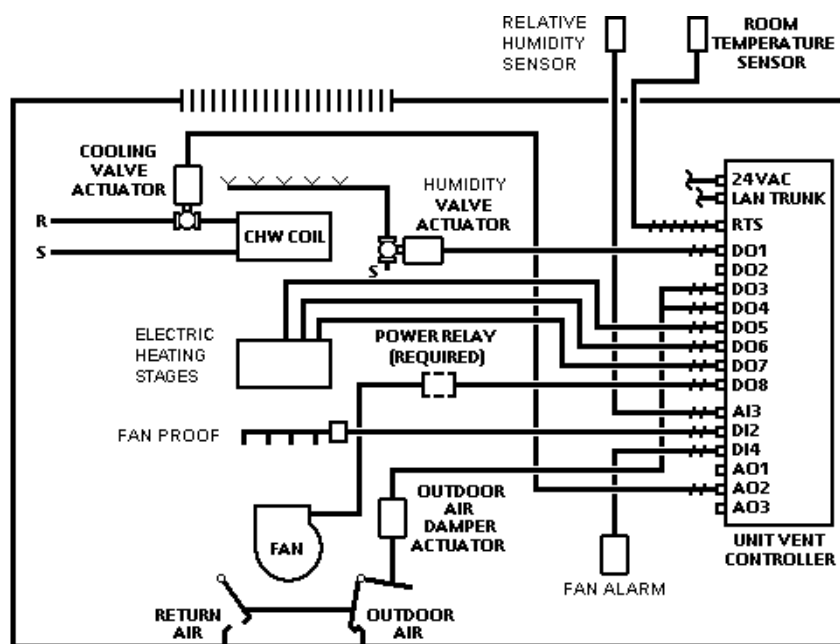


Figure 2319-4. Application 2319 Control Drawing with 2-Position Damper and Humidifier.

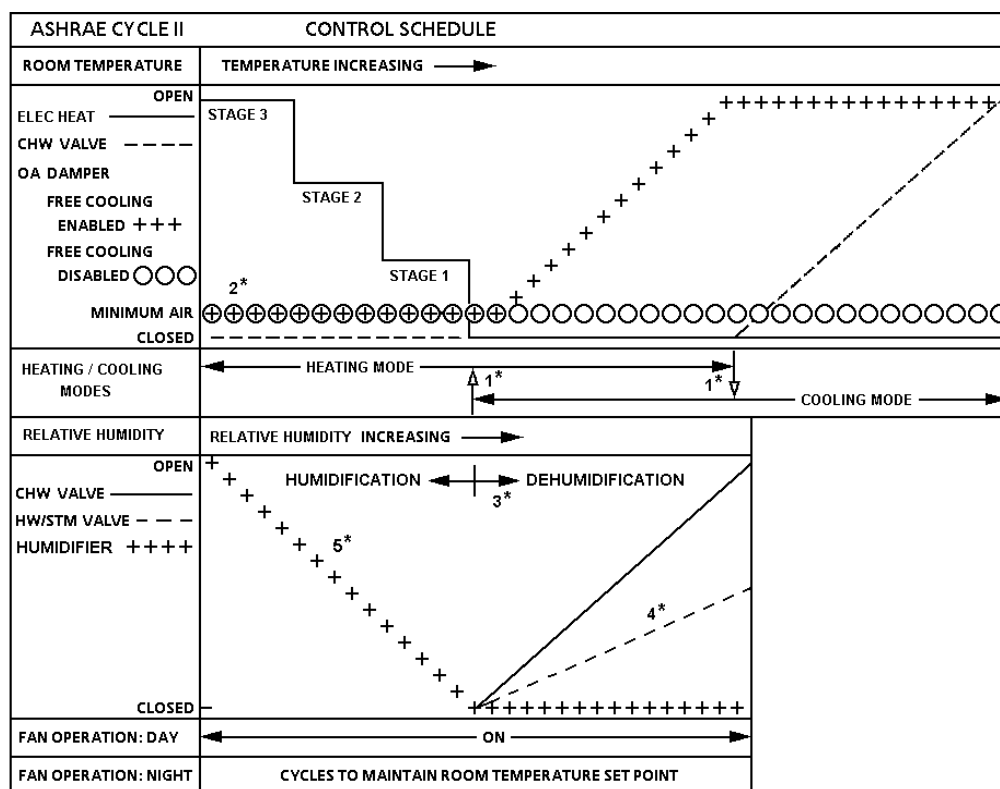

1. Refer to "Heating/Cooling Switchover" for more information.
2. Modulating damper is shown. If damper is two-position, then it will be open during day mode and closed during night mode.
3. Refer to "Humidity Control" for explanation of dehumidification sequence.
4. Heating valve position is shown with DEHUM COEFF (Point 87) = 0.5. Refer to "Humidity Control" for more information.
5. Modulating humidifier is shown. If humidifier is on/off, then it will be controlled using a pulse-width modulation scheme. Refer to "2-Position Humidifier Control".

Figure 2319-5. Application 2319 Control Schedule.

Hardware Inputs

Analog

- Relative humidity sensor
- Room temperature sensor
- Room temperature set point dial (optional)

Digital

- Fan alarm
- Fan proof
- Night mode override (optional)

Hardware Outputs

The following devices can be used by this application depending on your hardware configuration:

Analog (0-10V)

- Cooling valve actuator
- Outdoor air damper actuator (optional)
- Humidity valve actuator (optional)

Digital

- Humidifier (2-position, optional)
- Outdoor air damper (2 DOs, optional)
- Unit fan
- 3-stages of electric reheat

Ordering Notes

Custom Solution number 209

Point Database

Table 2319-1 presents the point database information for Application 2319.

Sequence of Operation

The following paragraphs present the sequence of operation for Application 2319, “Unit Vent with Relative Humidity Control and Electric Reheat”.

Control Temperature Set Points

Depending on the controller’s current operational mode (day or night), the control temperature set point, CTL STPT (Point 92) holds the value of one of the following set points:

Day Mode – In day mode, CTL STPT holds the value of DAY CLG STPT (Point 6) or DAY HTG STPT (Point 7). If the room temperature sensor has a set point dial and STPT DIAL (Point 14) is set to YES, then CTL STPT holds the value of RM STPT DIAL (Point 13).

If the set point dial is used and the value of RM STPT DIAL is less than the value of RM STPT MIN (Point 11), then CTL STPT holds the value of RM STPT MIN. If the value of RM STPT DIAL is greater than the value of RM STPT MAX (Point 12), then CTL STPT holds the value of RM STPT MAX.

Night Mode – In night mode, CTL STPT holds the value of NGT CLG STPT (Point 8) or NGT HTG STPT (Point 9).

NOTE: The value of CTL TEMP (Point 78) is the same as the value of ROOM TEMP (Point 4), unless CTL TEMP is overridden.

Day and Night Modes

The day/night status of the space is determined by the status of DAY.NGT (Point 29). The control of this point differs depending on whether the controller is monitoring the status of a wall switch or if the controller is connected to a field panel.

If the controller is operating stand-alone, then the controller stays in day mode all the time. If the controller is operating with centralized control (that is, it is connected to a field panel), then the field panel can send an operator or PPCL command to override the status of DAY.NGT. Refer to *Powers Process Control Language (PPCL) User’s Manual* (125-1896) and *Field Panel User’s Manual* (125-1895) for more information.

Night Mode Override Switch

If an override switch is present on the room temperature sensor and a value (in hours) other than zero has been entered into OVRD TIME (Point 20), then by pressing the override switch a room occupant can reset the controller to day operational mode of the time period that is set in OVRD TIME. The status of NGT OVRD (Point 21) changes to DAY. After the override time elapses, the controller returns to night mode and the status of NGT OVRD changes back to NIGHT.

It is only when the controller is in night mode that the override switch on the room sensor has any effect on the controller.

Day Heating Operation

In day heating operation, if the controller is not in dehumidification mode, it maintains the room temperature at the value stored in CTL STPT (Point 92) by modulating the electric reheat based on the difference between the control temperature point, CTL TEMP (Point 78), and CTL STPT. If CTL TEMP goes below CTL STPT, then the electric reheat turns ON. If CTL TEMP goes above CTL STPT, then the electric reheat turns OFF.

If the controller is in dehumidification mode, it maintains the room temperature at the value stored in CTL STPT by doing the same as above, but the electric reheat is staged on by an additional amount to counter the cooling effect of the cooling coil being open for dehumidification. If the cooling coil is open 20%, then the heating output is increased by 20% times DEHUM COEFF (Point 87) beyond the amount required for room temperature control.

If controlled by DOs, the damper is closed at night and open during the day. If controlled by AO-1, and FREE CLG (Point 23) is disabled, then the damper is kept at the outdoor air damper minimum position during the day. If FREE CLG is enabled, then the damper is sequenced from 100% to the outdoor air damper minimum position before the heating valve opens.

Day Cooling Operation

In day cooling operation, if the controller is not in dehumidification mode, it maintains the room temperature at the value stored in CTL STPT (Point 92) by modulating the available coil control device based on the difference between the control temperature point, CTL TEMP (Point 78), and CTL STPT. If CTL TEMP goes above CTL STPT, then the cooling valve actuator opens. If CTL TEMP goes below CTL STPT, then the cooling valve closes.

If the controller is in dehumidification mode, then the cooling coil position is set to satisfy either the cooling demand or the dehumidification demand, whichever is greater. If the dehumidification demand is greater than the cooling demand, then the electric reheat is staged on to counter the additional cooling of the cooling coil. Refer to *Humidity Control*. If the cooling coil is open to 50% for dehumidification control, and the temperature demand is for 20% cooling, then the heating output is set to 15% $[(50\% - 20\%) \text{ times DEHUM COEFF (Point 87) (default = 0.5) = 15\%}]$. In other words, the cooling valve is opened 30% beyond the cooling requirement, so the heating output is increased by 15% to counter the excess cooling.

If controlled by DOs, the damper is closed at night and open during the day. If controlled by AO-1, and FREE CLG (Point 23) is disabled, then the damper is kept at the outdoor air damper minimum position during the day. If FREE CLG is enabled, then the damper is sequenced from the outdoor air damper minimum position to 100% before the cooling valve opens for cooling. The damper will sequence open only to satisfy cooling demand, not dehumidification demand.

Night Heating Operation

The controller maintains the room temperature at the value stored in CTL STPT (Point 92) by doing the following:

- If CTL TEMP (Point 78) drops below the value of NGT HTG STPT (Point 9) minus the value of NGT DBAND (Point 88), then:
 - the fan turns ON

- heating stages turn ON
- If CTL TEMP rises above NGT HTG STPT, then:
 - the fan turns OFF
 - heating stages turn OFF

When the fan turns ON, the heating stages are turned on. When the fan turns OFF, the heating stages are OFF.

In night heating operation, the controller operates as follows:

- The controller may switch to cooling mode when appropriate if NGT CLG MODE (Point 54) is set to YES.
- Heating only is provided when NGT CLG MODE is set to NO.

Night Cooling Operation

In night cooling operation, the controller maintains the room temperature at the value stored in CTL STPT (Point 92) by doing the following:

- For units with hot water coils, NGT HW HTG (Point 53) must be set to YES, so that the valve is positioned to full open. (This helps to protect the coil from freezing.)
- For units with steam coils, NGT HW HTG must be set to NO, so that the heating coils can be kept OFF.

In night cooling operation, the controller operates as follows:

- If CTL TEMP (Point 78) rises above the sum of NGT CLG STPT (Point 8) and NGT DBAND (Point 88), then:
 - the fan turns ON
 - cooling turns ON
- If CTL TEMP drops below NGT CLG STPT, then:
 - the fan turns OFF
 - cooling turns OFF
- When NGT CLG MODE (Point 54) is set to NO, the unit will operate in heating mode only at night.

Humidity Control

Relative humidity is controlled in two ways, controlling a humidifier, and controlling heating and cooling coils simultaneously for dehumidification. Which humidity control sequence is used is determined by HUM.DEHUM (Point 27).

If HUM.DEHUM = HUM, then the humidity is controlled by modulating the humidifier. Refer to *Control Loops*. If HUM.DEHUM is not overridden, then the controller will set it to HUM if RH LOOPOUT (Point 77) is positive and to DEHUM if RH LOOPOUT is negative. The switchover between HUM and DEHUM modes is not immediate. RH LOOPOUT must be less than 0% for the length of time held in SWITCH TIME (Point 86) before HUM.DEHUM changes to DEHUM. RH LOOPOUT must be greater than 0% for SWITCH TIME before DEHUM changes to HUM.

If HUM.DEHUM = DEHUM, then the humidity is controlled by modulating the cooling coil and the reheat stages simultaneously for dehumidification. In cooling mode, the cooling coil is positioned to either the cooling demand or the dehumidification demand (negative RH loopout), whichever is greater. In heating mode, the cooling coil is positioned according to the demand for humidification. The heating output (which is used to control the reheat stages - refer to the *Electric Heat* section) is positioned to both counter the cooling effect of the cooling coil (in order to keep the discharge temperature constant) and to control room temperature. Refer to Figure 2319-5 for more sequencing information. The DEHUM COEFF (Point 87) represents the ratio of the effectiveness of the cooling coil to that of the heating stages. If opening the cooling coil to 67% and turning on one of the three reheat stages causes the discharge temperature to stay constant, then DEHUM COEFF should be set to 0.5. The heating output dehumidification position is the cooling valve position times DEHUM COEFF. In heating mode, the heating output will actually be set to the heating output demand for temperature control plus the dehumidification position. In cooling mode, the heating output will be positioned open only if the dehumidification demand exceeds the cooling demand and then only to the difference between these two demands times DEHUM COEFF.

There is no relative humidity control in night mode.

Heating/Cooling Switchover

The heating/cooling switchover is determined as follows:

If the following conditions are met for the length of time set in SWITCH TIME (Point 86), then the controller switches from heating to cooling mode by setting HEAT.COOL to COOL:

- The HTG LOOPOUT (Point 80) is below 50%, if FREE CLG (Point 23) = DISABL, or below SWITCH LIMIT (Point 85) if FREE CLG = ENABL.
- The CTL TEMP (Point 78) is greater than the sum of CTL STPT (Point 92) plus SWITCH DBAND (Point 90).
- CTL TEMP is greater than the appropriate cooling set point minus SWITCH DBAND.

If the following conditions are met for the length of time set in SWITCH TIME, then the controller switches from cooling to heating mode by setting HEAT.COOL to HEAT:

- The CLG LOOPOUT (Point 79) is below 50%, if FREE CLG = DISABL, or below SWITCH LIMIT if FREE CLG = ENABL.
- CTL TEMP is less than CTL STPT minus SWITCH DBAND.
- CTL TEMP is less than the appropriate heating set point plus SWITCH DBAND.

If night cooling is not available, as indicated by NGT CLG MODE (Point 54), then the controller remains in heating mode during the night.

Control Loops

The unit ventilator is controlled by three Proportional, Integral, and Derivative (PID) control loops; a heating loop, a cooling loop, and a relative humidity loop.

Heating Loop – The heating loop uses the value of CTL STPT (Point 92) and CTL TEMP (Point 78) to modulate the value of HTG LOOPOUT (Point 80). The HTG OUTPUT (Point 60) and OA DMPR POS (Point 62), used to determine the reheat and outdoor air damper positions, are calculated from HTG LOOPOUT.


Cooling Loop – The cooling loop uses the value of CTL STPT and CTL TEMP to modulate the value of CLG LOOPOUT (Point 79). The CLG OUTPUT (Point 61), OA DMPR POS (Point 62), cooling valve and outdoor air damper positions, are calculated from CLG LOOPOUT.

Relative Humidity Loop – The relative humidity loop uses the values of ROOM RH (Point 15) and RH STPT (Point 93) to modulate the value of RH LOOPOUT (Point 77). If RH LOOPOUT is positive, then it is used to modulate the humidity valve, point HUM OUTPUT (Point 55). If RH LOOPOUT is negative, then it is used for dehumidification, as described in the “Humidity Control” section.

2-position Humidifier Control

If HUMID AO.DO (Point 17) = DO, then DO1 is used to turn the humidifier on and off.

A pulse-width modulation scheme is used. Once the humidifier DO point has been turned on, it is kept on for at least the minimum on-time. However, if the demand is below a certain point, then the DO will not be turned on at all, because turning the humidifier on for its minimum on-time will provide too much humidification.

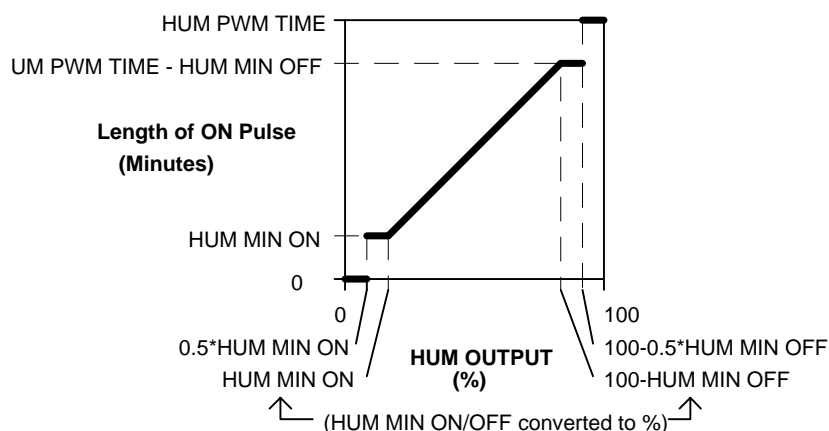

The DO is never on for less than HUM MIN ON (Point 95) (except when it is not turned on at all) and never off for less than the HUM MIN OFF (Point 96).

Electric Heat

The electric heat is controlled as follows:

HTG OUTPUT (Point 60)	Stage 1	Stage 2	Stage 3
0% - 33%	ON	OFF	OFF
34% - 66%	ON	ON	OFF
67% - 100%	ON	ON	ON

In addition, no stage may turn ON or OFF until the Point of seconds held in EHT STG DELY (Point 58) have elapsed since the last time any stage turned ON or OFF. Stage 1 will always be the first stage to turn ON and the last stage to turn OFF.

Fan Operation

In day mode, FAN (Point 50), is ON all of the time.

In night mode, the fan only operates when required for heating or cooling.

In night heating, the fan turns ON when the temperature drops below the value of CTL STPT (Point 92) minus NGT DBAND (Point 88). When the temperature rises above CTL STPT, the fan turns OFF. If any stage of electric heat is ON, then the fan will be ON. The fan will remain ON for 30 seconds after the last stage of electric heat is turned OFF.

In night cooling, the fan turns ON when the temperature rises above the value of CTL STPT plus NGT DBAND. When the temperature drops below CTL STPT, the fan turns OFF.

Fail-safe Operation

The Unit Vent with Humidity Control has a fail-safe operation that can be triggered by room temperature sensor failure.

If the room temperature sensor input to the Unit Vent with Humidity Control fails, then the controller goes through the following shutdown sequence:

- Outdoor air damper is closed.
- Heating is full OFF.
- Cooling is full OFF.
- Fan is OFF.
- Humidifier is OFF.

If the failed room temperature sensor returns, then normal control resumes.

If the set point dial fails, then its last valid value will continue to be used.

Analog and digital outputs cannot be commanded when the controller is in fail-safe mode; however, failed points may be overridden, allowing the controller to return from fail-safe mode. In this instance, room temperature control is not possible.

If FAN PROOF (DI 2) does not turn ON within PROOF TIME (Point 25) seconds after the fan turns ON the shutdown as above for room sensor failure, but the fan will stay on. When the proof turns on, normal control will resume. FAN ALARM (DI 4) is for monitoring purposes only.

Application Notes

1. If the unit ventilator cycles excessively, if the temperature swings in the room are excessive or if there is trouble in maintaining the set point, then either the cooling loop, the heating loop or both need to be tuned. Refer to the *APOGEE Automation Service Procedures Manual* in InfoLink for more information.
2. The Unit Vent with Humidity Control, as shipped from the factory, keeps all associated equipment OFF. Refer to the *TEC Custom Solutions Start-up Documentation* for this controller.
3. When the fan is manually switched OFF at the unit fan speed switch, the actuators should be wired so they return to their normal states.


Wiring Diagrams

The point wiring for Application 2319 is shown in Figures 2319-6 through 2319-9.



CAUTION:

The Unit Vent Controller's Digital Outputs (DOs) control 24 Vac loads only. The maximum rating is 12 VA for each DO. For higher VA requirements, 110 or 220 Vac requirements, or DC power requirements, use an interposing 220 V 4-relay module.

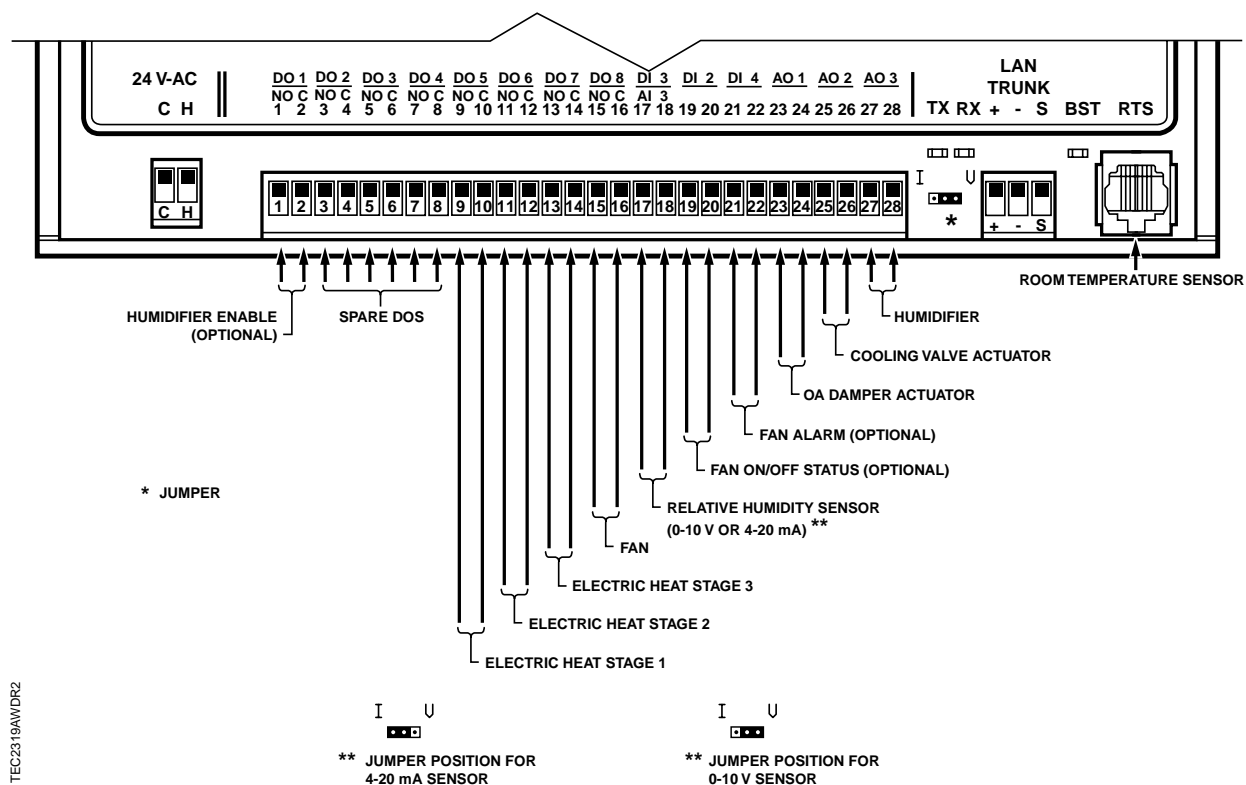


WARNING:

If a 4-20 mA relative humidity sensor is used, then special wiring requirements are necessary for AI 3 or damage to the controller may result. See Figure 2319-10.

Figure 2319-6. Application 2319 Wiring Diagram with AO-Controlled Damper Actuator and Humidifier.

**CAUTION:**

The Unit Vent Controller's Digital Outputs (DOs) control 24 Vac loads only. The maximum rating is 12 VA for each DO. For higher VA requirements, 110 or 220 Vac requirements, or DC power requirements, use an interposing 220 V 4-relay module.

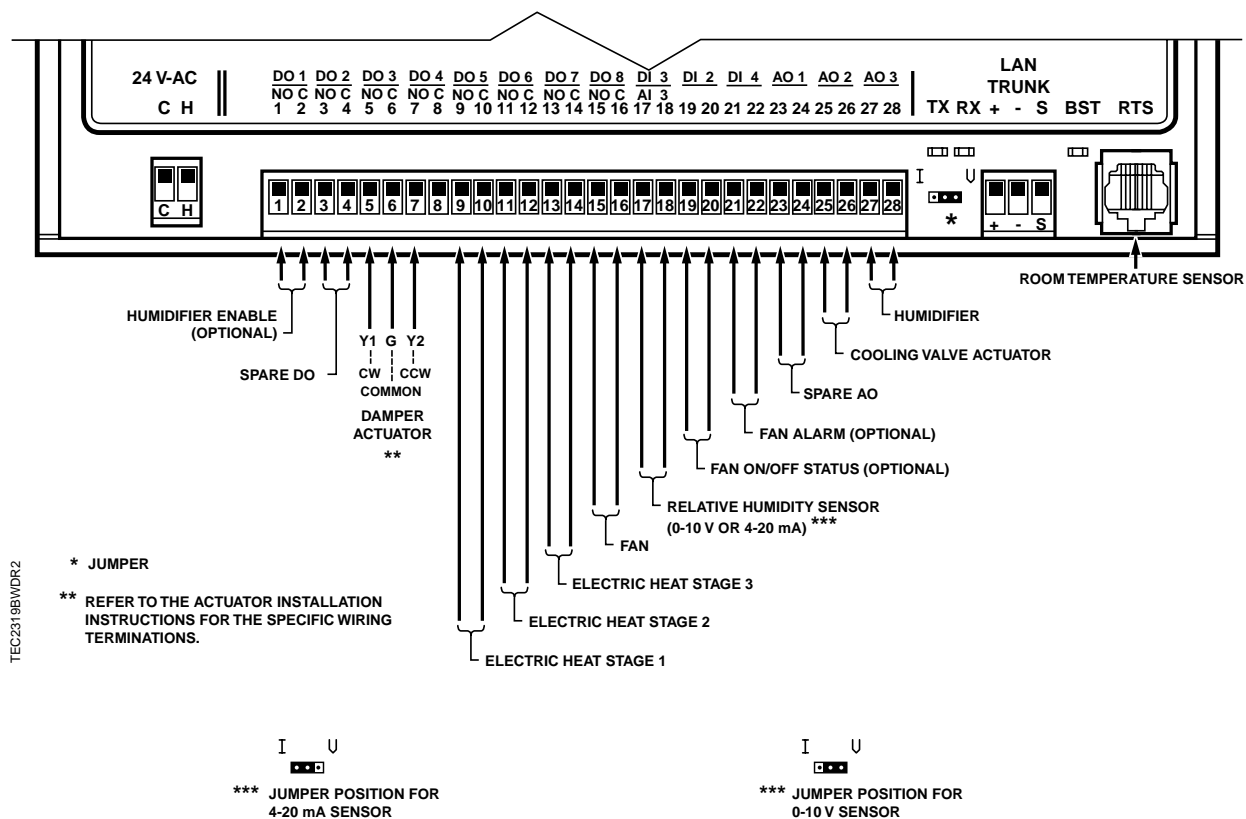
**WARNING:**

If a 4-20 mA relative humidity sensor is used, then special wiring requirements are necessary for AI 3 or damage to the controller may result. See Figure 2319-10.

Figure 2319-7. Application 2319 Wiring Diagram with AO-Controlled Humidifier and DO-Controller Damper Actuator.

**CAUTION:**

The Unit Vent Controller's Digital Outputs (DOs) control 24 Vac loads only. The maximum rating is 12 VA for each DO. For higher VA requirements, 110 or 220 Vac requirements, or DC power requirements, use an interposing 220 V 4-relay module.

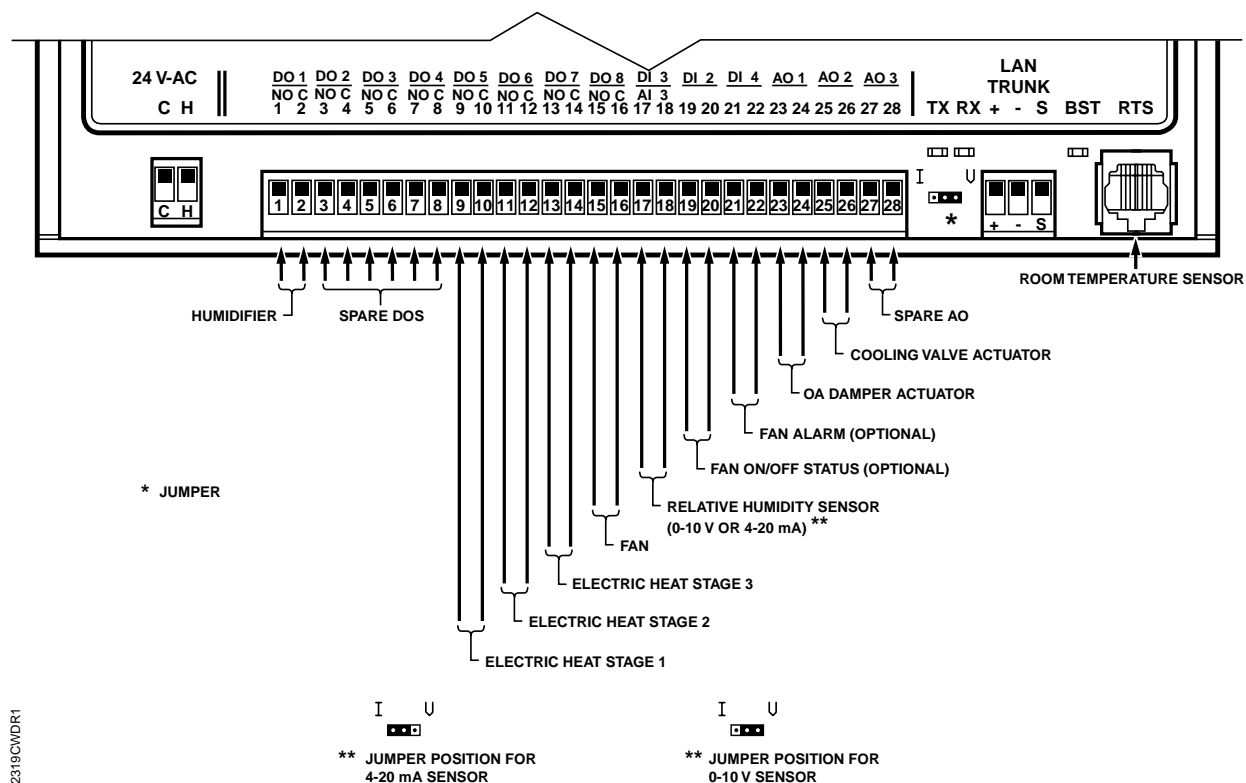

TEC2319QVDR1


**WARNING:**

If a 4-20 mA relative humidity sensor is used, then special wiring requirements are necessary for AI 3 or damage to the controller may result. See *Figure 2319-10*.

Figure 2319-8. Application 2319 Wiring Diagram with AO-Controlled Damper Actuator and DO-Controlled Humidifier

**CAUTION:**

The Unit Vent Controller's Digital Outputs (DOs) control 24 Vac loads only. The maximum rating is 12 VA for each DO. For higher VA requirements, 110 or 220 Vac requirements, or DC power requirements, use an interposing 220 V 4-relay module.

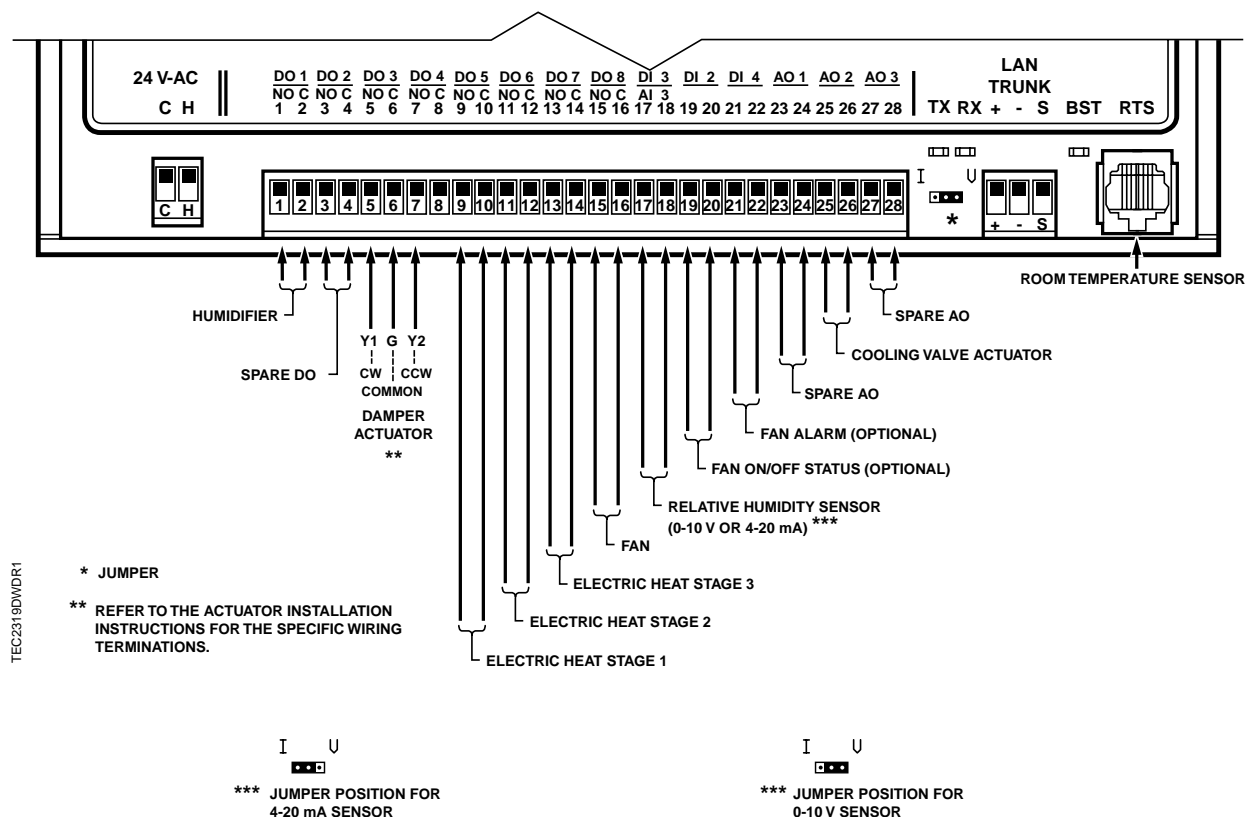**WARNING:**

If a 4-20 mA relative humidity sensor is used, then special wiring requirements are necessary for AI 3 or damage to the controller may result. See Figure 2319-10.

Figure 2319-9. Application 2319 Wiring Diagram with DO-Controlled Damper Actuator and Humidifier.

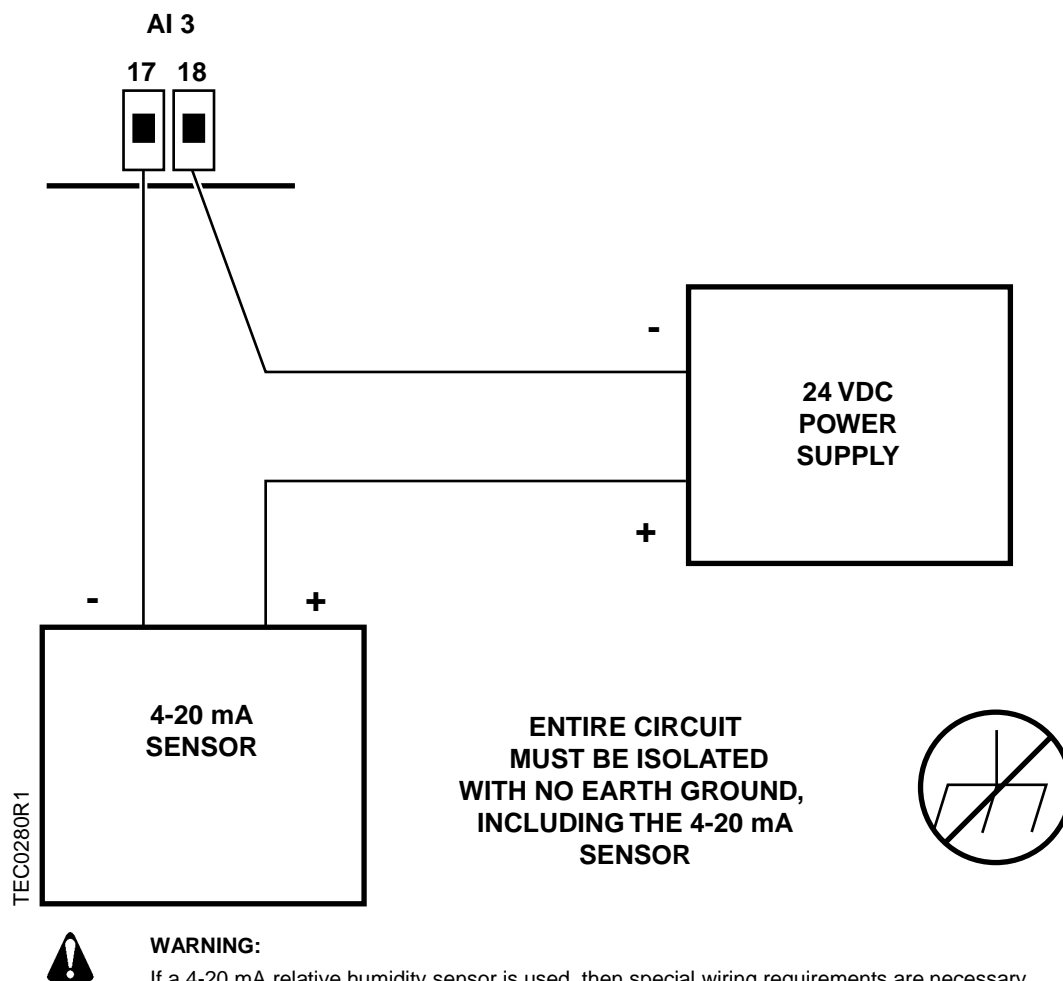


Figure 2319-10. Wiring Diagram for AI 3 if a 4-20 mA Sensor is Used.

Table 2319-1. Point Database for Application 2319.

Point Number	Descriptor	Factory Default (SI Units)	Engr. Units (SI Units)	Slope (SI Units)	Intercept (SI Units)	On Text	Off Text
01	CTLR ADDRESS	99	--	1	0	--	--
02	APPLICATION	2398	--	1	0	--	--
{04}	ROOM TEMP	74.00 (23.45)	DEG F (DEG C)	0.25 (0.14)	48.00 (8.89)	--	--
{05}	HEAT.COOL	COOL	--	--	--	HEAT	COOL
06	DAY CLG STPT	74.00 (23.45)	DEG F (DEG C)	0.25 (0.14)	48.00 (8.89)	--	--
07	DAY HTG STPT	70.00 (21.21)	DEG F (DEG C)	0.25 (0.14)	48.00 (8.89)	--	--
08	NGT CLG STPT	82.00 (27.93)	DEG F (DEG C)	0.25 (0.14)	48.00 (8.89)	--	--
09	NGT HTG STPT	65.00 (18.41)	DEG F (DEG C)	0.25 (0.14)	48.00 (8.89)	--	--
{10}	OADPR MINPOS	14.8	PCT	0.4	0.0	--	--
11	RM STPT MIN	55.00 (12.81)	DEG F (DEG C)	0.25 (0.14)	48.00 (8.89)	--	--
12	RM STPT MAX	90.00 (32.41)	DEG F (DEG C)	0.25 (0.14)	48.00 (8.89)	--	--
{13}	RM STPT DIAL	74.00 (23.45)	DEG F (DEG C)	0.25 (0.14)	48.00 (8.89)	--	--
14	STPT DIAL	NO	--	--	--	YES	NO
{15}	ROOM RH	0.0	PCT	0.4	0.0	--	--
17	DAMPER AO.DO	DO	--	--	--	AO	DO
{19}	DI OVRD SW	OFF	--	--	--	ON	OFF
20	OVRD TIME	1	HRS	1	0	--	--
{21}	NGT OVRD	DAY	--	--	--	NIGHT	DAY
22	HUMID AO.DO	DO	--	--	--	AO	DO
{23}	FREE CLG	DISABL	--	--	--	ENABL E	DISAB L

1. Points not listed are not used in this application.
2. A single value in a column means that the value is the same in English units and in SI units.
3. Point numbers that appear in brackets { } may be unbundled at the field panel.

Continued on next page...

Table 2319-1. Point Database for Application 2319.

Point Number	Descriptor	Factory Default (SI Units)	Engr. Units (SI Units)	Slope (SI Units)	Intercept (SI Units)	On Text	Off Text
{24}	FAN PROOF	OFF	--	--	--	ON	OFF
25	PROOF TIME	30	SEC	1	0	--	--
{26}	FAN ALARM	OFF	--	--	--	ON	OFF
{27}	HUM.DEHUM	HUM	--	--	--	DEHUM	HUM
{28}	DEHUM MODE	DISABL	--	--	--	ENABL E	DISAB L
{29}	DAY.NGT	DAY	--	--	--	NIGHT	DAY
31	AOV1 SPAN	10.00	VOLTS	0.01	0.00	--	--
32	AOV1 START	0.00	VOLTS	0.01	0.00	--	--
33	AOV2 SPAN	10.00	VOLTS	0.01	0.00	--	--
34	AOV2 START	0.00	VOLTS	0.01	0.00	--	--
35	AOV3 SPAN	10.00	VOLTS	0.01	0.00	--	--
36	AOV3 START	0.00	VOLTS	0.01	0.00	--	--
37	AO DIR.REV	0	--	1	0	--	--
{38}	AOV1	0.00	VOLTS	0.01	0.00	--	--
{39}	AOV2	0.00	VOLTS	0.01	0.00	--	--
{40}	AOV3	0.00	VOLTS	0.01	0.00	--	--
{41}	HUM DO 1	OFF	--	--	--	ON	OFF
{42}	DO 2	OFF	--	--	--	ON	OFF
{43}	DPR OPEN DO3	OFF	--	--	--	ON	OFF
{44}	DPR CLOS DO4	OFF	--	--	--	ON	OFF
{45}	EHEAT 1 DO5	OFF	--	--	--	ON	OFF
{46}	EHEAT 2 DO6	OFF	--	--	--	ON	OFF
{47}	EHEAT 3 DO7	OFF	--	--	--	ON	OFF
{50}	FAN DO 8	OFF	--	--	--	ON	OFF

1. Points not listed are not used in this application.
2. A single value in a column means that the value is the same in English units and in SI units.
3. Point numbers that appear in brackets { } may be unbundled at the field panel.

Continued on next page...

Table 2319-1. Point Database for Application 2319.

Point Number	Descriptor	Factory Default (SI Units)	Engr. Units (SI Units)	Slope (SI Units)	Intercept (SI Units)	On Text	Off Text
54	NGT CLG MODE	NO	--	--	--	YES	NO
{55}	HUM OUTPUT	0.0	PCT	0.4	0.0	--	--
57	HUM PWM TIME	10	MIN	1	0	--	--
58	EHT STG DELY	30	SEC	1	0	--	--
59	DO DIR.REV	0	--	1	0	--	--
{60}	HTG OUTPUT	0.0	PCT	0.4	0.0	--	--
{61}	CLG OUTPUT	0.0	PCT	0.4	0.0	--	--
{62}	OA DMPR POS	0.0	PCT	0.4	0.0	--	--
63	CLG P GAIN	1.6 (2.88)	--	0.2 (0.36)	0.0 (0.00)	--	--
64	CLG I GAIN	0.0500 (0.0900)	--	0.0005 (0.0009)	0.0000 (0.0000)	--	--
65	CLG D GAIN	10 (18.0)	--	2 (3.6)	0 (0.0)	--	--
66	CLG BIAS	0.0	PCT	0.2	0.0	--	--
67	HTG P GAIN	0.40 (0.72)	--	0.05 (0.09)	0.00 (0.00)	--	--
68	HTG I GAIN	0.0150 (0.02700)	--	0.0002 (0.00036)	0.0000 (0.00000)	--	--
69	HTG D GAIN	5 (9.0)	--	1 (1.8)	0 (0.0)	--	--
70	HTG BIAS	0.0	PCT	0.2	0.0	--	--
{77}	RH LOOPOUT	0.0	PCT	0.2	-100.0	--	--
{78}	CTL TEMP	74.00 (23.45)	DEG F (DEG C)	0.25 (0.14)	48.00 (8.89)	--	--
{79}	CLG LOOPOUT	0.0	PCT	0.2	0.0	--	--
{80}	HTG LOOPOUT	0.0	PCT	0.2	0.0	--	--
81	RH P GAIN	5.00 (9.00)	--	0.25 (0.45)	0.00 (0.00)	--	--
82	RH I GAIN	0.010 (0.0180)	--	0.001 (0.0018)	0.000 (0.0000)	--	--
83	RH D GAIN	0 (0.0)	--	2 (3.6)	0 (0.0)	--	--

1. Points not listed are not used in this application.
2. A single value in a column means that the value is the same in English units and in SI units.
3. Point numbers that appear in brackets { } may be unbundled at the field panel.

Continued on next page...

Table 2319-1. Point Database for Application 2319.

Point Number	Descriptor	Factory Default (SI Units)	Engr. Units (SI Units)	Slope (SI Units)	Intercept (SI Units)	On Text	Off Text
84	RH BIAS	0.0	PCT	0.2	-100.0	--	--
85	SWITCH LIMIT	4.8	PCT	0.4	0.0	--	--
86	SWITCH TIME	10	MIN	1	0	--	--
87	DEHUM COEFF	0.50	--	0.01	0.00	--	--
88	NGT DBAND	3.00 (1.68)	DEG F (DEG C)	0.25 (0.14)	0.00 (0.00)	--	--
90	SWITCH DBAND	2.00 (1.12)	DEG F (DEG C)	0.25 (0.14)	0.00 (0.00)	--	--
{92}	CTL STPT	74.00 (23.45)	DEG F (DEG C)	0.25 (0.14)	48.00 (8.89)	--	--
{93}	RH STPT	50.0	PCT	0.4	0.0	--	--
95	HUM MIN ON	1.0	MIN	0.1	0.0	--	--
96	HUM MIN OFF	1.0	MIN	0.1	0.0	--	--
97	AI3 VOLT.CUR	VOLT	--	--	--	CURENT	VOLT
98	LOOP TIME	5	SEC	1	0	--	--
{99}	ERROR STATUS	0	--	1	0	--	--

1. Points not listed are not used in this application.
2. A single value in a column means that the value is the same in English units and in SI units.
3. Point numbers that appear in brackets { } may be unbundled at the field panel.