

Application 2430

Constant Volume Cooling Only with 2-Inch Water Column Measurement Range

This document contains the following topics:

- Overview
- Hardware Inputs
- Hardware Outputs
- Ordering Notes
- Sequence of Operation
 - Occupied and Unoccupied Modes
 - Unoccupied Mode Override Switch
 - Control Loops
 - Calibration
 - Damper Status Operation
 - Fail-safe Operation
- Application Notes
- Wiring Diagram
- Point Database

Overview

In Application 2430, the controller provides a constant volume of air to the room during occupied periods, and a lower constant volume of air to the room during unoccupied periods. Refer to Figures 2430-1 and 2430-2. This application will measure flows with differential pressure measurements up to two inches (up to a maximum of 5663 FPM).

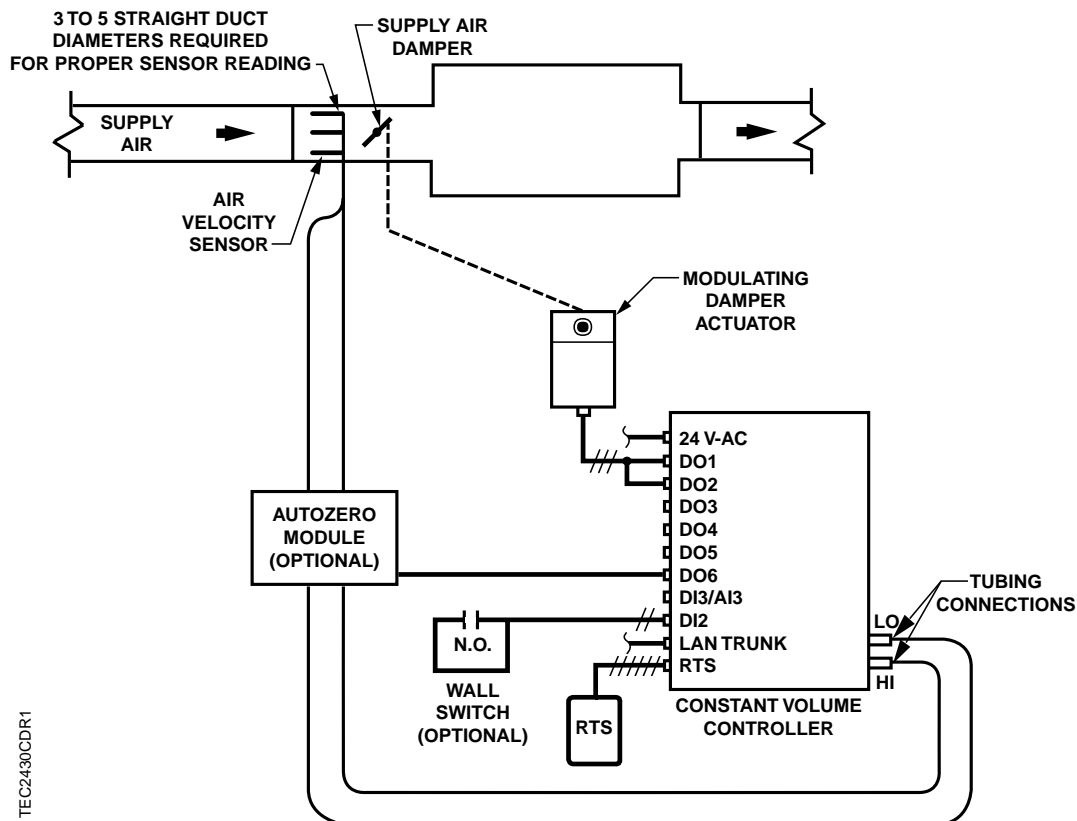


Figure 2430-1. Application 2430 Control Drawing.

CONTROL SCHEDULE		
ROOM TEMPERATURE	-°F (-°C)	+°F (+°C)
OCCUPIED FLOW		
SUPPLY AIR _____		
UNOCCUPIED FLOW		

TEC2430CSR1

Figure 2430-2. Application 2430 Control Schedule.

Hardware Inputs

Analog

- Air Velocity Sensor
- Room Temperature Sensor*

*Application 2430 supports a room temperature sensor for monitoring purposes only.

Digital

- Night Mode Override (optional)
- Wall Switch (optional)

Hardware Outputs

Analog

- None

Digital

- Autozero Module (optional)
- Damper Actuator

Ordering Notes

Constant Volume Controller with 2-Inch Water Column Measurement Range — Electronic Output: 540-100A. Refer to *APOGEE Automation Configuration and Sizing Guidelines* on InfoLink for other product numbers:

- Autozero Module (optional)
- Damper actuator
- Terminal Equipment Controller room temperature sensor

Sequence of Operation

The following paragraphs present the sequence of operation for Application 2430, "Constant Volume Cooling Only with Two-Inch Water Column Measurement Range."

Occupied and Unoccupied Modes

The occupied/unoccupied status of the space is determined by the status of OCC.UNOCC (Point 29). The control of this point differs depending on whether the controller is monitoring the status of a wall switch or if the controller is connected to a field panel.

When a wall switch is physically connected to the termination strip on the controller at DI 2 (Figures 2430-1 and 2430-4), and WALL SWITCH (Point 18) equals YES, the controller monitors the status of DI 2. When the status of DI 2 (Point 24) is ON (the switch is closed), OCC.UNOCC will be set to OCC indicating that the controller is in occupied mode. When the status of DI 2 is OFF (the switch is open), OCC.UNOCC will be set to UNOCC indicating that the controller is in unoccupied mode.

When WALL SWITCH equals NO, the controller does not monitor the status of the wall switch, even if one is connected to it. In this case, and if the controller is operating stand-alone, then the controller stays in occupied mode all the time. If the controller is operating with centralized control (that is, it is connected to a field panel), then the field panel can send an operator or PPCL command to override the status of OCC.UNOCC. Refer to *Powers Process Control Language (PPCL) User's Manual* (125-1896) and *Field Panel User's Manual* (125-1895) for more information.

Unoccupied Mode Override Switch

If an override switch is present on the room temperature sensor and a value (in hours) other than zero has been entered in OVRD TIME (Point 20). The room occupant can reset the controller to occupied operational mode for the amount of time that is set in OVRD TIME, by pressing the override switch. The status of UNOCC OVRD (Point 21) changes to OCC. After the override time elapses, and the controller returns to unoccupied mode. Finally, the status of UNOCC OVRD changes back to UNOCC.

It is only when the controller is in unoccupied mode that the override switch on the room temperature sensor will have any effect on the controller.

Control Loops

The flow loop maintains FLOW STPT (Point 93) by modulating the supply air damper, DMPR COMD (Point 48). The flow loop maintains the airflow at either OCC FLOW (Point 32) or UNOCC FLOW (Point 31) depending on the value of OCC.UNOCC (Point 29).

The FLOW (Point 75) is the input value for the flow loop. It is calculated as a percentage based on where AIR VOLUME (Point 35) is between 0 CFM (LPS) and OCC FLOW. In the following text, this percentage is referred to as % flow.

- If AIR VOLUME equals 0 CFM (LPS), then FLOW is 0% flow.

- If AIR VOLUME equals OCC FLOW, then FLOW is 100% flow.

The FLOW STPT percentage that corresponds to UNOCC FLOW is calculated as:
 $(\text{UNOCC FLOW} \div \text{OCC FLOW}) \times 100\% \text{ flow}$.

For example, if UNOCC FLOW equals 250 CFM, and if OCC FLOW equals 1000 CFM then, in unoccupied mode the FLOW STPT = $(250 \text{ CFM} \div 1000 \text{ CFM}) \times 100\% \text{ flow} = 0.25 \times 100\% \text{ flow} = 25\% \text{ flow}$.

Since 25% of 1000 CFM equals 250 CFM, the flow set point in unoccupied mode will be 25%. UNOCC FLOW can be set less than or equal to, but not greater than OCC FLOW.

Calibration

Air Velocity Transducer – Calibration of the controller's internal air velocity transducer is periodically required to maintain accurate air velocity readings. CAL SETUP (Point 95) is set with the desired calibration option during controller start-up. Depending upon the value of CAL SETUP, calibration may be set to take place automatically or manually when the override switch is pressed on the room temperature sensor. If the value of CAL AIR (Point 94) is YES, then calibration is in progress.

- For a controller used without an Autozero Module (CAL MODULE (Point 87) = NO), the damper is commanded closed to get a zero airflow reading during calibration.
- For a controller used with an Autozero Module (CAL MODULE = YES), calibration occurs without closing the damper. (**Note:** The first time after start-up or initialization, the controller will calibrate the damper as if not using an Autozero Module, although the Autozero Module will be activated. All subsequent calibrations will use the Autozero Module only).

At the end of a calibration sequence, CAL AIR returns to NO automatically. A status of NO indicates that the controller is not in a calibration sequence.

The Autozero Module is enabled when it is wired to DO 6 and CAL MODULE (Point 87) is set to YES.

Damper Status Operation

Under normal operation the DMPR STATUS (Point 84) reads "CAL". However, when using an Autozero Module, it is possible after a period of operation for the calculated damper position, DMPR POS (Point 49), to differ from the actual (physical) damper position.

If this occurs, the controller will automatically compensate for any difference by setting DMPR STATUS to "RECAL," which readjusts the value of DMPR POS. DMPR STATUS will be set to "RECAL" if one of the following two sets of conditions is true:

- DMPR POS = 100%
Air velocity $(\text{AIR VOLUME (Point 35)} \div \text{DUCT AREA (Point 97)}) > 200 \text{ FPM}$
 $\text{FLOW (Point 75)} < \text{FLOW STPT (Point 93)}$

- DMPR POS = 0%
Air velocity ($\text{AIR VOLUME} \div \text{DUCT AREA}$) > 200 FPM
FLOW > FLOW STPT

If DMPR STATUS has been changed to "RECAL" in response to one of the conditions described above, then do one of the following:

- If flow is now being properly controlled, then set DMPR STATUS to **CAL** and release it.
- If flow is still not being properly controlled (i.e., one of the conditions described above is still present), then initialize the controller.

If these steps do not fix the problem of maintaining flow, then a mechanical problem might exist.

Fail-safe Operation

If the air velocity sensor fails, the controller determines the status of FAIL MODE (Point 40) and positions the damper accordingly. If FAIL MODE equals OPEN and the velocity sensor fails, then the damper will open. If FAIL MODE equals CLOSED (the default) and the velocity sensor fails, then the damper will close.

If the room temperature sensor fails, then the controller holds the last known temperature value. In this application, the room temperature is not controlled, it is for monitoring purposes only.

Application Notes


1. If FLOW (Point 75) is oscillating while FLOW STPT (Point 93) is constant, then the flow loop requires tuning. Refer to *APOGEE Automation Service Procedures* on InfoLink for more information.
2. The Constant Volume Controller – Electronic Output, as shipped from the factory, keeps all associated equipment OFF. Refer to the *Equipment Controllers* section in *APOGEE Automation Start-up Procedures* on InfoLink for information on how to release the controller and its equipment to application control.
3. Spare DOs can be used as auxiliary points that are controlled by the field panel after being defined in the field panel's database. The combination of DO 3 and DO 4 may be used as auxiliary motor points. If using this pair of spare DOs to control a motor, you must unbundle MTR2 COMD (Point 52) and set MTR SETUP (Point 58) as described in the *APOGEE Automation Start-up Procedures* on InfoLink.

Wiring Diagram



CAUTION:

The Constant Volume Controller controls 24 Vac loads only. The maximum rating is 12 VA for each DO. For higher VA requirements, 110 or 220 Vac requirements, or DC power requirements, use an interposing 220V 4-relay module.

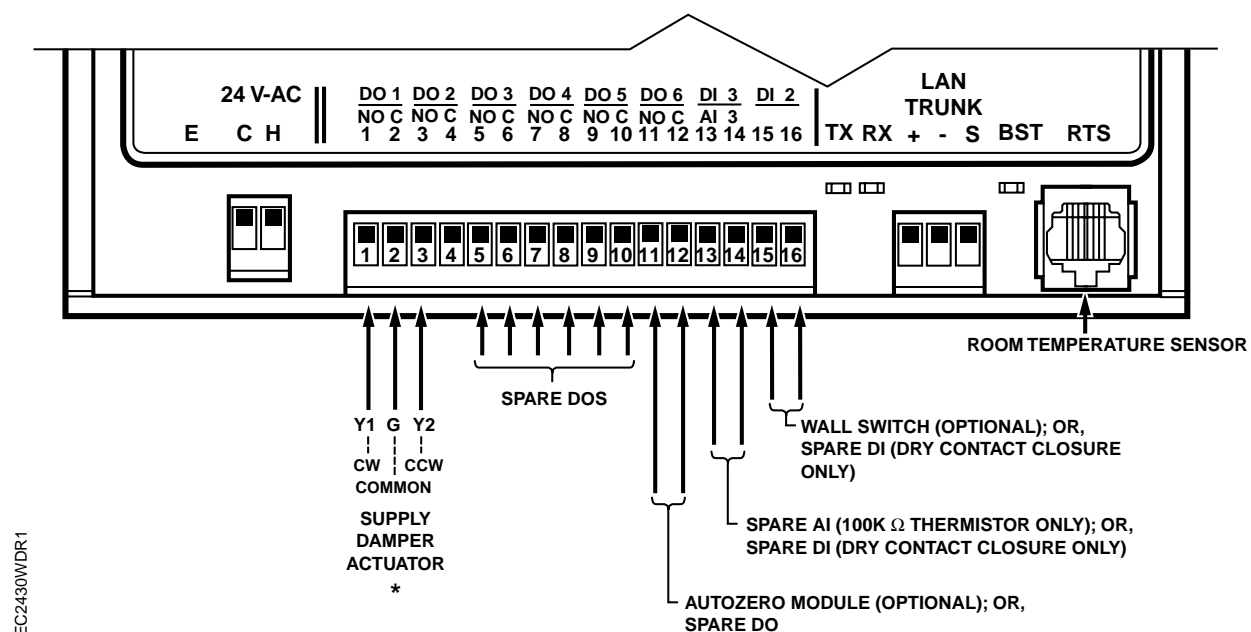

TEC2430WDR1

* REFER TO THE ACTUATOR INSTALLATION INSTRUCTIONS FOR SPECIFIC WIRING TERMINATIONS

Figure 2430-4. Application 2430 Wiring Diagram.

Point Database

Table 2430-1. Point Database for Application 2430.

Point Number	Descriptor	Factory Default (SI Units)	Engr. Units (SI Units)	Slope (SI Units)	Intercept (SI Units)	On Text	Off Text
01	CTLR ADDRESS	99	--	1	0	--	--
02	APPLICATION	2092	--	1	0	--	--
{04}	ROOM TEMP	74.0 (23.44888)	DEG F (DEG C)	0.25 (0.14)	48.0(8.88888)	--	--
{15}	AUX TEMP	74.0 (23.495556)	DEG F (DEG C)	0.5 (0.28)	37.5(3.055556)	--	--
18	WALL SWITCH	NO	--	--	--	YES	NO
{19}	DI OVRD SW	OFF	--	--	--	ON	OFF
20	OVRD TIME	0	HRS	1	0	--	--
{21}	UNOCC OVRD	UNOCC	--	--	--	UNOCC	OCC
{24}	DI 2	OFF	--	--	--	ON	OFF
{25}	DI 3	OFF	--	--	--	ON	OFF
{29}	OCC.UNOCC	OCC	--	--	--	UNOCC	OCC
{31}	UNOCC FLOW	220 (103.818)	CFM (LPS)	4 (1.8876)	0	--	--
{32}	OCC FLOW	2200 (1038.18)	CFM (LPS)	4 (1.8876)	0	--	--
{35}	AIR VOLUME	0 (0.0)	CFM (LPS)	4 (1.8876)	0	--	--
36	FLOW COEFF	1.0	--	0.01	0.0	--	--
40	FAIL MODE	CLOSED	--	--	--	CLOSED	OPEN
{41}	DO 1	OFF	--	--	--	ON	OFF
{42}	DO 2	OFF	--	--	--	ON	OFF
{43}	DO 3	OFF	--	--	--	ON	OFF
{44}	DO 4	OFF	--	--	--	ON	OFF
{45}	DO 5	OFF	--	--	--	ON	OFF
{46}	DO 6	OFF	--	--	--	ON	OFF
{48}	DMPR COMD	0.0	PCT	0.4	0.0	--	--
{49}	DMPR POS	0.0	PCT	0.4	0.0	--	--
51	MTR1 TIMING	95	SEC	1	0	--	--
{52}	MTR2 COMD	0.0	PCT	0.4	0.0	--	--

1. Points not listed are not used in this application.

2. A single value in a column means that the value is the same in English units and in SI units.

3. Point numbers that appear in brackets { } may be unbundled at the field panel.

Continued on next page...

Table 2430-1. Point Database for Application 2430.

Point Number	Descriptor	Factory Default (SI Units)	Engr. Units (SI Units)	Slope (SI Units)	Intercept (SI Units)	On Text	Off Text
{53}	MTR2 POS	0.0	PCT	0.4	0.0	--	--
55	MTR2 TIMING	130	SEC	1	0	--	--
56	DPR1 ROT ANG	90	--	1	0	--	--
57	DPR2 ROT ANG	90	--	1	0	--	--
58	MTR SETUP	0	--	1	0	--	--
59	DO DIR.REV	0	--	1	0	--	--
71	FLOW P GAIN	0.25	--	0.05	0.0	--	--
72	FLOW I GAIN	0.018	--	0.001	0.0	--	--
73	FLOW D GAIN	0	--	2	0	--	--
74	FLOW BIAS	50.0	PCT	0.4	0.0	--	--
{75}	FLOW	0.0	PCT	0.25	0.0	--	--
{78}	CTL TEMP	74.0 (23.44888)	DEG F (DEG C)	0.25 (0.14)	48.0(8.88888)	--	--
{84}	DMPR STATUS	CAL	--	--	--	RECAL	CAL
87	CAL MODULE	NO	--	--	--	YES	NO
{91}	TOTAL VOLUME	0 (0)	CF (L)	4 (113)	0	--	--
{93}	FLOW STPT	0.0	PCT	0.25	0.0	--	--
{94}	CAL AIR	NO	--	--	--	YES	NO
95	CAL SETUP	4	--	1	0	--	--
96	CAL TIMER	12	HRS	1	0	--	--
97	DUCT AREA	1.0 (0.09292)	SQ. FT (SQ M)	0.025 (0.002323)	0.0	--	--
98	LOOP TIME	5	SEC	1	0	--	--
{99}	ERROR STATUS	0	--	1	0	--	--

1. Points not listed are not used in this application.
2. A single value in a column means that the value is the same in English units and in SI units.
3. Point numbers that appear in brackets { } may be unbundled at the field panel.