

SIEMENS



BACnet PTEC Controller

Terminal Box (VAV) - with
Series Fan and 3-Stage Electric
Heat, Application 6524

Application Note

Table of Contents

Overview	4
BACnet	6
Hardware Inputs	6
Hardware Outputs.....	7
Ordering Notes	7
Sequence of Operation	8
Control Temperature Setpoints	8
Room Temperature, Room Temperature Offset and CTL TEMP.....	9
Day and Night Modes	9
Night Mode Override Switch	10
Heating/Cooling Switchover.....	10
Modulating Damper During Heating Mode (Optional)	11
Control Loops	11
Staged Heating Coil - Terminal Unit	12
Sequencing Logic	13
Calibration.....	15
Series Fan Operation.....	15
AI 4/AI 5 OFFSET (Optional)	16
Room Unit Operation	16
Stat Supervision	16
Room CO2.....	17
Room RH.....	17
Fail Mode Operation	17
Application Notes	17
Wiring Diagram	18
Application 6524 Point Database	19


Overview




NOTE:

For information on applications with Firmware Revision Bx40 or earlier, see InfoLink and/or Asset Portal for documentation.


In Application 6524, the controller modulates the supply air damper of the terminal box for cooling and controls stages of electric reheat for heating. When in heating, the terminal box either maintains minimum airflow or modulates the supply air damper. Application 6524 has a series fan for air circulation. In order for the terminal box to work properly, the central air-handling unit must provide supply air.

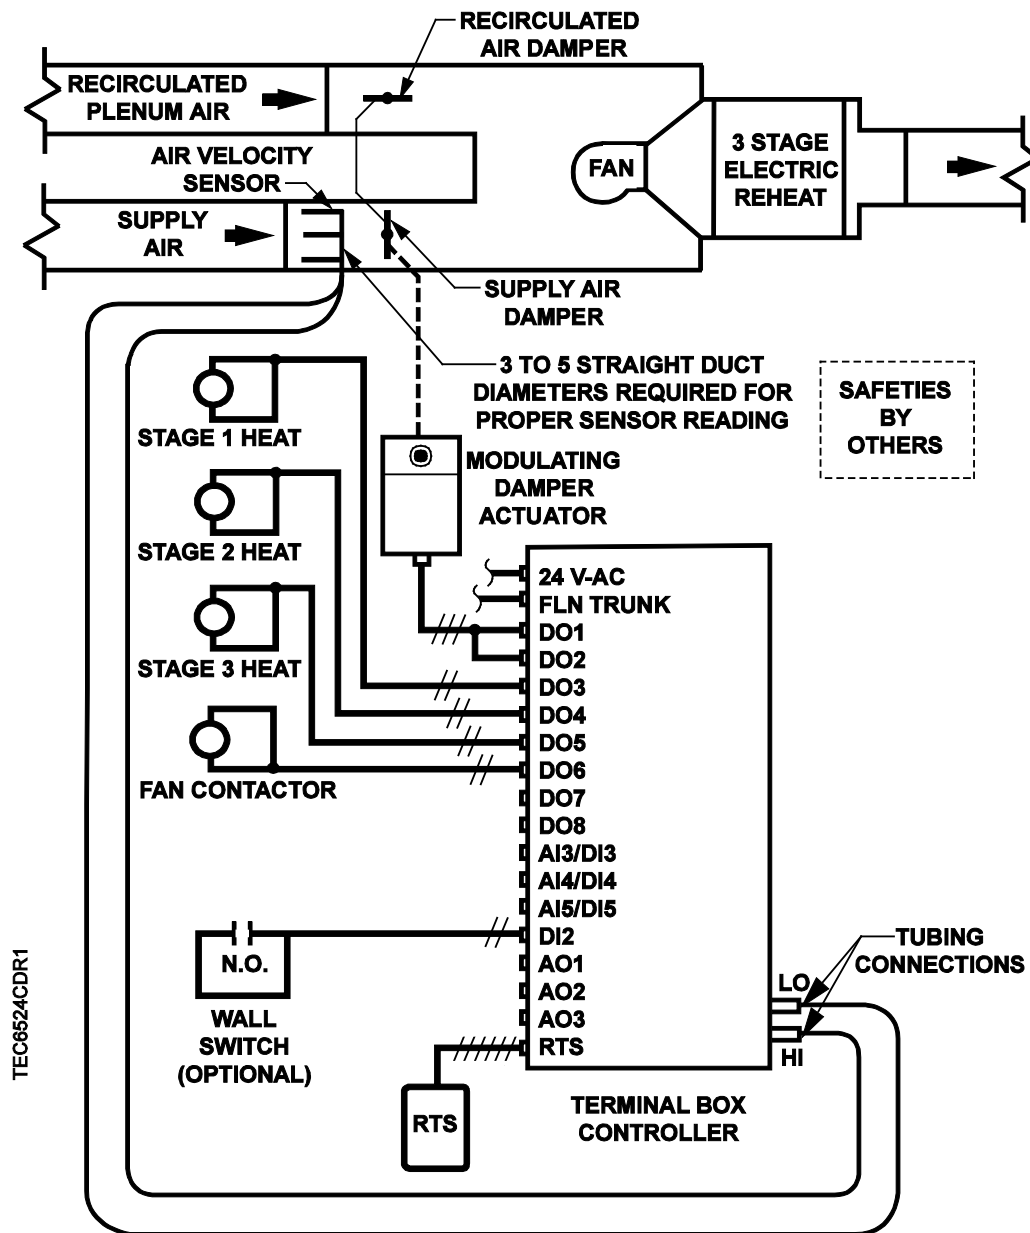

Application 6524 - VAV with Series Fan and 3-Stage Electric Heat.

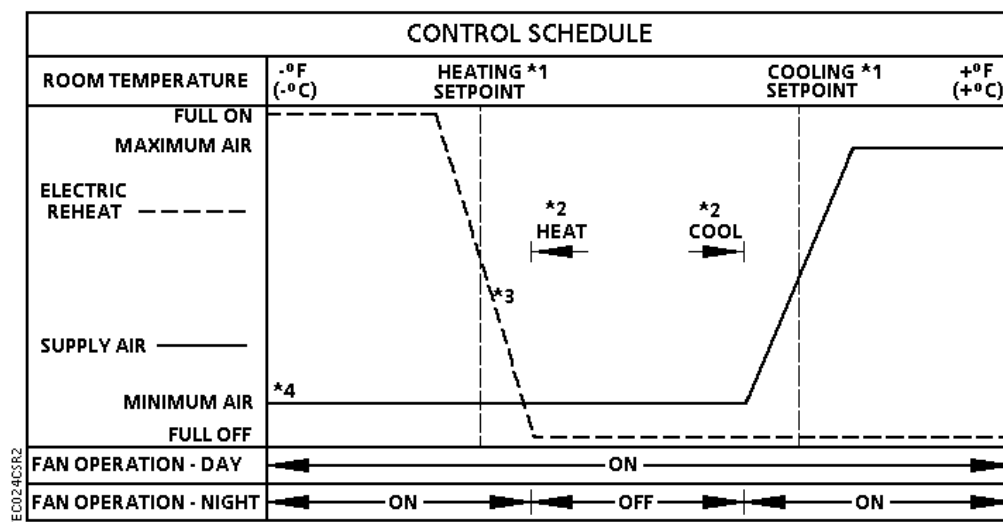

Application 6524 Control Schedule.

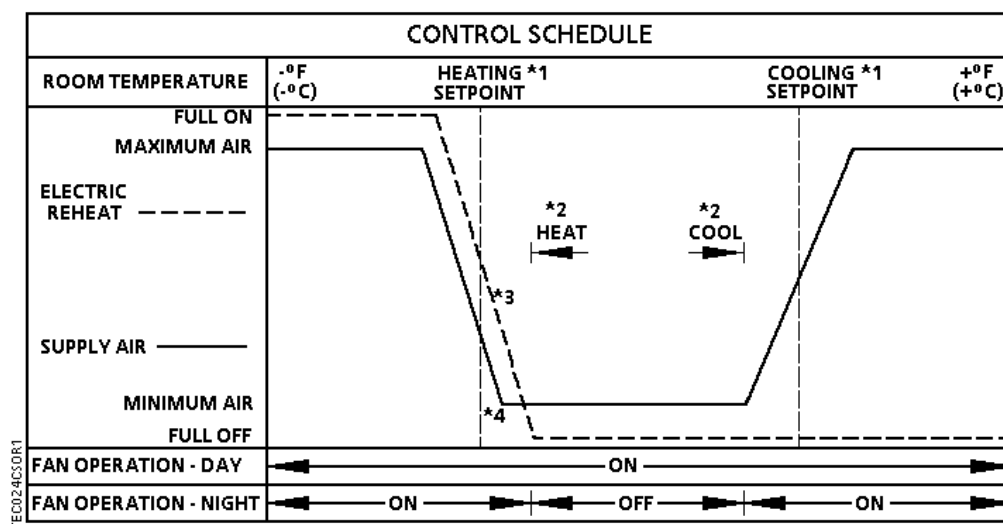

Application 6524 Heating Mode Control Schedule.



NOTES:

1. See *Control Temperature Setpoints*.
2. See *Heating/Cooling Switchover*.
3. The electric reheat is time modulated. This allows it to be controlled proportionally rather than with deadbands.
4. The airflow is shown modulating in the entire heating mode. (Default settings must be changed.) The airflow can operate sequenced, parallel, or overlapping with the reheat valve (optional). See *Sequencing Logic*.



NOTE:

The airflow is shown operating parallel with the electric reheat (optional). See Sequencing Logic [→ 13].

BACnet

The controller communicates using BACnet MS/TP protocol for open communications on BACnet MS/TP networks.

Product	Supported BIBBs	BIBB Name
BTEC/PTEC	DS-RP-B B	Data Sharing-Read Property-B
	DS-RPM-B	Data Sharing-Read Property Multiple-B
	DS-WP-B	Data Sharing-Write Property-B
	DM-DDB-B	Device Management-Dynamic Device Binding-B
	DM-DOB-B	Device Management-Dynamic Object Binding-B
	DM-DCC-B	Device Management-Device Communication Control-B
	DM-RD-B	Device Management-Reinitialize Device-B
	DM-BR-B	Device Management-Backup and Restore-B
	DM-OCD-B	Device Management-Object Creation and Deletion-B

Hardware Inputs

Analog

- Air velocity sensor
- Room temperature sensor
- Room temperature setpoint dial (optional)

Digital

- Night/Unoccupied mode override (optional)
- Wall switch (optional)

Hardware Outputs

Analog

- Spare AO 1, AO 2, and AO 3 (0-10V)

Digital

- Damper actuator (DO 1/DO 2)
- Autozero module (optional)
- Series Fan (DO 6)
- Stage 1 electric heat (optional) or Spare DO 3
- Stage 2 electric heat (optional) or Spare DO 4
- Stage 3 electric heat (optional) or Spare DO 5

Ordering Notes

550-495P Siemens BACnet PTEC VAV/Terminal Box Controller

Sequence of Operation

The following paragraphs present the sequence of operation for Application 6524, VAV with Electric Heat and Series Fan.

Control Temperature Setpoints

This application has a number of different room temperature setpoints (DAY HTG STPT, NGT CLG STPT, RM STPT DIAL, etc.). The application actually controls using the CTL STPT. CTL STPT is set to different values depending on its override status, the time of day, whether or not a temperature deadband (zero energy band) has been configured, and the type of RTS used.

CTL STPT is Overridden:

If CTL STPT is overridden, that value is used regardless of any other settings. This disables the setpoint deadband feature.

CTL STPT in Night Mode:

The controller is in Night Mode if DAY.NGT = NGT and NGT OVRD = NGT.

When the controller is in night mode, CTL STPT holds the value of NGT CLG STPT or NGT HTG STPT depending on the value of HEAT.COOL. When the controller is in night mode the value of RM STPT DIAL is ignored.

CTL STPT in Day Mode:

The controller is in Day Mode if DAY.NGT = DAY or NGT OVRD = DAY.


Without setpoint dial:

When the controller is in day mode and STPT DIAL = NO, CTL STPT holds the value of DAY CLG STPT or DAY HTG STPT depending on the value of HEAT.COOL.

With setpoint dial:

When the controller is in day mode and STPT DIAL = YES, CTL STPT is set based on the value of the setpoint dial and the setpoint deadband.

The setpoint deadband exists to allow the controller to provide a separation of the heating and cooling temperature setpoints when a setpoint dial is enabled.

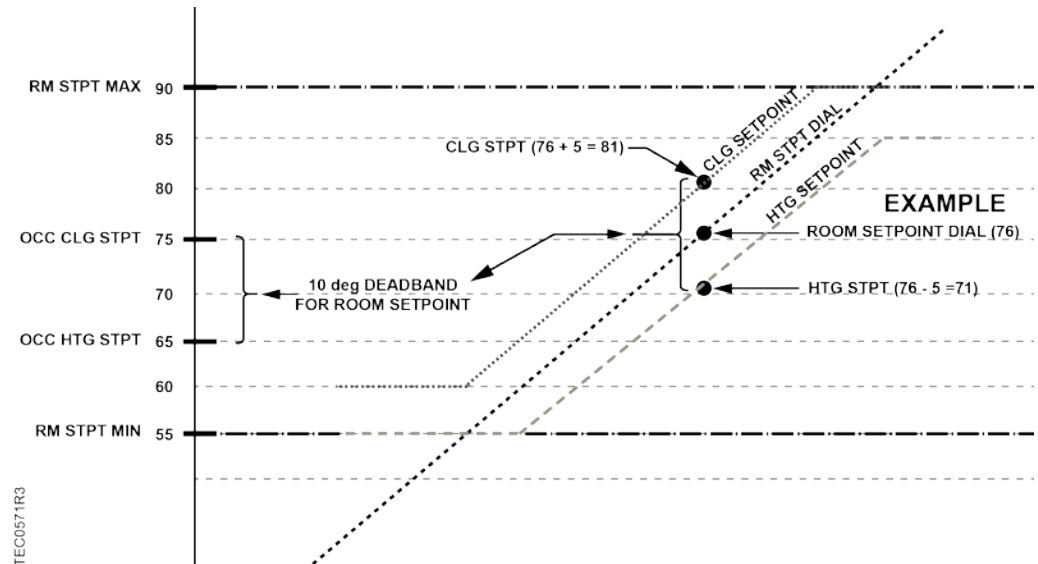

Room Temperature, Room Temperature Offset and CTL TEMP

ROOM TEMP is the temperature that is being sensed by the room temperature sensor (RTS).

RMTMP OFFSET (or TEMP OFFSET) is a user-adjustable offset that will compensate for deviations between the value of ROOM TEMP and the actual room temperature.

CTL TEMP is the room temperature that is used for control purposes. In other words, what the application is trying to do is to maintain CTL TEMP at the control setpoint.

When CTL TEMP is not overridden, CTL TEMP and ROOM TEMP are related by the following equation:

$$\text{CTL TEMP} = \text{ROOM TEMP} + \text{RMTMP OFFSET (or TEMP OFFSET)}$$

If CTL TEMP is not overridden, then:

- The current value of ROOM TEMP (normal or overridden) is used to determine the value of CTL TEMP.
- If ROOM TEMP has a status of Failed, then last known good value of ROOM TEMP is used to determine the value of CTL TEMP.

If CTL TEMP is overridden then:

- CTL TEMP equals its overridden value and the points ROOM TEMP and TEMP (RMTMP) OFFSET have no effect on the value of CTL TEMP. Where $\text{CTL TEMP} = \text{ROOM TEMP} + \text{RMTMP OFFSET}$.

Day and Night Modes

The day/night status of the space is determined by the status of DAY.NGT. The control of this point differs depending on whether the controller is monitoring the status of a wall switch or if the controller is connected to a field panel.

When a wall switch is physically connected to the termination strip on the controller at DI 2 (see the *Control Diagram* in the Overview section), and WALL SWITCH = YES, the controller monitors the status of DI 2. When the status of DI 2 is ON (the switch is closed), then DAY.NGT will be set to DAY indicating that the controller is in day mode. When the status is OFF (the switch is open), then DAY.NGT will be set to NIGHT indicating that the controller is in night mode.

When WALL SWITCH = NO, the controller does not monitor the status of the wall switch, even if one is connected to it. In this case, if the controller is operating stand-alone, then the controller stays in day mode all the time. If the controller is operating with centralized control (that is, it is connected to a field panel), then the field panel can send an operator or PPCL command to override the status of DAY.NGT. See *Powers Process Control Language (PPCL) User's Manual* (125-1896) and the APOGEE P2 ALN Field Panel User's Manual (125-3019) or the APOGEE BACnet ALN Field Panel User's Manual (125-3020) for more information.

Night Mode Override Switch

If an override switch is present on the room temperature sensor and a value (in hours) other than zero has been entered into OVRD TIME, pressing the override switch will reset the controller to DAY operational mode for the time period that is set in OVRD TIME. The status of NGT OVRD changes to DAY. After the override time elapses, the controller returns to night mode and the status of NGT OVRD changes back to NIGHT. The override switch on the room sensor will only affect the controller when it is in night mode.

Heating/Cooling Switchover

The heating/cooling switchover determines whether the controller is in heating or cooling mode by monitoring the room temperature and the demand for heating and cooling (as determined by the temperature control loops).

If the following conditions are met for the length of time set in SWITCH TIME, the controller switches from heating to cooling mode by setting HEAT.COOL to COOL:

- HTG LOOPOUT < SWITCH LIMIT.
- CTL TEMP > CTL STPT by at least the value set in SWITCH DBAND.
- CTL TEMP > the appropriate (defined in *Control Temperature Setpoints* section) cooling setpoint minus SWITCH DBAND.

If the following conditions are met for the length of time set in SWITCH TIME, the controller switches from cooling to heating mode by setting HEAT.COOL to HEAT:

- CLG LOOPOUT < SWITCH LIMIT.
- CTL TEMP < CTL STPT by at least the value set SWITCH DBAND.
- CTL TEMP < the appropriate (defined in *Control Temperature Setpoints* section) heating setpoint plus SWITCH DBAND.

Modulating Damper During Heating Mode (Optional)



CAUTION

The heating/cooling switchover mechanism is not affected by the air temperature in the supply duct.

To change the value of HEAT.COOL based on the supply air temperature, you must command HEAT.COOL through PPCL. This is required when the flow loop will be used as a source of cooling in cooling mode and a source of heat in heating mode (see Examples 1 through 3 in *Sequencing Logic*). If the flow loop is used in heating mode just to meet minimum air requirements, the heating/cooling switchover mechanism operates as described in this section to control HEAT.COOL (see Example 4 in *Sequencing Logic*).

Control Loops

The controller is controlled by three Proportional, Integral, and Derivative (PID) control loops; two temperature loops and a flow loop.

The two temperature loops are a cooling loop and a heating loop. The active temperature loop maintains room temperature at the value in CTL STPT. See *Control Temperature Setpoints*.

Heating Loop – If the controller is in heating mode, the operation of the flow loop is flexible. It can be set up to do one of the following:

- Option 1: Constantly maintain airflow out of the terminal box equal to CTL FLOW MIN.
- Option 2: Operate in sequence with the reheat.
- Option 3: Operate parallel with the reheat.
- Option 4: Have its operation overlap with the operation of the electric reheat.

If the option 1 is chosen, HTG LOOPOUT will control the electric reheat in order to maintain the room temperature. If option 2, 3, or 4 is chosen, HTG LOOPOUT will control both the flow loop setpoint (FLOW STPT) and the electric reheat in order to maintain the room temperature. See Sequencing Logic [→ 13] for more information.

HTG LOOPOUT will adjust the value of FLOW STPT differently depending on which flow loop setup is chosen. However, the following rule applies no matter what setup is chosen.

In heating mode, FLOW STPT is never set below (CTL FLOW MIN/HTG FLOW MAX) × 100% flow or above 100% flow.

In heating mode, CTL FLOW MIN is equal to HTG FLOW MIN.

Flow Loop – The flow loop maintains FLOW STPT by modulating the supply air damper, DMPR COMD. The flow loop maintains the airflow between CTL FLOW MIN and CTL FLOW MAX.

To enhance stable flow control, an advanced algorithm is used to calculate a controllable setpoint as the value approaches zero cfm (lps).

When the controller is in cooling mode, CTL FLOW MIN = CLG FLOW MIN, and CTL FLOW MAX = CLG FLOW MAX.

When the controller is in heating mode, CTL FLOW MIN = HTG FLOW MIN, and CTL FLOW MAX = HTG FLOW MAX.

Staged Heating Coil - Terminal Unit



⚠ CAUTION

Verify that the equipment is supplied with safeties by others.

Ensure there is airflow across the heating coils when they are to be energized.

The heating loop controls up to three stages of electric reheat to warm up the room. The electric reheat is time modulated using a duty cycle as shown in the Table *Staged Heating*.

When the heating coil is located in the terminal unit, supply airflow is required to allow heat transfer from the coil to the room. EHEAT FLOW provides a means to ensure that there is sufficient airflow present before activating any heating stage.

If the flow setpoints for HTG MIN FLOW and HTG MAX FLOW results in a flow that is less than as set in EHEAT FLOW, the electric stages of heat will not be energized regardless of the heating demand. (for example, If HTG MAX FLOW is 1000 cfm and HTG MIN FLOW is 200 cfm, setting EHEAT FLOW to any percentage less than 20% will prevent activation of any heating stage.)

When the controller is in cooling mode, the electric heat is OFF at all times.

Example

When energized, the heating coils will respond to the heating demand based on the configuration and duty cycle time.

If the duty cycle is 10 minutes (STAGE TIME = 10 minutes), and the heating loop is calling for 60% of heating (HTG LOOPOUT = 60%) for every 10-minute period, the stages of electric auxiliary heat cycle are as follows:

Staged Heating						
	Stage 1: minutes		Stage 2: minutes		Stage 3: minutes	
	ON	OFF	ON	OFF	ON	OFF
With 1 stage of electric heat	6	4	-	-	-	-
With 2 stages of electric heat	10	0	2	8	-	-
With 3 stages of electric heat	10	0	8	2	0	10

AVERAGE HEAT OUT

When the controller is in heating mode, AVG HEAT OUT indicates the percentage of the heating loop that is used for control and cycles the heating stages, independent of the number of stages enabled. The selected range for the heating stages (REHEAT START and REHEAT END) is applied to the HTG LOOPOUT to determine the AVG HEAT OUT.

For example, if REHEAT START = 0, and REHEAT END = 50%, then:

When HTG LOOPOUT = 0%, AVG HEAT OUT = 0%;

HTG LOOPOUT = 25%, AVG HEAT OUT = 50%

HTG LOOPOUT = 50% (or higher), AVG HEAT OUT = 100%

Sequencing Logic



NOTE:

The series fan will provide airflow across the terminal heating coils. In addition, supply air will modulate in the heating mode from HTG FLOW MIN to HTG FLOW MAX only when the setpoints for FLOW START and FLOW END are not equal (for example, 0 and 100 percent).

In heating mode, this application includes logic that allows the flow loop to operate in sequence, parallel, or overlapping with the heating device. Selected portions of the output of the heating loop, HTG LOOPOUT, will drive both the flow loop and the heating from 0 to 100%. See the *Examples* section.

In the DAY mode (occupied), the series terminal fan will run continuously. See FAN OPERATION section for additional sequence operation in the NIGHT mode (unoccupied).

- There is one stage of electric heat (STAGE COUNT = 1).
- The cycle time of the electric heat is 10 minutes (STAGE TIME = 10). (When this is done, FLOW STPT will equal 0 when HTG LOOPOUT = 0).

Example 1 (Airflow Sequenced First)

Assume that your system has electric heat that is to operate in sequence with the flow loop. If:

- FLOW START = 0%
- FLOW END = 50%
- REHEAT START = 50%
- REHEAT END = 100%

then,

- When HTG LOOPOUT = 0%, FLOW STPT will equal 0% flow.
- When HTG LOOPOUT = 25%, FLOW STPT will equal 50% flow.
- When HTG LOOPOUT ≥ 50%, FLOW STPT will equal 100% flow.
- When HTG LOOPOUT ≤ 50%, the electric heat will be off all the time.
- When HTG LOOPOUT = 75%, for every 10-minute period the electric heat will be on for 5 minutes and off for 5 minutes.
- When HTG LOOPOUT = 100%, the electric heat will be on all the time.

Example 2 (Airflow and Heat Sequenced Together)

Assume that your system has electric heat that is to operate in parallel with the flow loop. If:

- FLOW START = 0%
- FLOW END = 100%

- REHEAT START = 0%
- REHEAT END = 100%

then,

- When HTG LOOPOUT = 0%, FLOW STPT will equal 0% flow.
- When HTG LOOPOUT = 50%, FLOW STPT will equal 50% flow.
- When HTG LOOPOUT = 100%, FLOW STPT will equal 100% flow.
- When HTG LOOPOUT = 0%, the electric heat will be off all the time.
- When HTG LOOPOUT = 50%, for every 10-minute period the electric heat will be on for 5 minutes and off for 5 minutes.
- When HTG LOOPOUT = 100%, the electric heat will be on all the time.

Example 3 (Airflow Sequenced First with Overlap for Heating)

Assume that your system has electric heat that is to operate overlapping with the flow loop. If:

- FLOW START = 0%
- FLOW END = 75%
- REHEAT START = 25%
- REHEAT END = 100%

then,

- When HTG LOOPOUT = 0%, FLOW STPT will equal 0% flow.
- When HTG LOOPOUT = 37.5%, FLOW STPT will equal 50% flow.
- When HTG LOOPOUT \geq 75%, FLOW STPT will equal 100% flow.
- When HTG LOOPOUT \leq 25%, the electric heat will be off all the time.
- When HTG LOOPOUT = 62.5%, for every 10-minute period the electric heat will be on for 5 minutes and off for 5 minutes.
- When HTG LOOPOUT = 100%, the electric heat will be on all the time.

Another option that the sequencing logic provides is to have the flow loop provide an airflow equal to HTG FLOW MIN throughout the heating mode with all of the temperature control being done by the electric heat. The airflow minimum will be maintained by setting the FLOW START and FLOW END to a value of 0%, resulting in the corresponding minimum flow throughout the entire heating mode, regardless of the value of HTG LOOPOUT. Example 4 clarifies this:

Example 4 (Airflow Remains Fixed; Heating Modulates)

If the job requirement specifies that the supply airflow in heating will remain fixed, set HTG FLOW MIN = HTG FLOW MAX so that the fixed value in heating is indicated. An alternative setting, would be to set FLOW START = FLOW MIN = 0, which would fix the flow at HTG FLOW MIN.

Assume that your system has electric heat that provides the temperature control in the heating mode, while the flow loop provides for the minimum air requirements.

- HTG FLOW MIN = 170 cfm
- HTG FLOW MAX = 1000 cfm
- STAGE COUNT = 1
- STAGE TIME = 10 minutes

If:

- FLOW START=0%
- FLOW END=0% (or/and HTG FLOW MIN = HTG FLOW MAX)
- REHEAT START = 0%
- REHEAT END = 100%

then,

- When HTG LOOPOUT = 0%, FLOW STPT will equal $(170 \text{ cfm}/1000 \text{ cfm}) \times 100\%$ flow = 17% flow. This will cause the flow loop to maintain an airflow of 170 cfm out of the terminal box.
- When HTG LOOPOUT = 50%, FLOW STPT will equal 17% flow.
- When HTG LOOPOUT = 100%, FLOW STPT will equal 17% flow.
- When HTG LOOPOUT = 0%, the electric heat will be off all the time.
- When HTG LOOPOUT = 50%, for every 10-minute period the electric heat will be on for 5 minutes and off for 5 minutes.
- When HTG LOOPOUT = 100%, the electric heat will be on all the time.

Calibration

Calibration of the controller's internal air velocity sensor(s) is periodically required to maintain accurate air velocity readings. CAL SETUP is set with the desired calibration option during controller startup.

Depending on the value of CAL SETUP, calibration may be set to take place automatically or manually. If CAL AIR = YES, calibration is in progress.

At the end of a calibration sequence, CAL AIR automatically returns to NO. A status of NO indicates that the controller is not in a calibration sequence.

Floating Control Actuation Auto-correct

In addition to the existing options for floating control actuator full stroke actions, all floating control actuators are provided with additional logic to fully drive open or closed when commanded to 100% or 0%.

Series Fan Operation



⚠ CAUTION

On series fan powered terminal boxes, the terminal box fan must be controlled/interlocked to start either before or at the same time as the central air handler.

Failure to do so may cause the terminal box fan to rotate backwards and cause consequent damage at start up.

Day Mode – FAN is ON all of the time.

Night Mode – The fan is controlled as follows:

The fan will turn ON when at least one of the following conditions has been met:

- The first stage of electric heat, HEAT STAGE 1, turns ON.

- The airflow out of the supply duct, FLOW, is greater than the value stored in SERIES ON. This ensures that the series fan is on when supply air is provided, independent of the heating demand.

The fan will turn OFF only when the following two conditions have been met:

- The first stage of electric heat is OFF for at least one full duty cycle. (HEAT STAGE 1 is OFF longer than STAGE TIME.)
- The airflow out of the supply duct, FLOW, is less than the value stored in SERIES OFF.

AI 4/AI 5 OFFSET (Optional)

AI 4 OFFSET works like RMTMP OFFSET. It can be used to calibrate AI 4 aux temp sensor input if necessary. The actual temperature plus AI 4 OFFSET will equal AI 4 display temperature.

AI 5 OFFSET works the same as AI 4 OFFSET.

Room Unit Operation

Stat Supervision

STAT SUPV is a configurable, enumerated point (values are additive). This point tells the controller how to handle loss of data when used with a digital room unit.

Room Temperature

- When the digital room unit (Series 2200/2300) is used, STAT SUPV enables loss of communication indication:
 - Temperature sensing with a value of 1.
 - Relative humidity sensing with a value of 2.
 - CO2 sensing with a value of 4.
- Communication for Series 2200 sensor baud rate must be set to 1200.
- When the analog room unit (Series 1000/2000) is used, default temperature sensing (0) is enabled (relative humidity and CO2 sensing are not available and should not be selected).

Other Inputs (only available on Digital Room Unit)

- Use the following table to enable communications supervision of room temperature, relative humidity or CO2 for additive values of 2 or 4.

STAT SUPV Value * (additive)	Description (include values to enable feature)
1	Room temperature sensing
2	Relative Humidity (RH) sensing
4	CO ₂ sensing

**⚠ CAUTION**

Digital Room Units that have the RH and/or the CO2 feature will always update the present value and put the associated points (RM TEMP, RM RH, and RM CO2) in override mode, preventing external (or PPCL) commands from being used. STAT SUPV is only provided to allow these points to report a FAIL mode when the room unit fails to update these points.

If an alternative source is selected you must insure that the room unit is not provided with the same sensor option.

See *Sensors and Transducers Configuration and Sizing* for part numbers and ordering information.

Room CO2

RM CO2 displays the CO₂ value in units of parts-per-million (PPM). RM CO2 can be used with PPCL in the PTEC controller or unbundled for control or monitoring purposes.

Room RH

RM RH displays the relative humidity value in percent. RM RH can be used for PPCL in the PTEC or unbundled for control or monitoring purposes.

Fail Mode Operation

If the air velocity sensor fails, the controller uses pressure dependent control. The temperature loop controls the operation of the damper.

If the room temperature sensor fails, the controller operates using the last known temperature value.

Application Notes

- If temperature swings in the room are excessive or there is trouble maintaining the setpoint, the cooling loop needs to be tuned. If FLOW is oscillating while FLOW STPT is constant, the flow loop requires tuning.
- The controller, as shipped from the factory, keeps all associated equipment OFF. See the appropriate *Start-up Procedures* for information on how to release the controller and its equipment to application control.
- Spare DOs can be used as auxiliary points that are controlled by the field panel after being defined in the field panel's database.


Wiring Diagram



CAUTION

The controller's DOs control 24 Vac loads only. The maximum rating is 12 VA for each DO. An external interposing relay is required for any of the following:

- VA requirements higher than the maximum
- 110 or 220 Vac requirements
- DC power requirements
- Separate transformers used to power the load
(for example part number 540-147, Terminal Equipment Controller Relay Module)

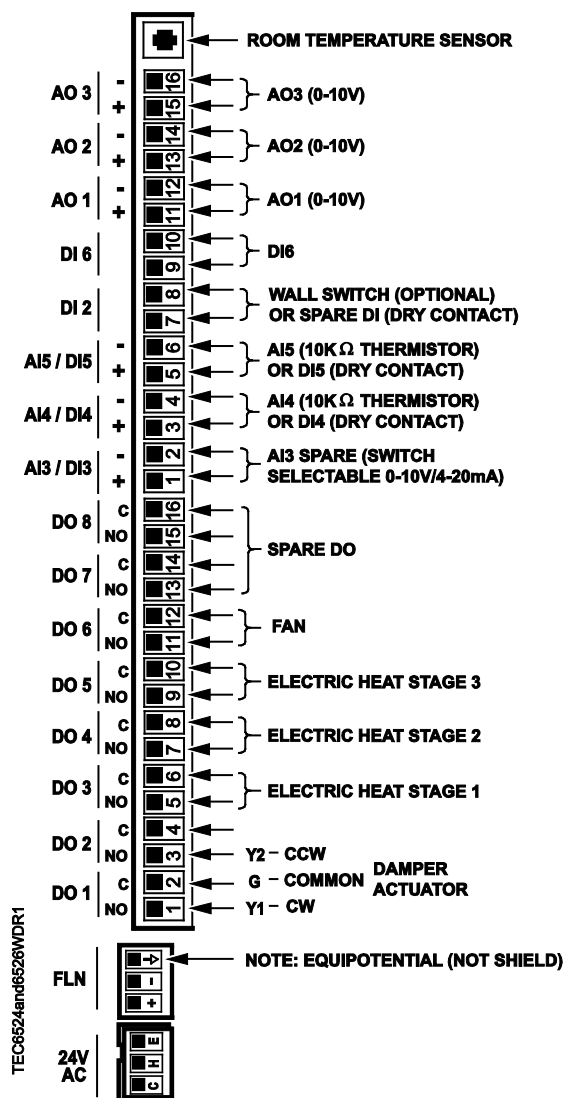

Application 6524 and Application 6526 – Variable Air Volume with Series or Parallel Fan and 3-Stage Electric Heat.

Application 6524 Point Database

Object Type ^{a)}	Object Instance (Point Number)	Object Name (Descriptor)	Factory Default (SI Units) ^{b)}	Eng Units (SI Units)	Range	Active Text	Inactive Text
AO	1	CTLR ADDRESS	99	--	0-255	--	--
AO	2	APPLICATION	6587	--	0-32767	--	--
AO	3	RMTMP OFFSET	0.0 (0.0)	DEG F (DEG C)	-63.75	--	--
AI	{04}	ROOM TEMP	74.0 (23.44888)	DEG F (DEG C)	48-111.75	--	--
BO	{05}	HEAT.COOL	COOL	--	Binary	HEAT	COOL
AO	6	DAY CLG STPT	74.0 (23.44888)	DEG F (DEG C)	48-111.75	--	--
AO	7	DAY HTG STPT	70.0 (21.20888)	DEG F (DEG C)	48-111.75	--	--
AO	8	NGT CLG STPT	82.0 (27.92888)	DEG F (DEG C)	48-111.75	--	--
AO	9	NGT HTG STPT	65.0 (18.40888)	DEG F (DEG C)	48-111.75	--	--
BI	{10}	DI 6	OFF	--	Binary	ON	OFF
AO	11	RM STPT MIN	55.0 (12.80888)	DEG F (DEG C)	48-111.75	--	--
AO	12	RM STPT MAX	90.0 (32.40888)	DEG F (DEG C)	48-111.75	--	--
AI	{13}	RM STPT DIAL	74.0 (23.44888)	DEG F (DEG C)	48-111.75	--	--
BO	14	STPT DIAL	NO	--	Binary	YES	NO
AI	{15}	AUX TEMP AI5	74.0 (23.495556)	DEG F (DEG C)	37.5-165	--	--
AO	16	FLOW START	0	PCT	0-102	--	--
AO	17	FLOW END	0	PCT	0-102	--	--
BO	18	WALL SWITCH	NO	--	Binary	YES	NO
BI	{19}	DI OVRD SW	OFF	--	Binary	ON	OFF
AO	20	OVRD TIME	0	HRS	0-255	--	--
BO	{21}	NGT OVRD	NIGHT	--	Binary	NIGHT	DAY
AO	22	REHEAT START	0	PCT	0-102	--	--
AO	23	REHEAT END	100	PCT	0-102	--	--
BI	{24}	DI 2	OFF	--	Binary	ON	OFF
BI	{25}	DI 5	OFF	--	Binary	ON	OFF
AO	26	SERIES ON	20	PCT	0-102	--	--
AO	27	SERIES OFF	10	PCT	0-102	--	--

Object Type ^{a)}	Object Instance (Point Number)	Object Name (Descriptor)	Factory Default (SI Units) ^{b)}	Eng Units (SI Units)	Range	Active Text	Inactive Text
AO	28	PARALLEL ON	20	PCT	0-102	--	--
BO	{29}	DAY.NGT	DAY	--	Binary	NIGHT	DAY
AO	30	PARALLEL OFF	30	PCT	0-102	--	--
AO	31	CLG FLOW MIN	220 (103.818)	CFM (LPS)	0-131068	--	--
AO	32	CLG FLOW MAX	2200 (1038.18)	CFM (LPS)	0-131068	--	--
AO	33	HTG FLOW MIN	220 (103.818)	CFM (LPS)	0-131068	--	--
AO	34	HTG FLOW MAX	2200 (1038.18)	CFM (LPS)	0-131068	--	--
AI	{35}	AIR VOLUME	0 (0.0)	CFM (LPS)	0-131068	--	--
AO	36	FLOW COEFF	1	--	0-2.55	--	--
BI	{40}	DI 4	OFF	--	Binary	ON	OFF
BO	{41}	DO 1	OFF	--	Binary	ON	OFF
BO	{42}	DO 2	OFF	--	Binary	ON	OFF
BO	{43}	HEAT STAGE 1	OFF	--	Binary	ON	OFF
BO	{44}	HEAT STAGE 2	OFF	--	Binary	ON	OFF
BO	{45}	HEAT STAGE 3	OFF	--	Binary	ON	OFF
BO	{46}	FAN	OFF	--	Binary	ON	OFF
BI	{47}	DI 3	OFF	--	Binary	ON	OFF
AO	{48}	DMPR COMD	0	PCT	0-102	--	--
AO	{49}	DMPR POS	0	PCT	0-102	--	--
AI	{50}	AI 4	74.0 (23.495556)	DEG F (DEG C)	37.5-165	--	--
AO	51	MTR1 TIMING	95	SEC	0-511	--	--
AI	{54}	AI3	0	PCT	0-102	--	--
AO	56	DMPR ROT ANG	90	--	0-255	--	--
AO	58	MTR SETUP	0	--	0-255	--	--
AO	59	DO DIR. REV	0	--	0-255	--	--
AO	63	CLG P GAIN	20.0 (36.0)	--	0-63.75	--	--
AO	64	CLG I GAIN	0.01 (0.018)	--	0-1.023	--	--
AO	65	CLG D GAIN	0 (0.0)	--	0-510	--	--
AO	{66}	AOV 1	0	VOLTS	0-10.23	--	--
AO	67	HTG P GAIN	10.0 (18.0)	--	0-63.75	--	--
AO	68	HTG I GAIN	0.01 (0.018)	--	0-1.023	--	--
AO	69	HTG D GAIN	0 (0.0)	--	0-510	--	--
AO	{70}	AOV 2	0	VOLTS	0-10.23	--	--

Object Type ^{a)}	Object Instance (Point Number)	Object Name (Descriptor)	Factory Default (SI Units) ^{b)}	Eng Units (SI Units)	Range	Active Text	Inactive Text
AO	71	FLOW P GAIN	0	--	0-51.15	--	--
AO	72	FLOW I GAIN	0.01	--	0-1.023	--	--
AO	73	FLOW D GAIN	0	--	0-510	--	--
AO	74	FLOW BIAS	50	PCT	0-102	--	--
AO	{75}	FLOW	0	PCT	0-1023.75	--	--
AO	{76}	CTL FLOW MIN	220 (103.818)	CFM (LPS)	0-131068	--	--
AO	{77}	CTL FLOW MAX	2200 (1038.18)	CFM (LPS)	0-131068	--	--
AO	{78}	CTL TEMP	74.0 (23.44888)	DEG F (DEG C)	48-111.75	--	--
AO	{79}	CLG LOOPOUT	0	PCT	0-102	--	--
AO	{80}	HTG LOOPOUT	0	PCT	0-102	--	--
AO	{81}	AVG HEAT OUT	0	PCT	0-409.2	--	--
AO	82	STAGE MAX	90	PCT	0-102	--	--
AO	83	STAGE MIN	10	PCT	0-102	--	--
AO	85	SWITCH LIMIT	5.2	PCT	0-102	--	--
AO	86	SWITCH TIME	10	MIN	0-255	--	--
AO	88	STAGE COUNT	1	--	0-255	--	--
AO	89	STAGE TIME	10	MIN	0-255	--	--
AO	90	SWITCH DBAND	1.0 (0.56)	DEG F (DEG C)	0-63.75	--	--
AO	{91}	AOV 3	0	VOLTS	0-10.23	--	--
AO	{92}	CTL STPT	74.0 (23.44888)	DEG F (DEG C)	48-111.75	--	--
AO	{93}	FLOW STPT	0	PCT	0-255.75	--	--
BO	{94}	CAL AIR	NO	--	Binary	YES	NO
AO	95	CAL SETUP	4	--	0-255	--	--
AO	96	CAL TIMER	12	HRS	0-255	--	--
AO	97	DUCT AREA	1.0 (0.09292)	SQ. FT (SQ M)	0-6.375	--	--
AO	98	LOOP TIME	5	SEC	0-255	--	--
AO	{99}	ERROR STATUS	0	--	0-255	--	--
BO	{102}	DO 7	OFF	--	Binary	ON	OFF
BO	{103}	DO 8	OFF	--	Binary	ON	OFF
AO	122	AI 4 OFFSET	0.0 (0.0)	DEG F (DEG C)	-63.75	--	--
AO	123	AI 5 OFFSET	0.0 (0.0)	DEG F (DEG C)	-63.75	--	--

Object Type ^{a)}	Object Instance (Point Number)	Object Name (Descriptor)	Factory Default (SI Units) ^{b)}	Eng Units (SI Units)	Range	Active Text	Inactive Text
AO	124	STAT SUPV	0	--	0-255	--	--
AI	{125}	RM CO2	1000	PPM	0-8191	--	--
AI	{126}	RM RH	50	PCT	0-102	--	--
BO	{127}	PPCL STATE	EMPTY	--	Binary	LOADED	EMPTY

- 1) Object Types are; Analog Input (AI), Analog Output (AO), Binary Input (BI) and Binary Output (BO).
- 2) A single value in a column means that the value is the same in English units and in SI units.
- 3) Point numbers that appear in brackets { } may be unbundled at the field panel.

Issued by
Siemens Industry, Inc.
Building Technologies Division
1000 Deerfield Pkwy
Buffalo Grove IL 60089
Tel. +1 847-215-1000

© 2014 Copyright Siemens Industry, Inc.
Technical specifications and availability subject to change without notice.